




1. Remove and recycle temporary cover and screws.

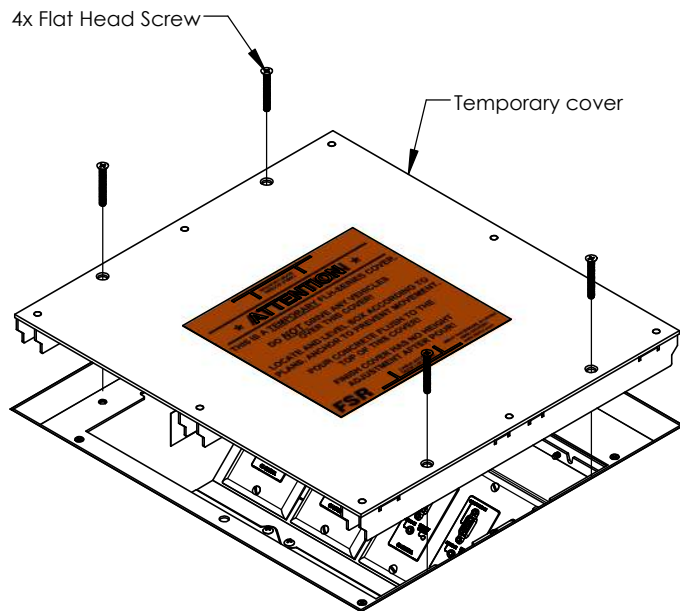


2. For FLH6-SSQ only. Place shims onto floor box rim as shown.

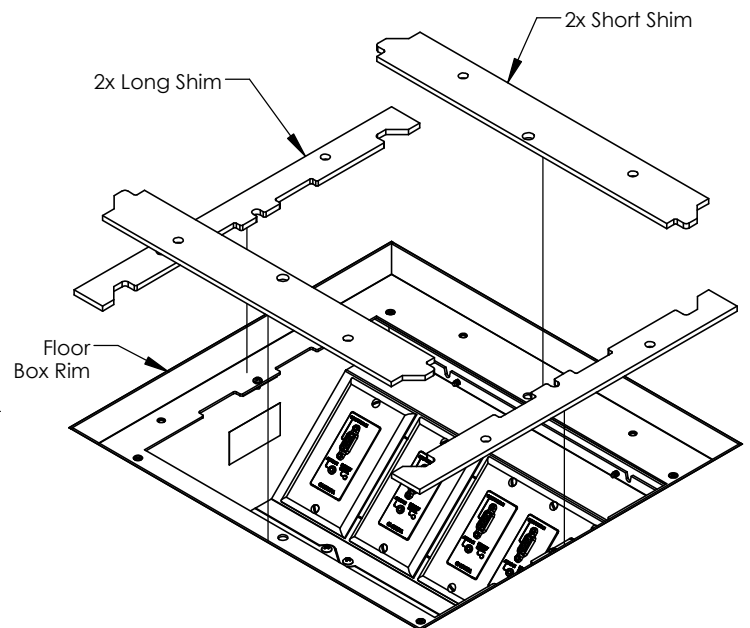

3. Clean area in and around inside corner of floor box rim and apply 1/4" continuous bead of RTV silicone sealant.

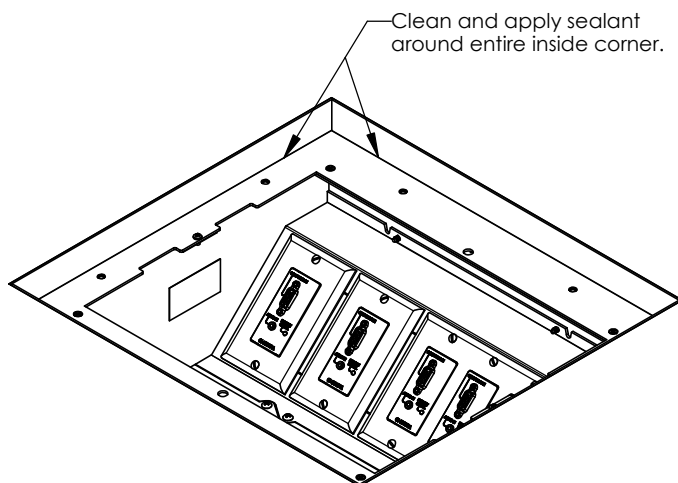


Floor Box Rim Without Shims

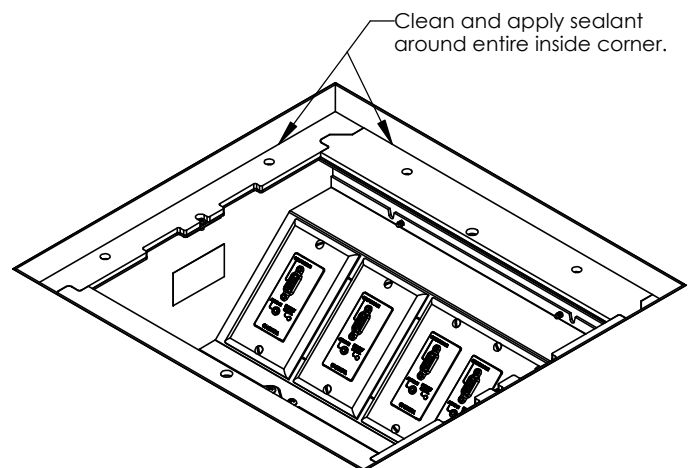

Floor Box Rim With Shims

4. Check plans for door swing direction and place cover assembly onto floor box rim. Open door with handle and secure cover to box with supplied screws.

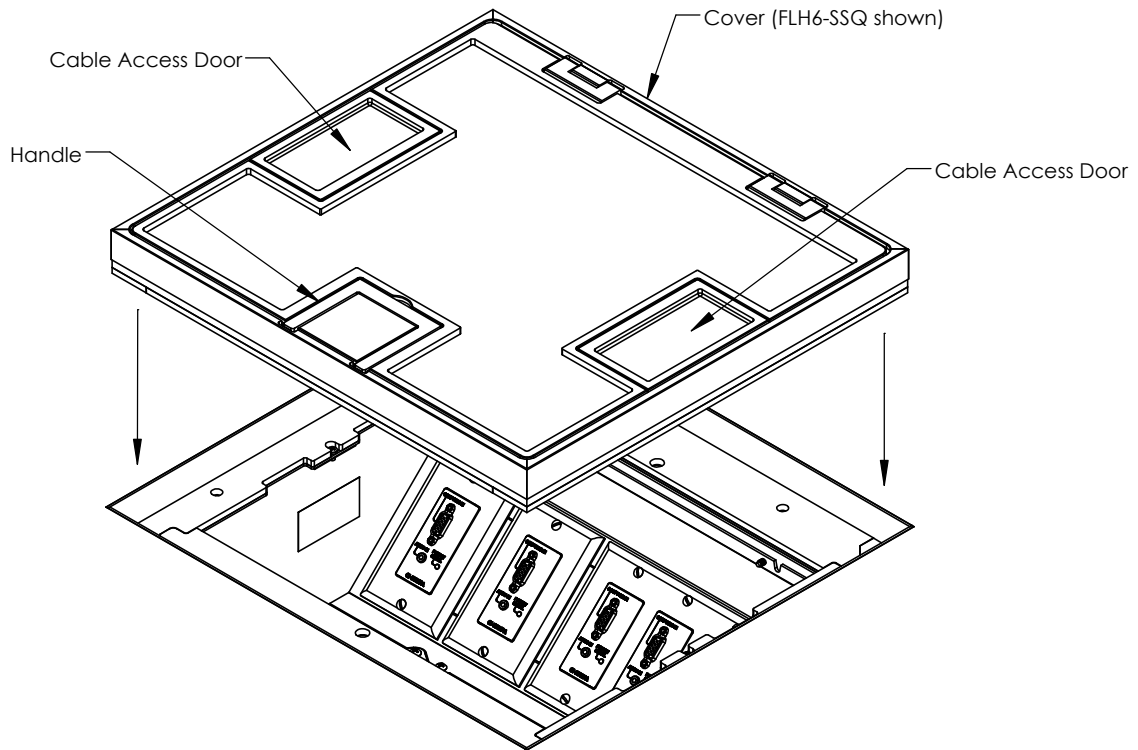

8x Supplied Screws
FLH6-SLD: #10-32 x 1/2 Long Screw
FLH6-SSQ: #10-32 x 3/4 Long Screw

