

# Warning!

The Installer must test the pinout of all CAT-5 cables with a standard network cable tester before connecting them to the system. Use the EIA / TIA 568B wiring standard only. Do not use a cross-over type cable. A mis-wired cable could destroy the unit and void the warranty.

---

# Warning!

The Installer must test the pinout of all CAT-5 cables with a standard network cable tester before connecting them to the system. Use the EIA / TIA 568B wiring standard only. Do not use a cross-over type cable. A mis-wired cable could destroy the unit and void the warranty.

---

# Warning!

The Installer must test the pinout of all CAT-5 cables with a standard network cable tester before connecting them to the system. Use the EIA / TIA 568B wiring standard only. Do not use a cross-over type cable. A mis-wired cable could destroy the unit and void the warranty.