



# Schematic

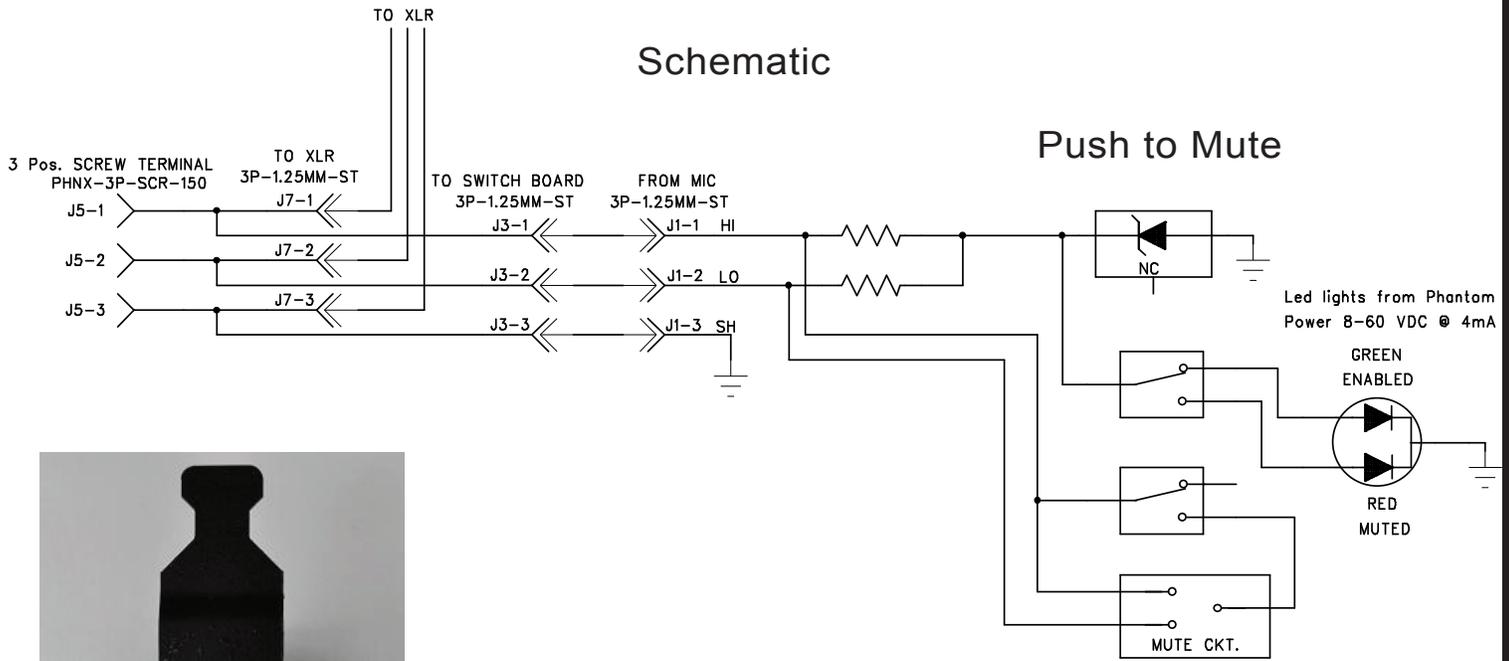

# Push to Mute




Insert wire harness into this hole.

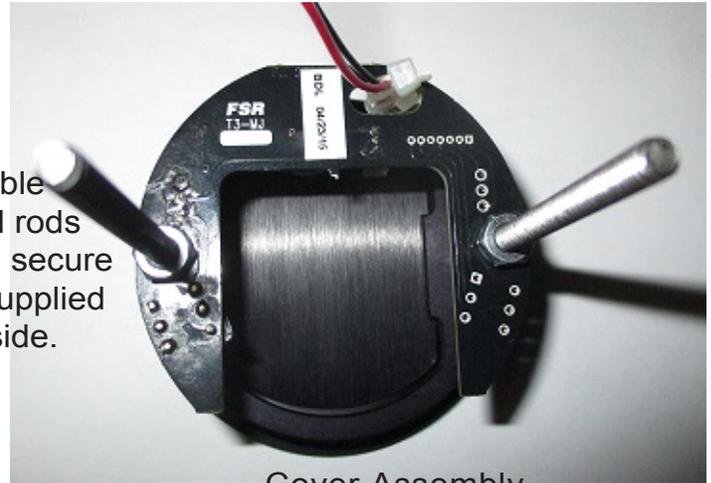

Cover Assembly

Install cover in the table by inserting threaded rods into these holes, and secure into place by using supplied nylon nuts on other side.

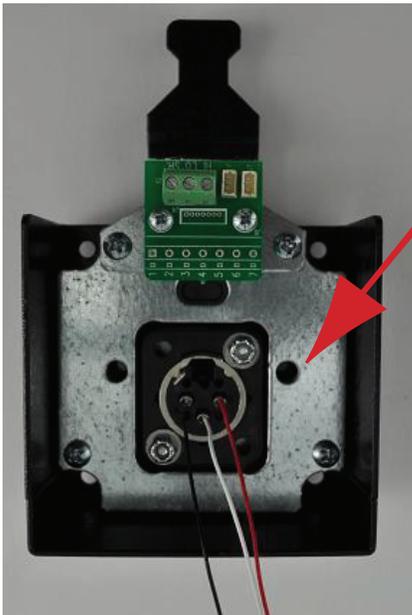

Connect the wire harnesses to these headers as shown.



TO SWITCH BOARD

# FSR

244 BERGEN BLVD.  
W. PATERSON, NJ 07424  
TEL. (973) 785-4347

## T3-MJ-1B WITH MUTE

PRODUCT:	T3-MJ-1B	PART#	17238-43
DRAWN BY:	AB	DATE:	10-27-2011
APPROVED BY:		DATE:	
DWG.#	C-1156A	REV.	PAGE OF

REV. LEVEL	REF. ECO	REV. DATE	APPROVED	DESCRIPTION