


1. INSTALL BOX CHASSIS TO RACEWAY BASE. END KIT & RACEWAY BASE EDGE MUST BE INSTALLED FIRST IF MOUNTING BOX ON RACEWAY BASE END.
2. MAKE WIRING CONNECTIONS AS REQUIRED, AND ROUTE WIRES/CABLES AS REQUIRED.
3. INSTALL COVER WITH SUPPLIED SCREWS.

Classification; CTS/DTS 3.102 Flushfloor, 3.103 Onfloor, 6.101.1 Dry-Treatment Only, 6.2.6 10J Impact, 6.102.3 1,000 N Small Surface Load, 6.4.1 Non-Flame Propagating IP41; Min Storage Temp - 25°C; Installation and Application Temp - 15°C to 60°C

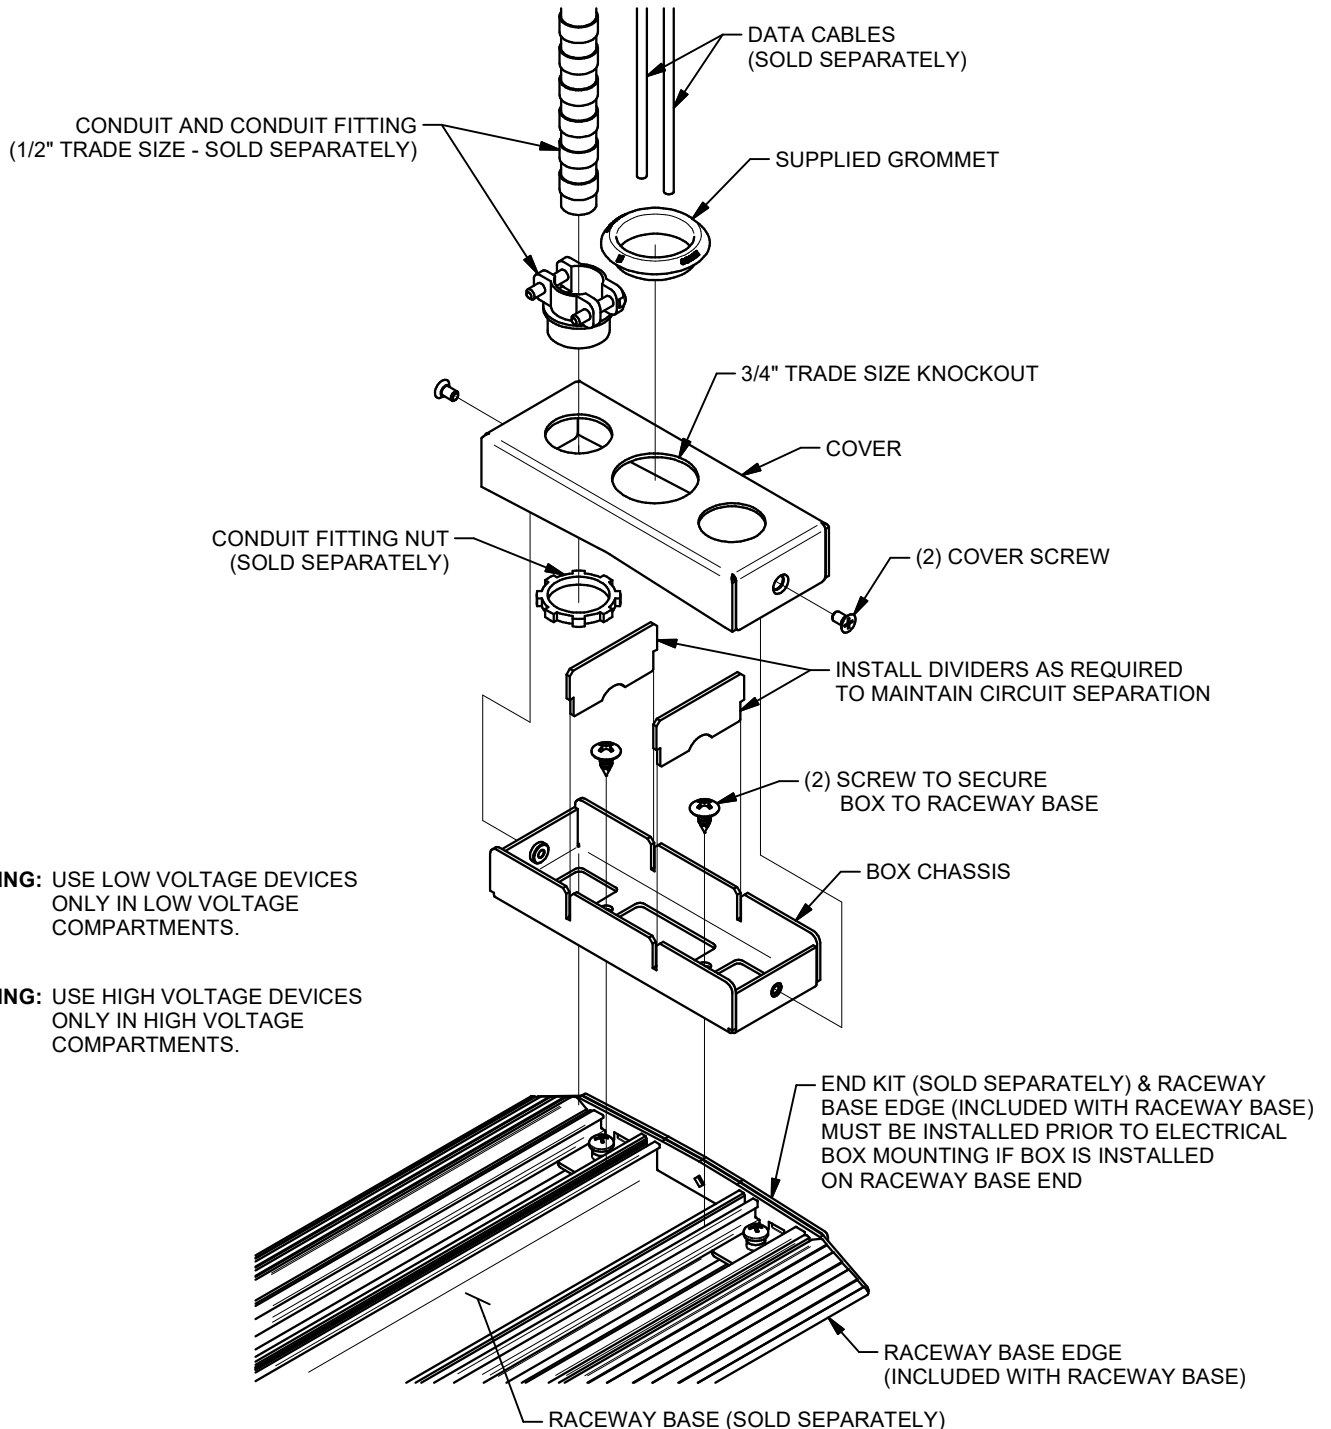

⚠ WARNING: USE LOW VOLTAGE DEVICES ONLY IN LOW VOLTAGE COMPARTMENTS.

⚠ WARNING: USE HIGH VOLTAGE DEVICES ONLY IN HIGH VOLTAGE COMPARTMENTS.