



2. INSTALL BRACKETS INTO CEILING BOX (SOLD SEPARATELY). CEILING BOX SHELVES WILL HAVE TO BE REMOVED FOR INSTALLATION OF BRACKETS (SEE BRACKET DETAIL AND TOP VIEW). INSERT PINS INTO BRACKETS UNTIL FLUSH WITH CEILING BOX EXTERIOR WALL (SEE PIN DETAIL).

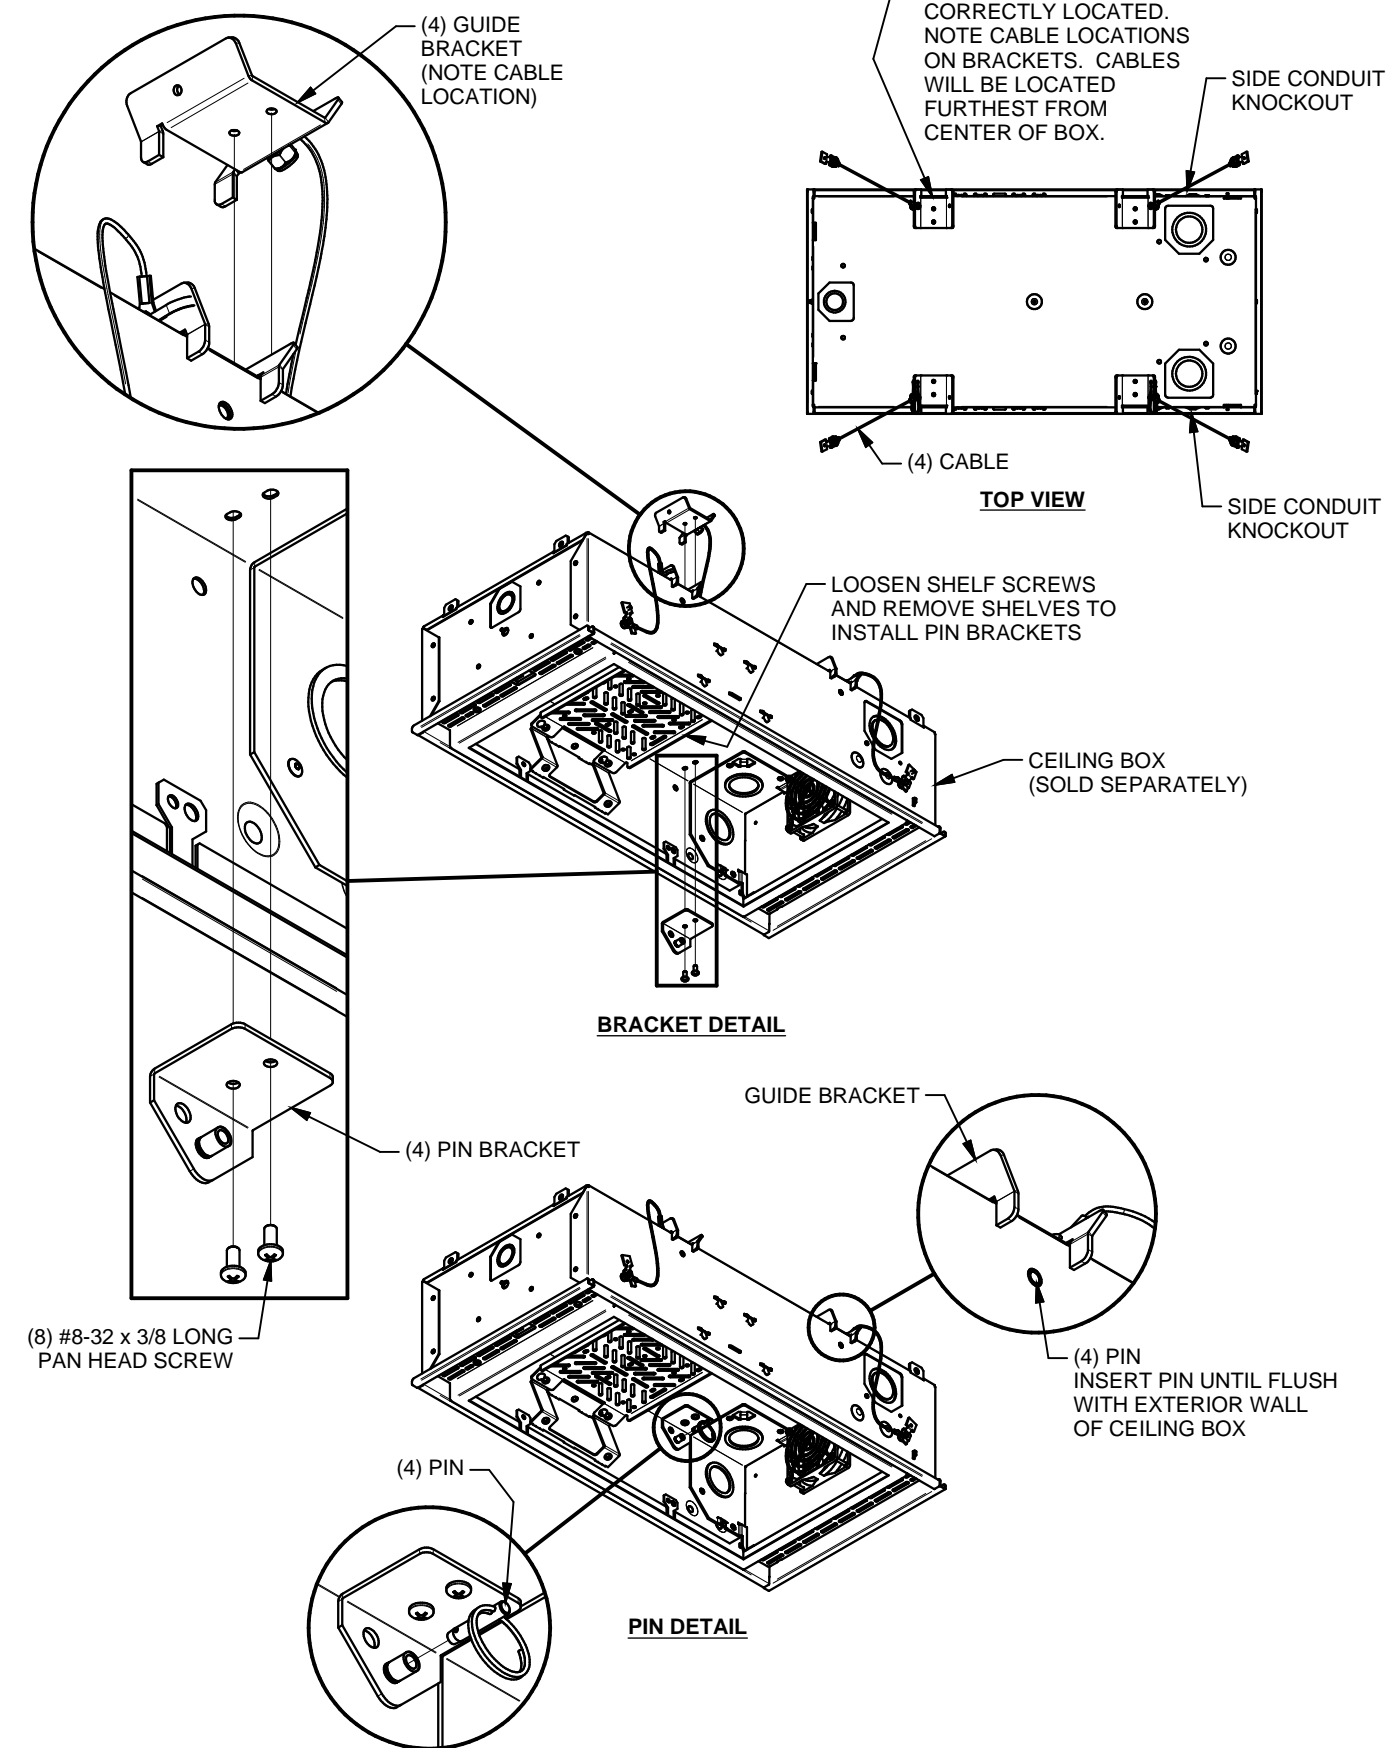

3. ALIGN THE CEILING BOX, WITH ITS NEW BRACKETS, WITH THE CAPTURE BRACKETS INSIDE FRAME. ATTACH 2 CABLES FROM CEILING BOX (NEAREST THE BOX'S KO'S) TO FRAME AND ROUTE WIRING INTO CEILING BOX.

NOTE: ALL ELECTRICAL WIRES MUST DRAPE OVER THE TOP EDGE OF THE CEILING BOX FRAME, NOT THRU THE SIDE OPENINGS. ONLY THE TOP-SURFACE KO'S OF THE CEILING BOX MAY BE USED FOR THE WIRING.

CABLE INSTALLATION

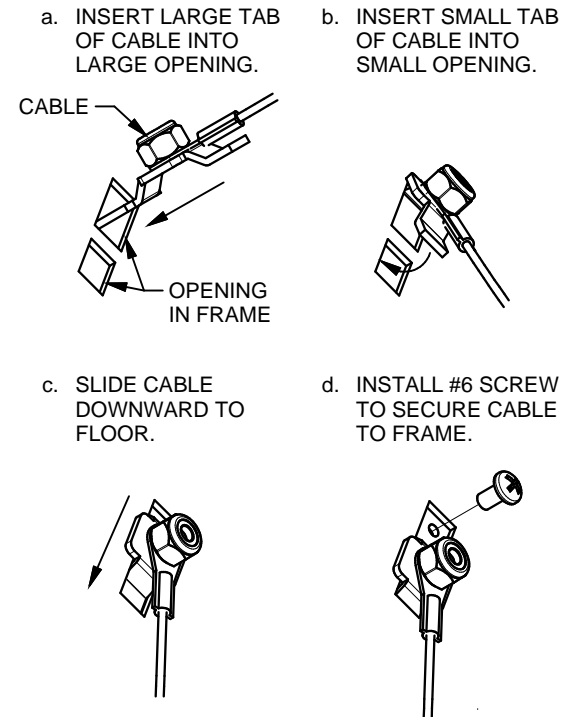

4. AFTER ALL WIRING IS ROUTED TO CEILING BOX, ATTACH REMAINING CABLES TO FRAME.

