
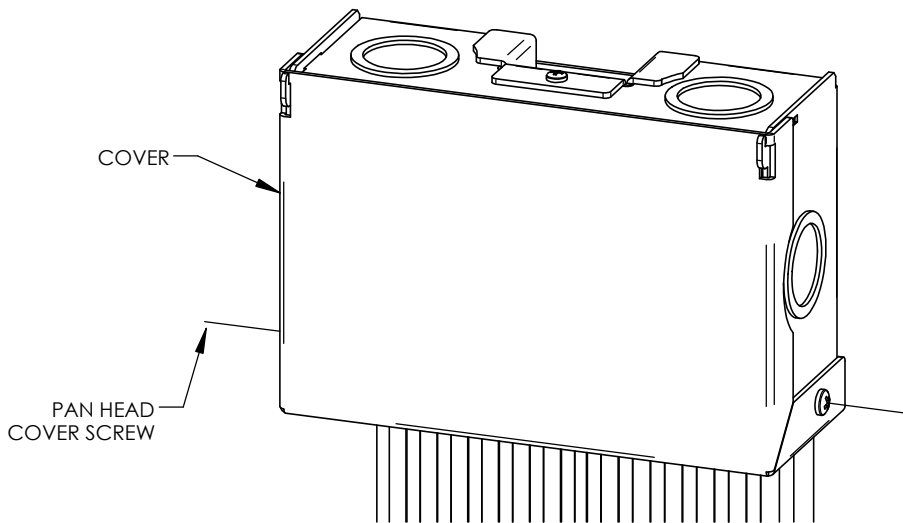


FSR SW-WT-FC Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - FAX 973.785.4207

NOTICE: FOR INSTALLATION BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES AND COMMUNICATIONS STANDARDS. ADHERE TO THE FOLLOWING INSTRUCTIONS AND ANY INSTRUCTIONS INCLUDED WITH THE INDIVIDUAL COMPONENTS.

1. LAYOUT SMART-WAY SYSTEM AND DETERMINE BOX LOCATION.
2. SECURE BOX TO WALL AND RACEWAY BASE WITH SUPPLIED HARDWARE.
3. MAKE REQUIRED ELECTRICAL CONDUIT CONNECTIONS.
4. IF WIRING IS TO BE INSTALLED, PULL AND RUN WIRING THRU BOX AND RACEWAY BASE. SIDE CHANNELS IS RESERVED FOR HI-VOLTAGE WIRING, CENTER CHANNEL IS RESERVED FOR LOW-VOLTAGE WIRING.
5. INSTALL FLOOR/WALL MOUNTED RACEWAY COVER.
6. INSTALL COVER WITH SUPPLIED HARDWARE. **CAUTION:** ENSURE EDGE OF RACEWAY COVER IS DEBURRED.

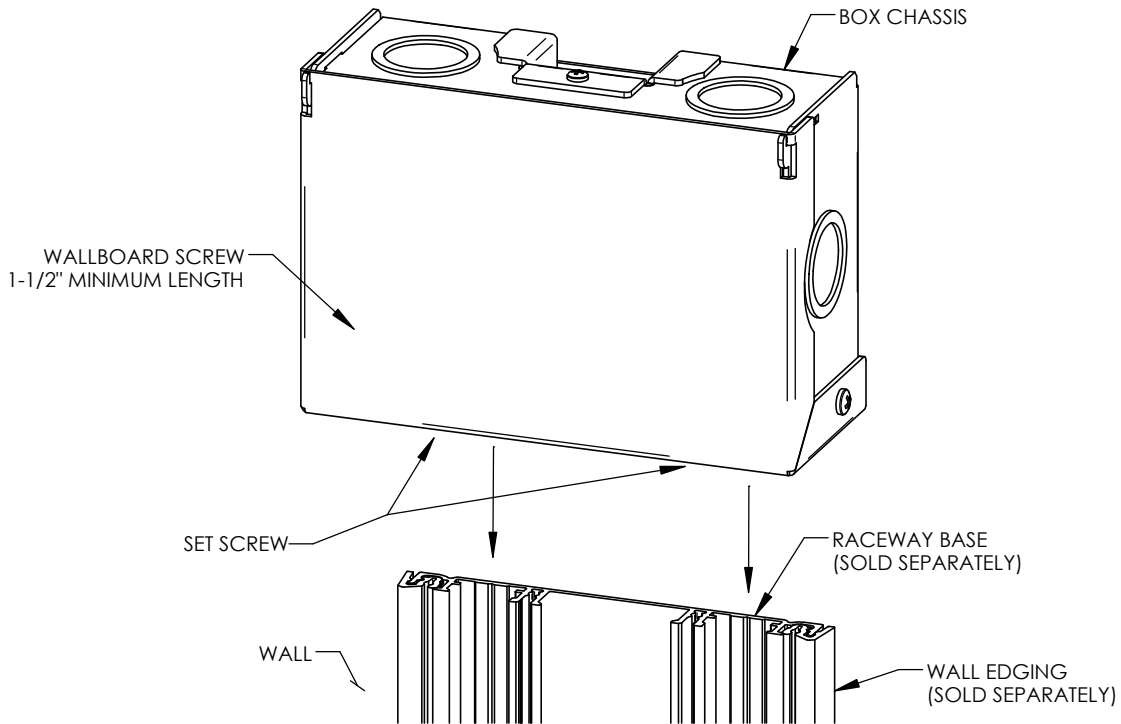

SECURE COVER WITH SUPPLIED HARDWARE