
#### **GANG DIVIDER ASSEMBLY**


DIVIDER HOLDER **MUST** BE ORIENTED AS SHOWN WHEN ATTACHING TO DIVIDERS, IN ORDER TO PROPERLY ASSEMBLE BOX INTERIOR.

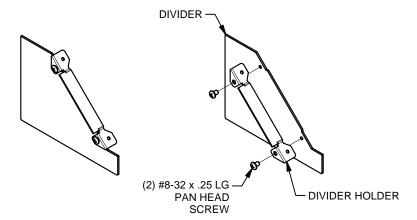


**GANG PLATE ASSEMBLY** 

#### \* DIV DER ASSEMBLY FOR 6" BOXES

POSITION DIVIDER ASSEMBLY IN BOX BEFORE INSTALLING GANG PLATE ASSEMBLY. SECURE DIVIDER ASSEMBLY TO GANG PLATE ASSEMBLY WITH SCREWS AS NOTED.

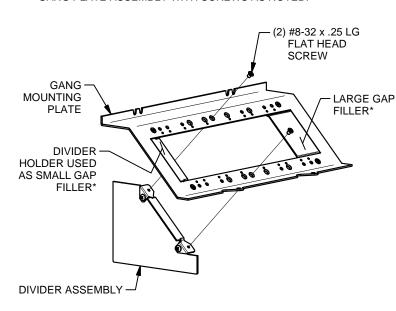


\* GAP FILLERS ARE OPTIONAL, PER DESIRED CONFIGURATION (SEE PREVIOUS PAGE). AND ARE INSTALLED SIMILARLY TO DIVIDER ASSEMBLIES

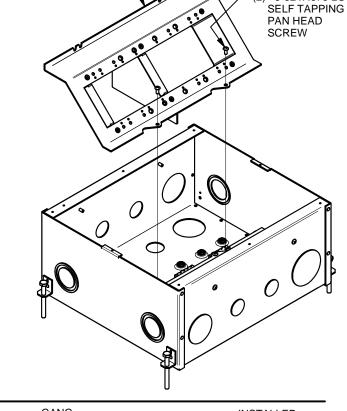

8-32 x .375 LG

# **INSTALLING ELECTRONIC COMPONENTS**

PULL WIRES AND CABLES TO BOX AS NECCESSARY (REMOVAL OF GANG MOUNTING BRACKETS MAY BE REQUIRED). TERMINATE WIRES AND CABLES TO ELECTRONIC COMPONENTS, AND INSTALL ELECTRONIC COMPONENTS ONTO GANG MOUNTING BRACKETS. REINSTALL TEMPORARY COVER IF FINISHED COVER IS TO BE INSTALLED AT A LATER DATE.

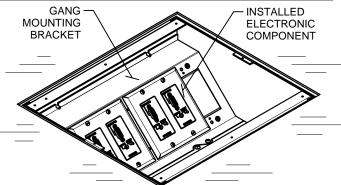

# FLH6-7-B Floor Box Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207


#### **BOX INSTALLATION - STEP 1**


LOCATE AND POSITION BOX IN ACCORDANCE WITH FLOOR PLANS. TOP SURFACE OF TEMPORARY COVER MUST BE SET TO MATCH THE HEIGHT OF THE FINISHED FLOOR - ie STONE, WOOD OR CONCRETE - SEE TYPICAL INSTALLATION HEIGHTS. LEVEL AND ANCHOR BOX AS REQUIRED. USE SCREWS, NAILS, OR WIRE TO PREVENT BOX FROM FLOATING DURING POUR. REMOVE AND RETAIN TEMPORARY COVER AND SCREWS. ROUTE CONDUITS TO BOX AS REQUIRED. GANG BRACKET SCREWS MUST BE IN PLACE AND BOTTOMED TO ENSURE SCREW VOIDS AFTER POUR. PLACE THIS INSTALLATION GUIDE BACK INTO BOX, ALONG WITH ALL

SUPPLIED ITEMS, AND REINSTALL TEMPORARY COVER.

# **BOX INSTALLATION - STEP 2**

SCREED TO TOP OF BOX SURFACE FOR 3/16" THICK CARPET/FLOORING OR SPECIFIC HEIGHT TO ALLOW FOR THICKER FINISHED FLOOR MATERIAL. HAND TROWELING RECOMMENDED NEAR BOX EDGES. BOX HAS NO HEIGHT ADJUSTMENT AFTER CONCRETE POUR.

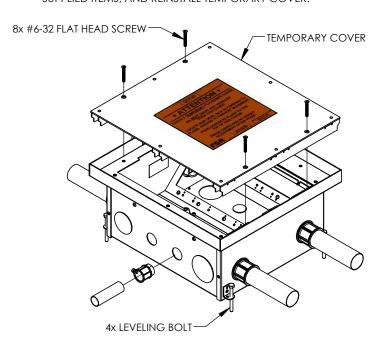

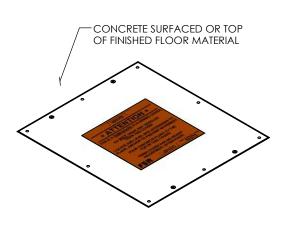


#### **TYPICAL INSTALLATION:**

# **CARPET OVER CONCRETE** -CARPET TEMPORARY COVER SCREED FLUSH CONCRETE CONCRET FLOOR BOX & RIM -FLOOR BOX & RIM **CONCRETE** FINISH COVER SCREED FLUSH TEMPORARY COVER CONCRETE CONCRETE FLOOR BOX & RIM FLOOR BOX & RIM

43471 LIT1892


## **CENTER DIVIDER CONFIGURATION**

SET ASIDE TEMPORARY COVER AND SCREWS FOR POSSIBLE RE-INSTALLATION AND RETAIN GANG MOUNTING BRACKETS AND SCREWS TO CONFIGURE CENTER DIVIDERS.

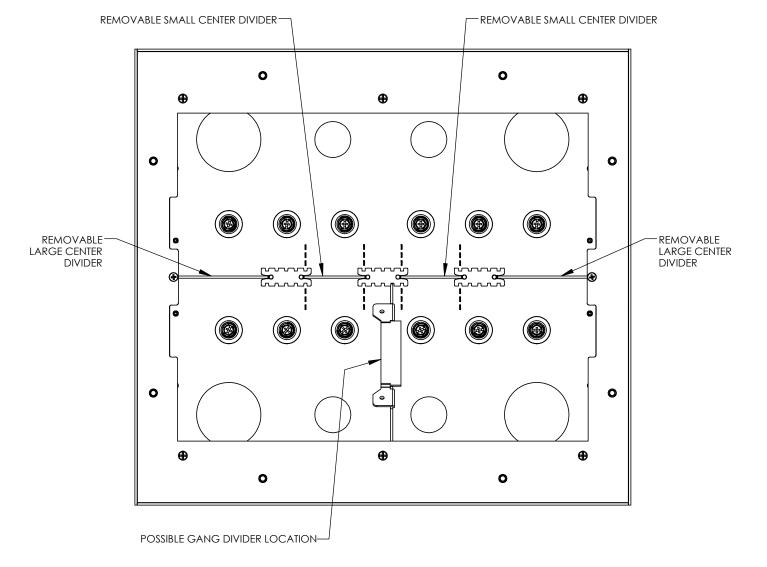

## **GANG MOUNTING BRACKET CONFIGURATION**

PER CUSTOMER SPECIFICATIONS, CONFIGURE GANG MOUNTING BRACKETS AS SHOWN BELOW AND REASSEMBLE INTO BOX.

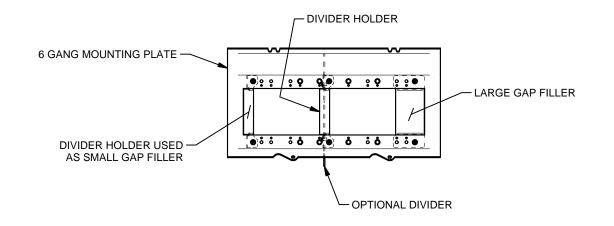

#### "6 GANG SIDE" MOUNTING BRACKET CONFIGURATIONS

