


FSR PWB-320-CHD / PWB-320XL-CHD Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207

Installation Notes:

1. Install 6x #6-32 screw as shown. Leave 1/8" gap between box and screw head.
2. Place cover on box with hinge on desired side.
3. With door open tighten the 6 screws.

PWB-320-CHD

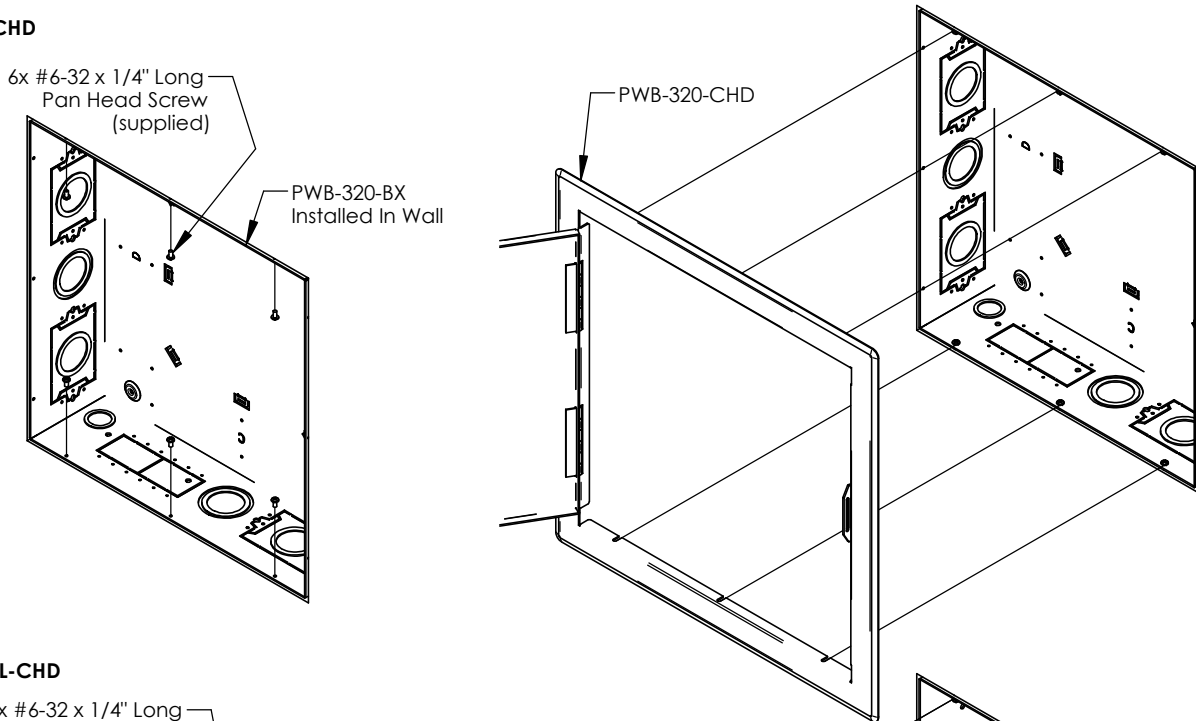

PWB-320XL-CHD

