FL-300 (PLP/PSQ/SLP/SSQ) Cover Installation Instructions


244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by a qualified electrician in accordance with all national and local electrical codes and communications standards.


Step 1
Remove and discard temporary cover and screws. Install Shim Kit FL-300-FF-CSK (sold separately) if required.

Step 2
Clean area in and around entire top edge of box and apply 1/4" continuous bead of RTV Silicone Sealant.

FL-300

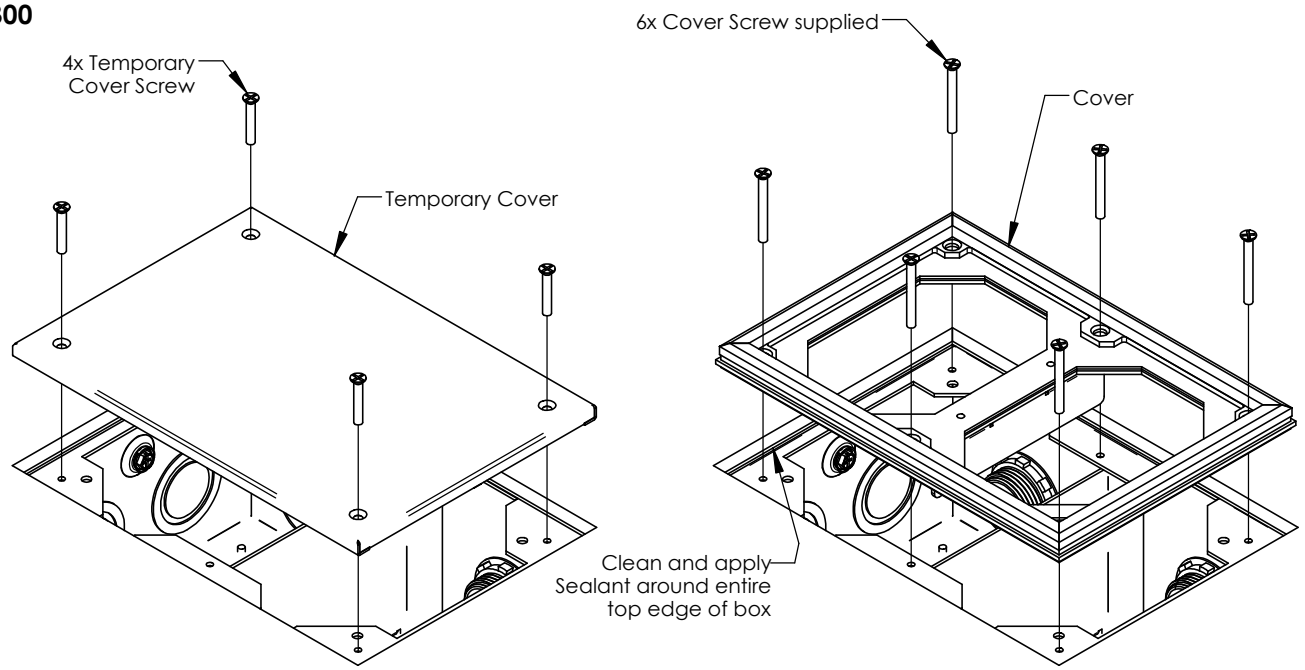


FL-340

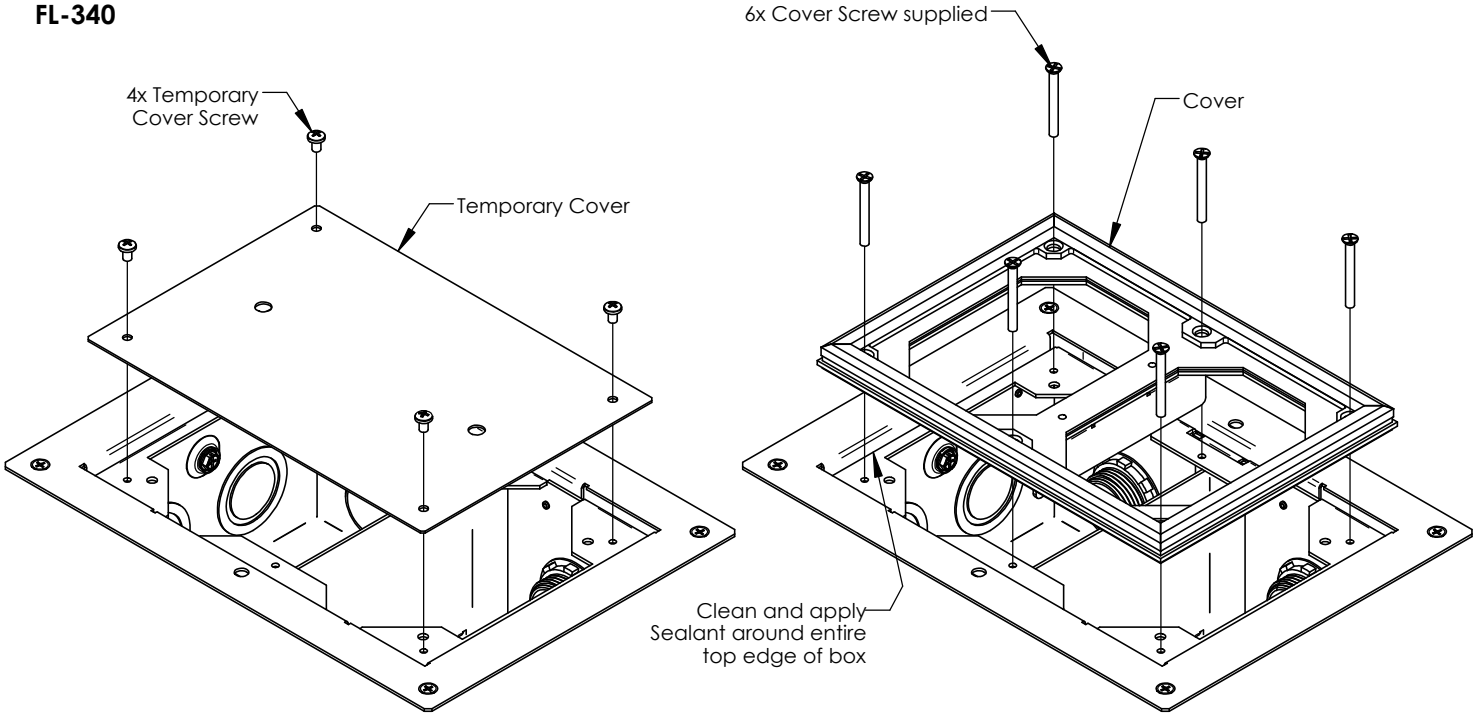


Step 3

Select appropriate plate and install with supplied screws. Route wires/cables thru plate using conduit, fittings, grommets etc (by others) and make wiring connections as required.


NOTE: Thread conduit thru plate and install sealer locknut on underside of plate.

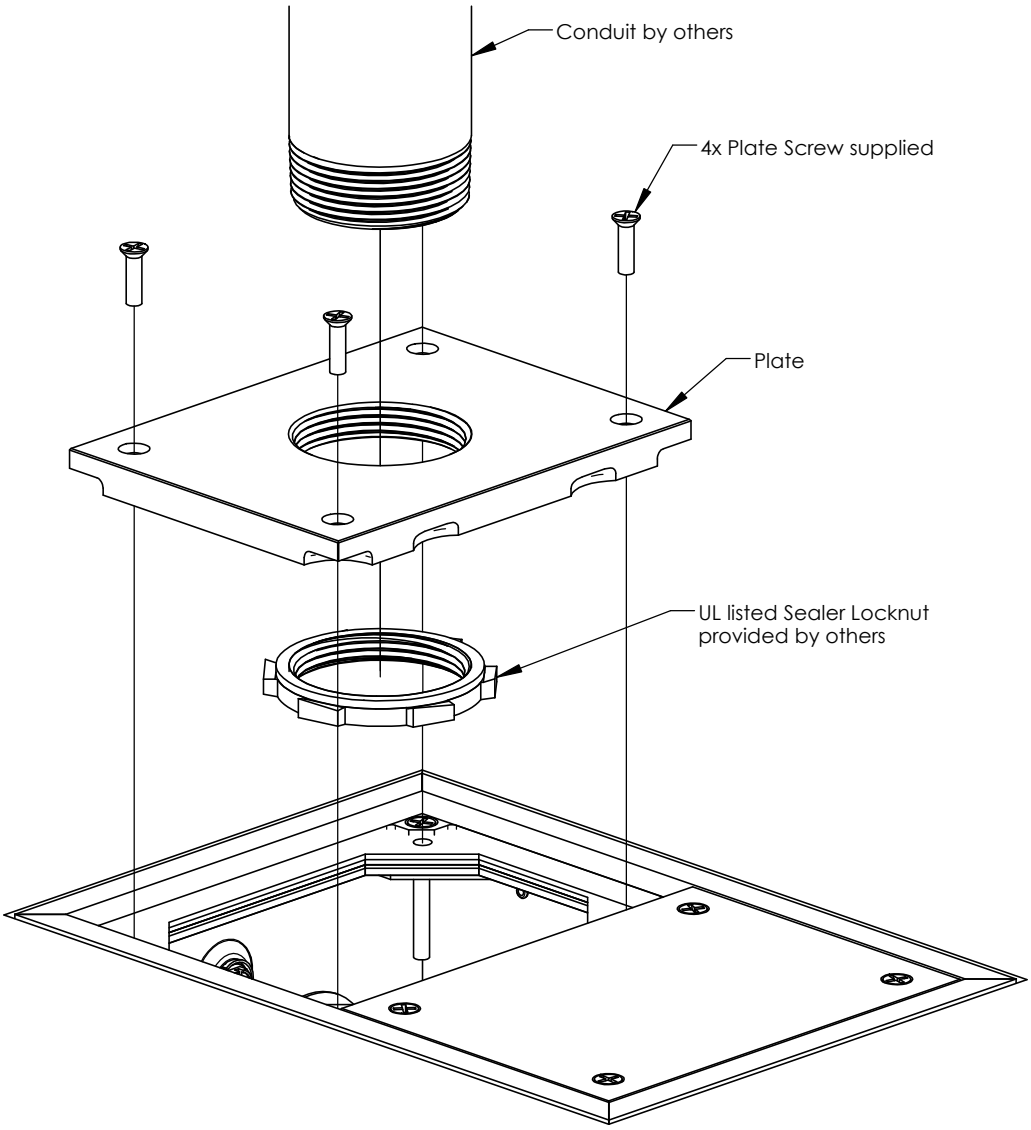

1-1/2" Threaded Plate

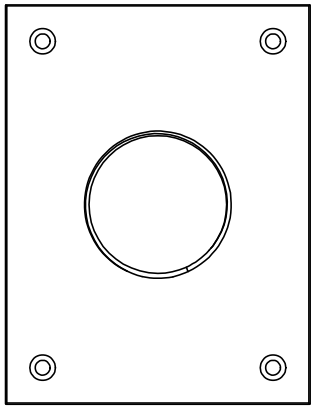

3/4" Threaded Plate

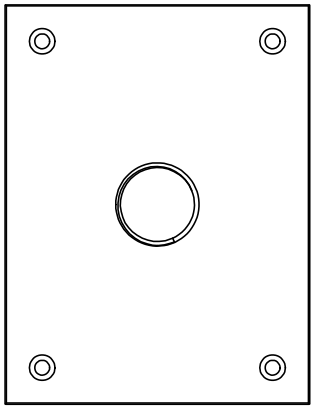

Blank Plate

