
FL-340-FF-B Installation Instructions (for use with FL-300 Series Covers)


244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207


Installation

Locate and position box in accordance with floor plans. Hole to be cut in floor - 9-1/2" x 7-1/4" with corner, sharp to 1/2" radius. Drop floor box thru hole and secure with Floor Clamps (1/2" minimum - 2-1/4" maximum floor thickness). If Floor Clamps cannot be used, lip on box can accomodate #8 countersunk screws. Remove and retain Temporary Cover and screws and route conduits to box as required. Place this installation guide back into box along with all supplied items and reinstall Temporary Cover.

NOTICE: For installation by a qualified electrician in accordance with all national and local electrical codes and communications standards.

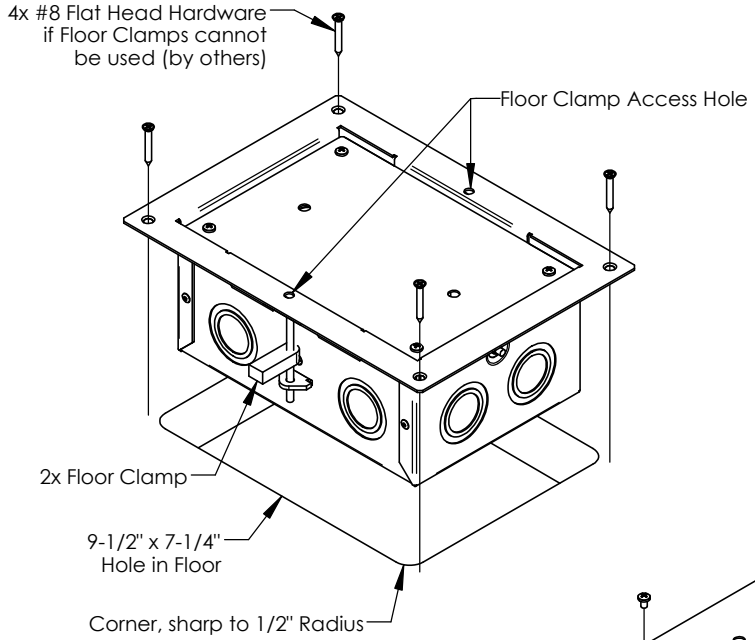

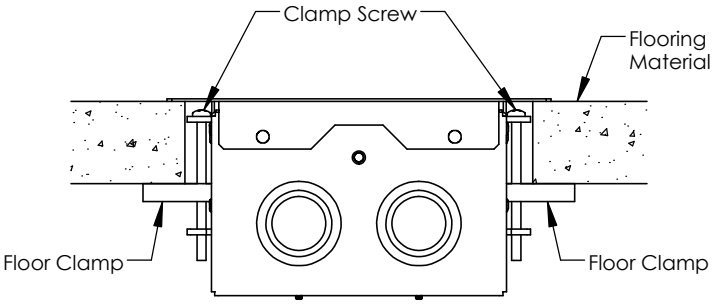


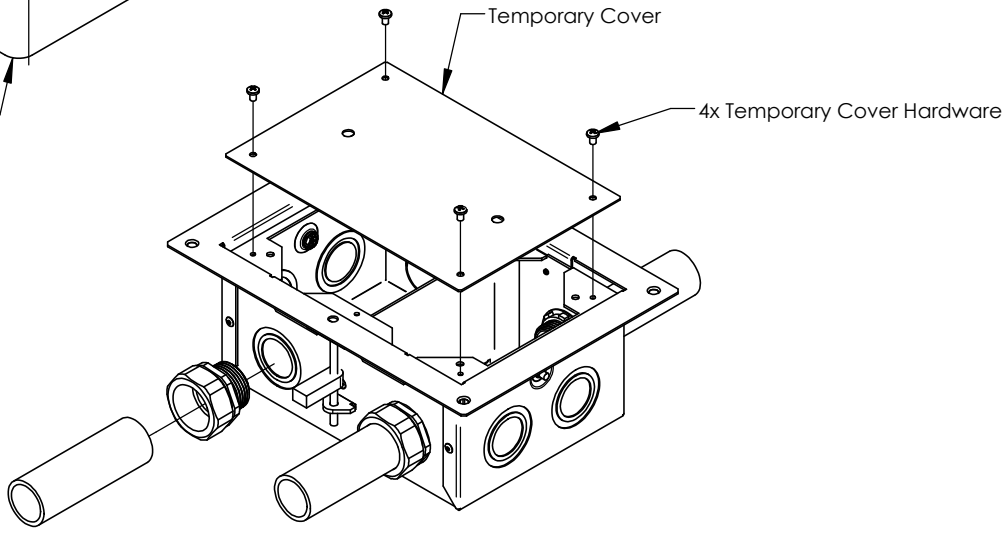


Floor not shown for clarity of conduit installation

Typical Installation

Carpeted over Floor Material

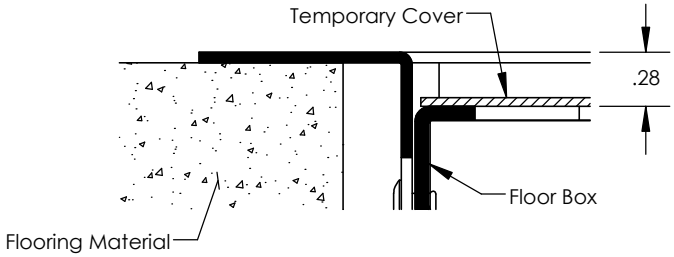

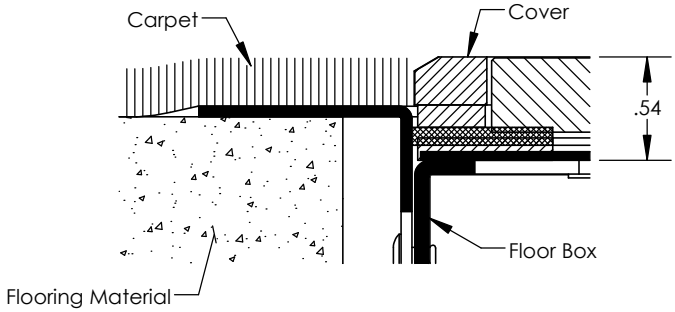

Removable Divider
Remove Divider screws to remove Divider if box is to contain a single voltage potential.

