


FSR CPRT-UT Cable Retractor Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.



CPRT-UT:

Note range for optimal cable deploy/retract performance.

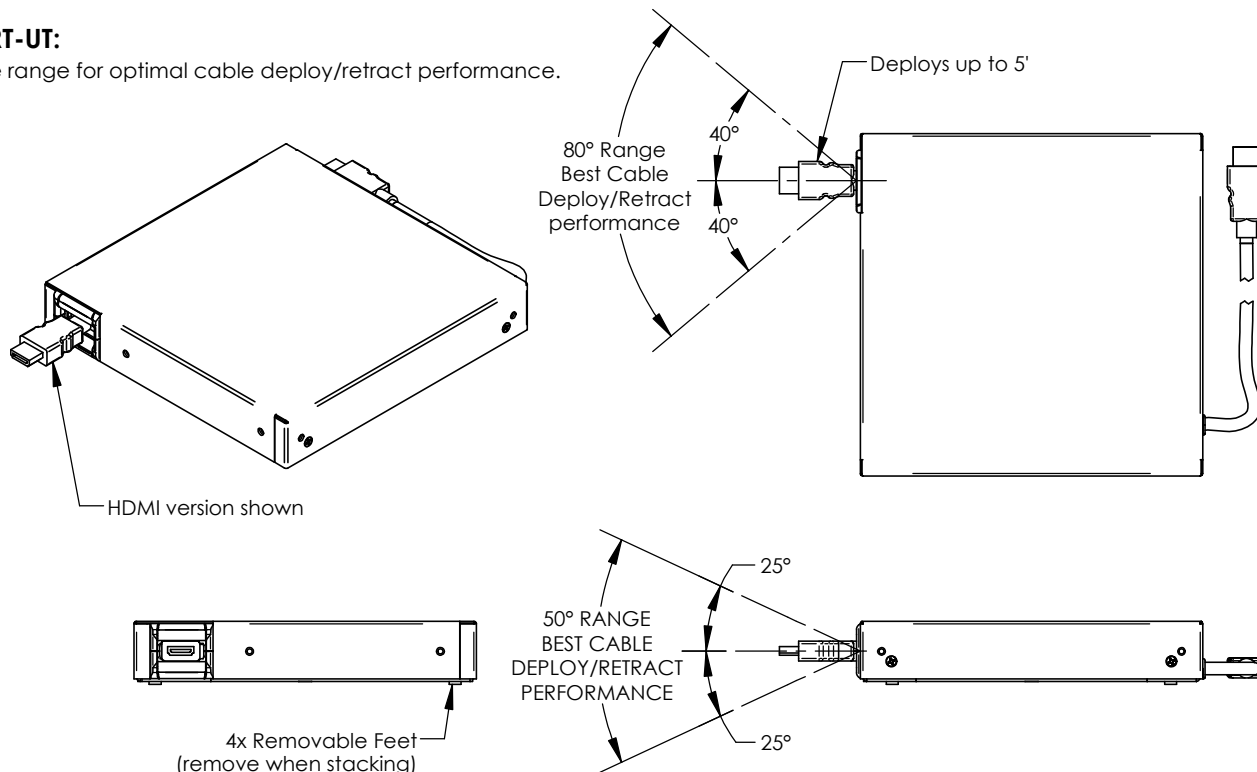


Included Mounting Bracket:

Brackets can be configured to mount 1, 2 or 3 CPRT cable retractors.

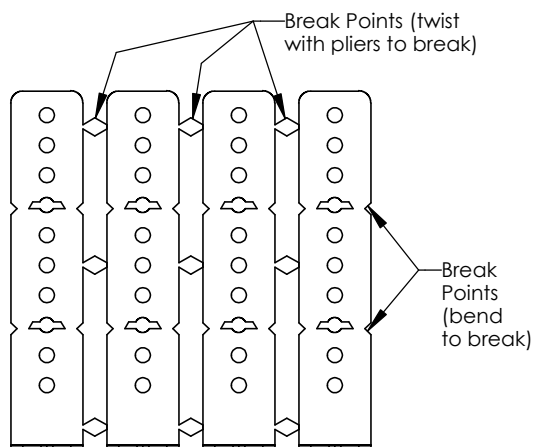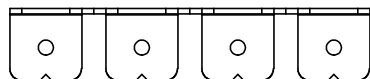


Cable Notes:

1. Payout cable should not contact any fixed objects.
2. Cable should not be allowed to rub on any objects.
3. Cable path is a critical part of design and should be considered before installation.
4. Cable path should not exceed performance envelope for best results (see above).
5. Multiple bends in cable path should be avoided.

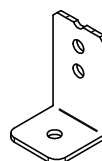

MOUNTS
1 CPRT

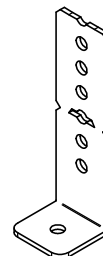


MOUNTS
2 CPRT






MOUNTS
3 CPRT

Installation:

1. Break apart Mounting Brackets per customer specifications and install onto CPRT Cable Retractor.
2. Per customer specifications install CPRT Cable Retractor with supplied (or alternate) Mounting Hardware as required.

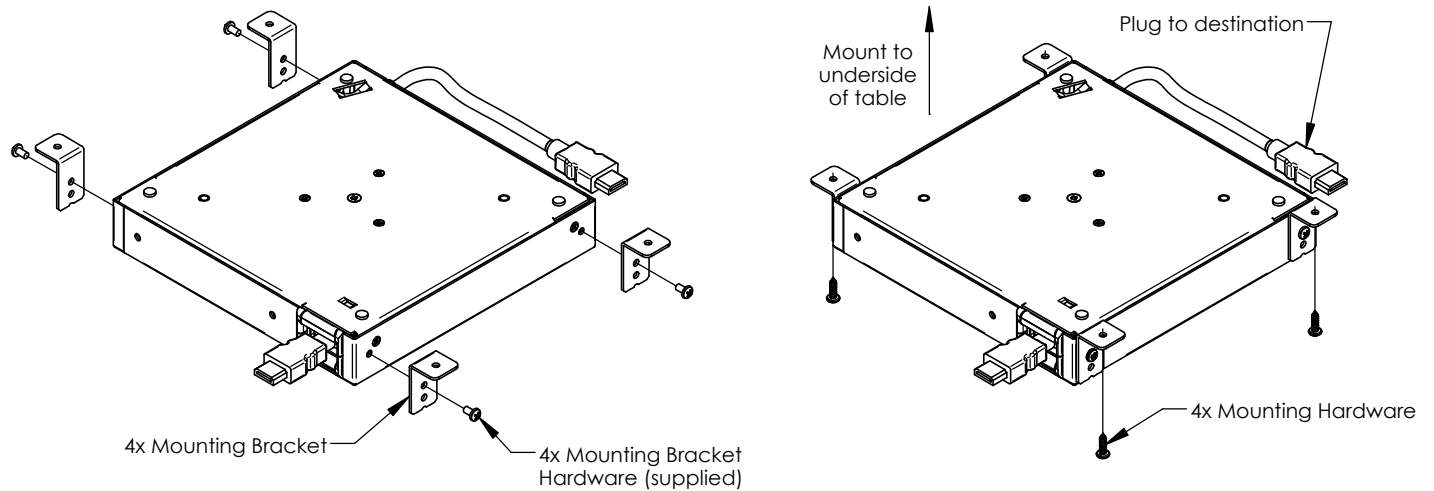

Possible Configurations:

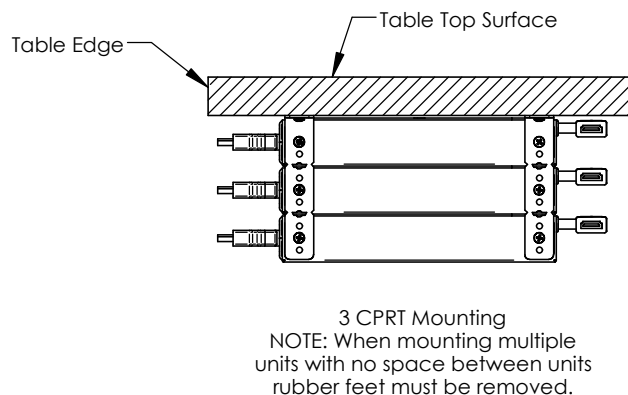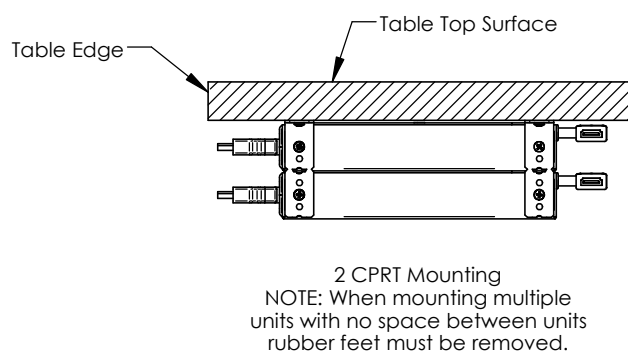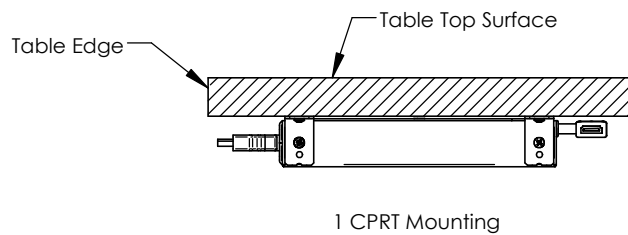

Possible Angled Configurations:

Cable Retractor can be installed at an angle as shown.

