



FSR CPRT-EP1 Edge Port Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.

CPRT-UT (sold separately):

1. Per customer specifications install CPRT-UT per included instructions.
2. Note range for optimal cable deploy/retract performance.

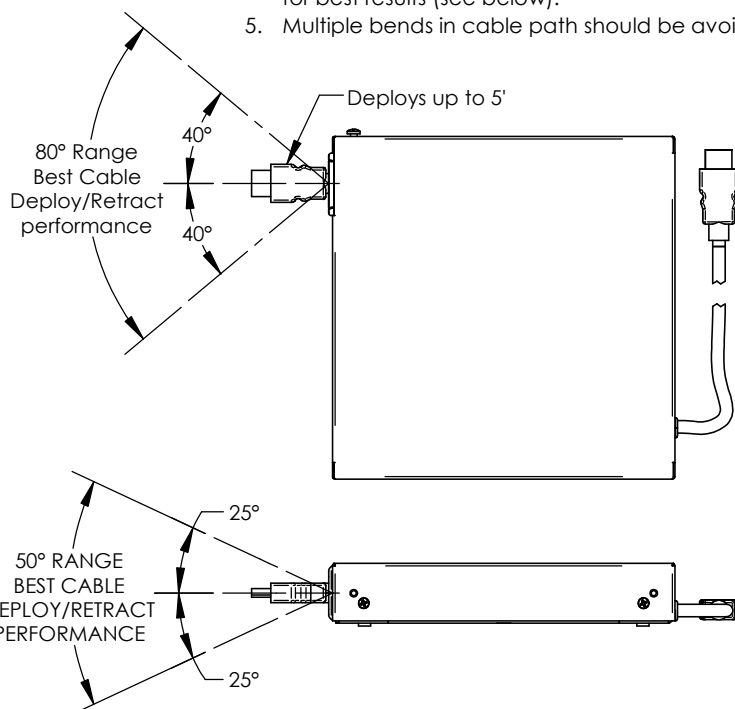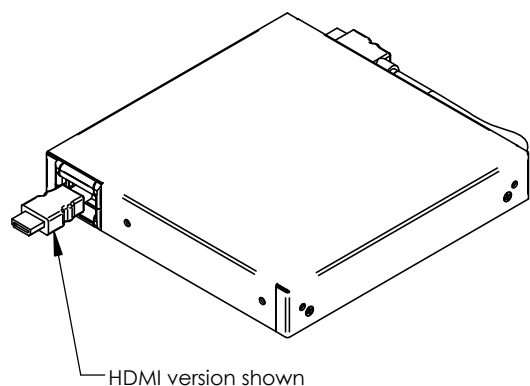


Cable Notes:

1. Payout cable should not contact any fixed objects.
2. Cable should not be allowed to rub on any objects.
3. Cable path is a critical part of design and should be considered before installation.
4. Cable path should not exceed performance envelope for best results (see below).
5. Multiple bends in cable path should be avoided.

EP1 Edge Port assembly:

1. Note cable deploy direction arrow.
2. Assemble EP1 Edge Port with CPRT-UT cable as shown.
3. Per customer specification install EP1 Edge Port with supplied (or alternate) Mounting Hardware as required.

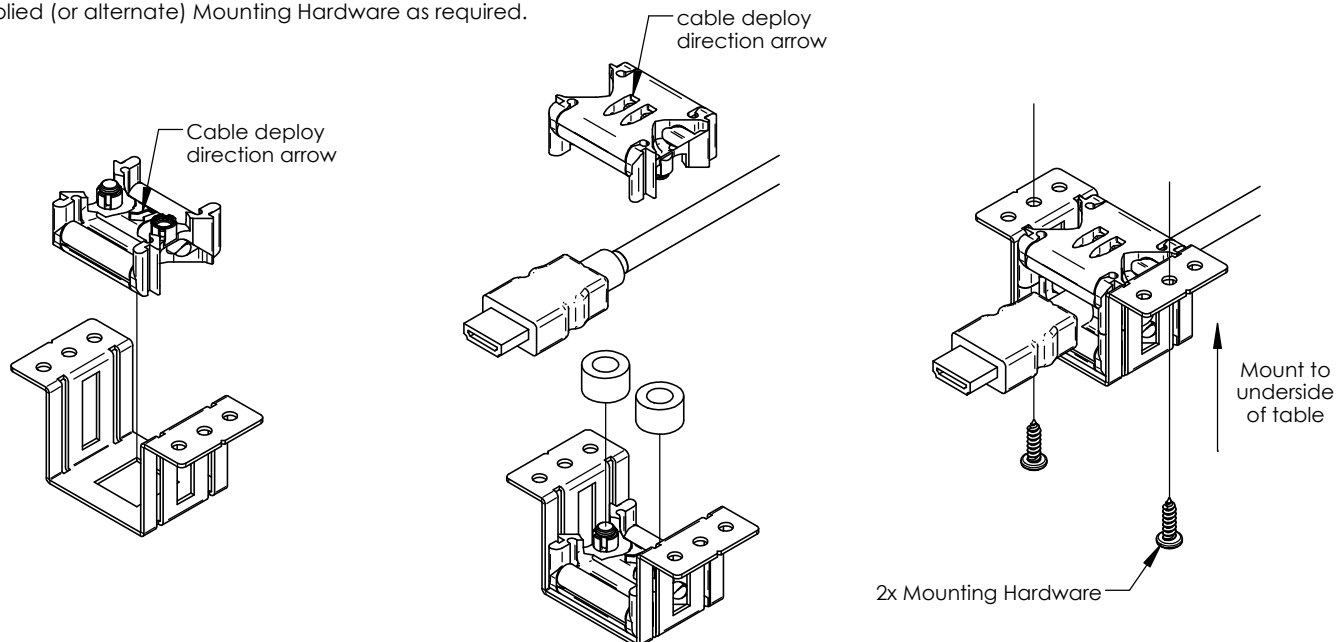

Possible Configurations:

