



FSR CPRT-TP1 Table Port Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.

CPRT-UT (sold separately):

1. Per customer specifications install CPRT-UT per these instructions.
2. Note range for optimal cable deploy/retract performance.

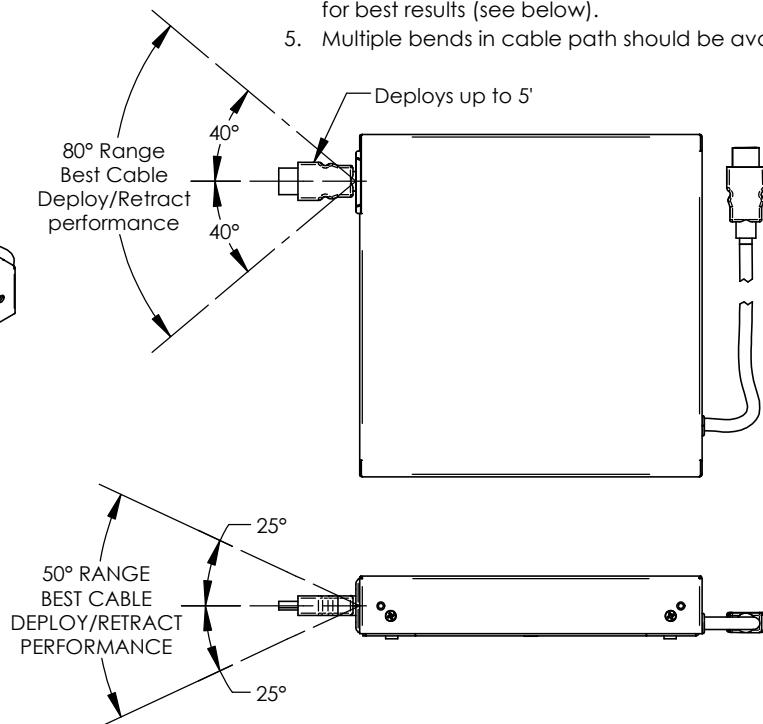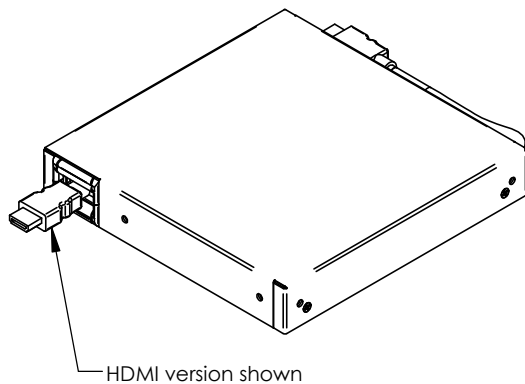


Cable Notes:

1. Payout cable should not contact any fixed objects.
2. Cable should not be allowed to rub on any objects.
3. Cable path is a critical part of design and should be considered before installation.
4. Cable path should not exceed performance envelope for best results (see below).
5. Multiple bends in cable path should be avoided.

TP1 Table Port installation:

Per customer specifications Install TP1 Table Port to table. Determine best location for CPRT-UT and cut hole thru table as required. Insert Table Port Pass-Thru into table and install Mounting Bracket to underside of table with supplied (or alternate) Mounting Hardware as required.

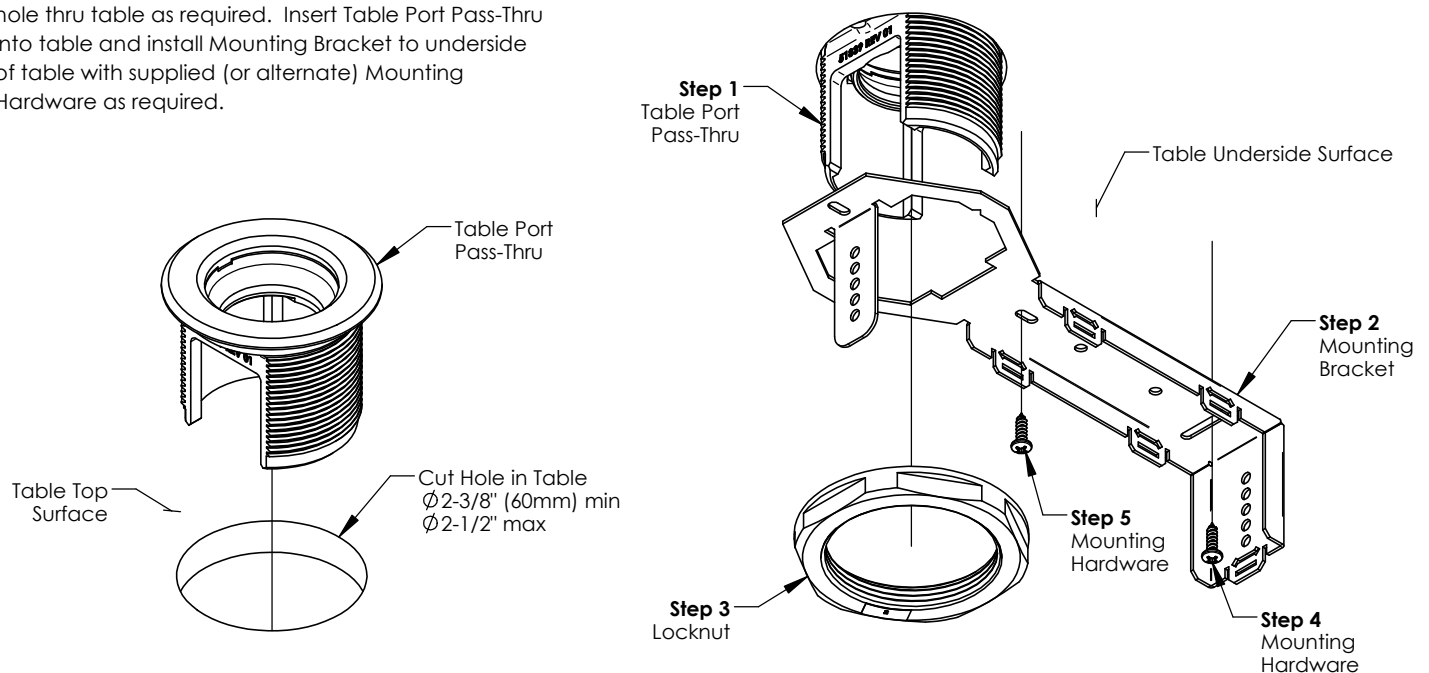

CPRT-UT TP1 Table Port installation:

1. Install CPRT-UT to Bracket as shown. Determine appropriate height for CPRT-UT.
2. Select alternate mounting holes to lower Cable Head or add Cable Collars to raise Cable Head.

