




FSR CPRT-GR2 Grommet Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.



CPRT-UT (sold separately):

1. Per customer specifications install CPRT-UT per these instructions.
2. Note range for optimal cable deploy/retract performance.

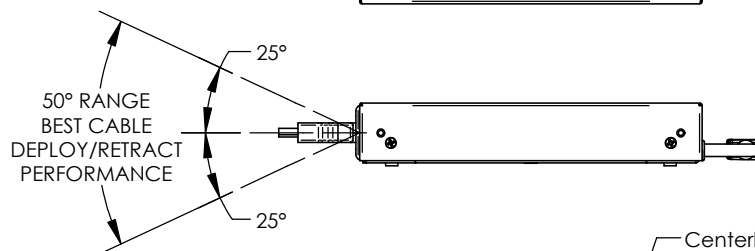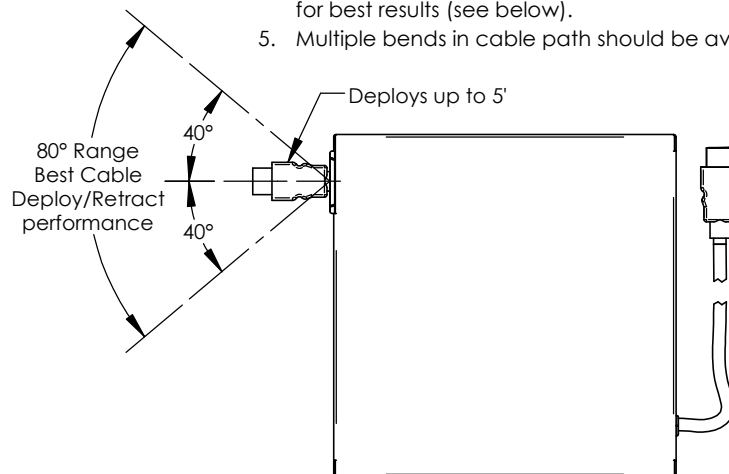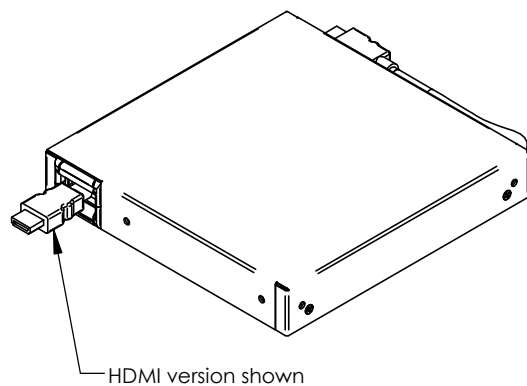

GR2 Table Port installation:

Per customer specifications install GR2 Grommet to table. Determine best location for CPRT-UT, select grommet size, and cut hole thru table as required. Insert Grommet into table and install Mounting Bracket to underside of table with supplied (or alternate) Mounting Hardware as required.

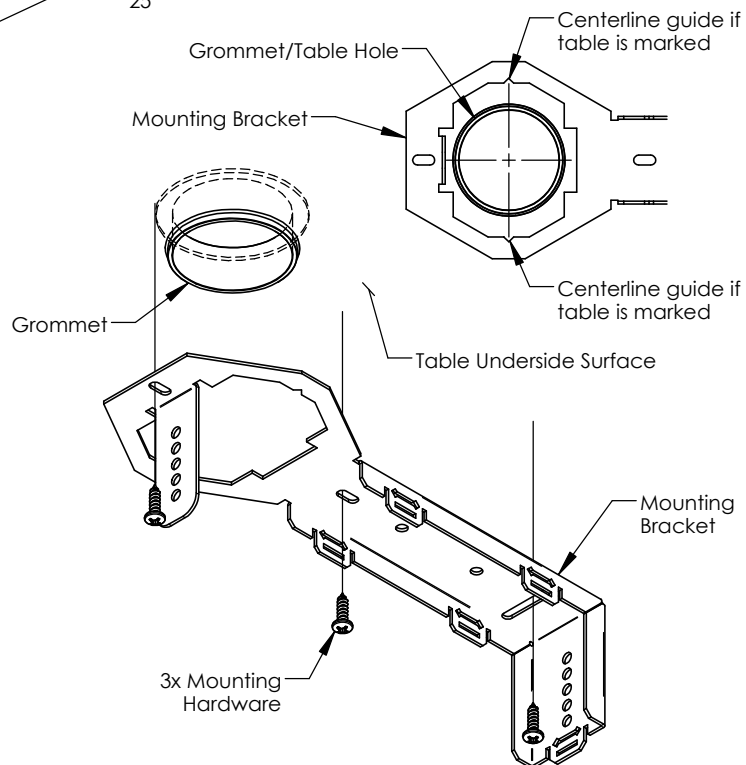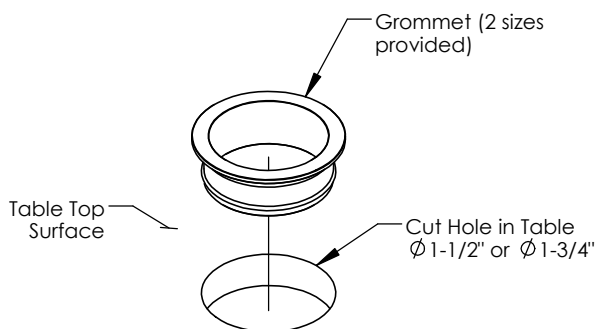

CPRT-UT GR2 Table Port installation:

1. Install CPRT-UT to Bracket as shown. Determine appropriate height for CPRT-UT.
2. Select alternate mounting holes to lower Cable Head or add Cable Collars to raise Cable Head.

