


Combination Lock:

Set Up New Combination

- 1. Remove Security Screw as shown.
- 2. Turn knob to "Set Combination Position".
- 3. Set up new combination.
- 4. Turn knob to "Open or Lock Position".
- 5. Reinstall Security Screw as shown.


Finding Lost Combination

- 1. Insert key and turn to unlock and open Wall Box (key can only be removed in locked position).
- 2. Remove Cover Assembly (see 1st page).
- 3. While looking at lock windows behind lock, turn combination wheels until red is visible. When all 3 windows show red, correct combination is found.
- 4. Reuse or set up new combination.

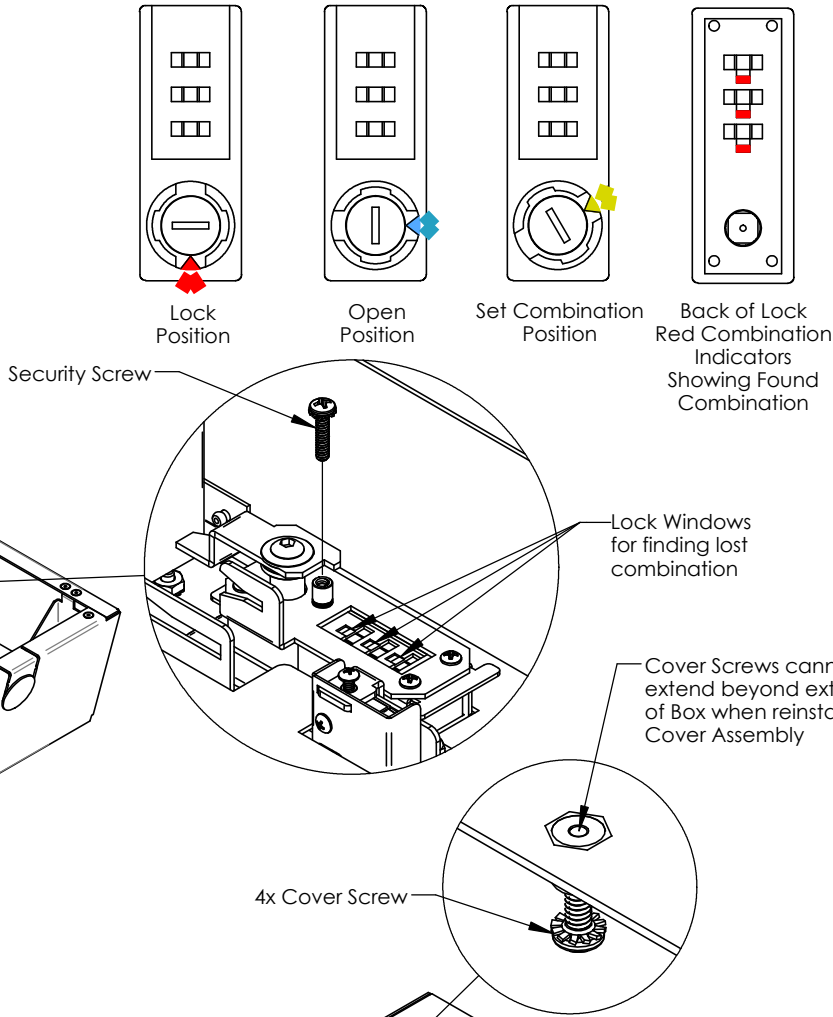

Reinstall Cover Assembly:

Make wiring connections as required. Reinstall Cover Screws to Box flush with exterior surface of Box. Reinstall Cover Assembly to Box. Tighten Cover Screws to secure Cover Assembly to Box.

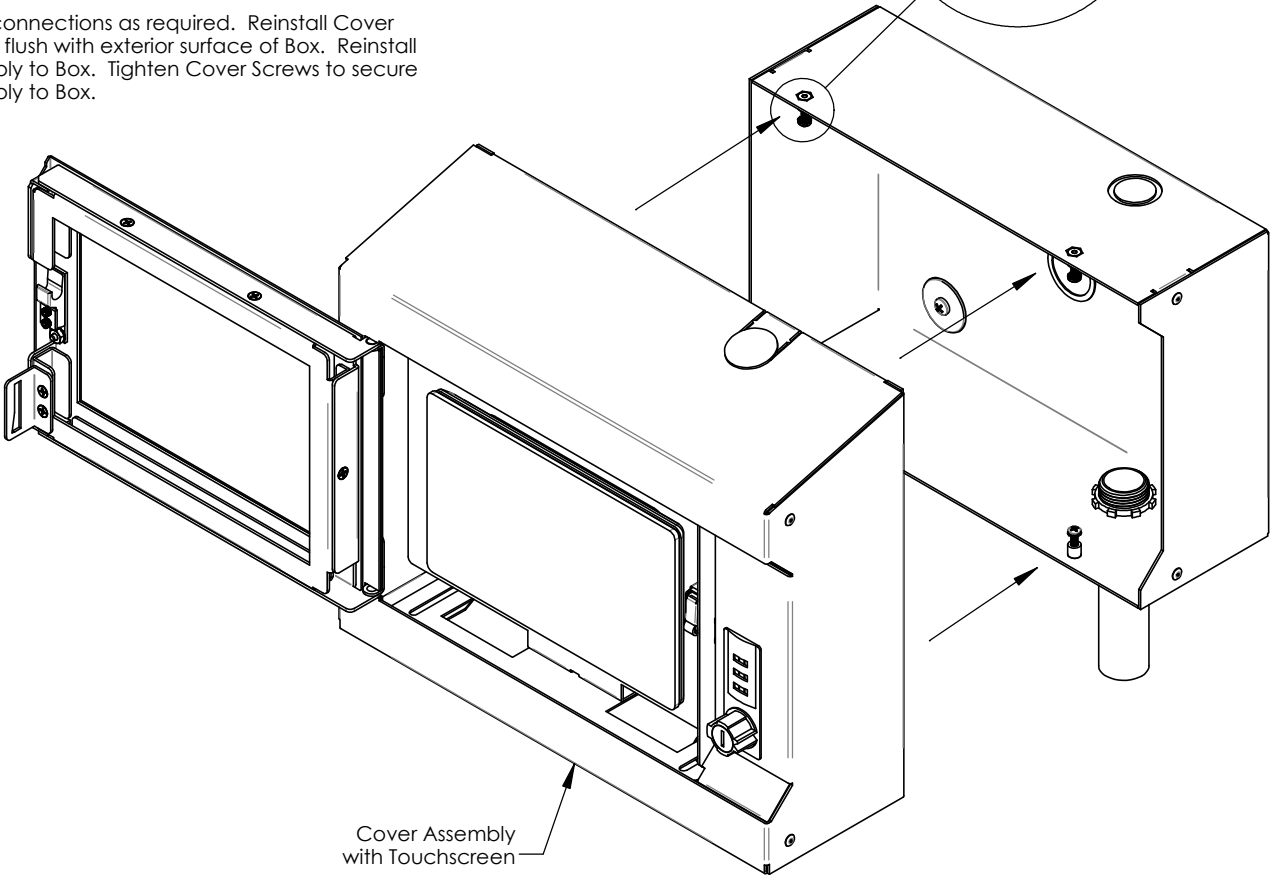

FSR WB-TSC-WM-7 Installation Instructions



244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.

Remove Cover Assembly:


Open door and remove 4x Cover Screws to remove Cover Assembly from Box. Retain Cover Screws for reinstalling Cover Assembly.

COVER MUST BE MOUNTED PLUMB ON A FLAT SURFACE

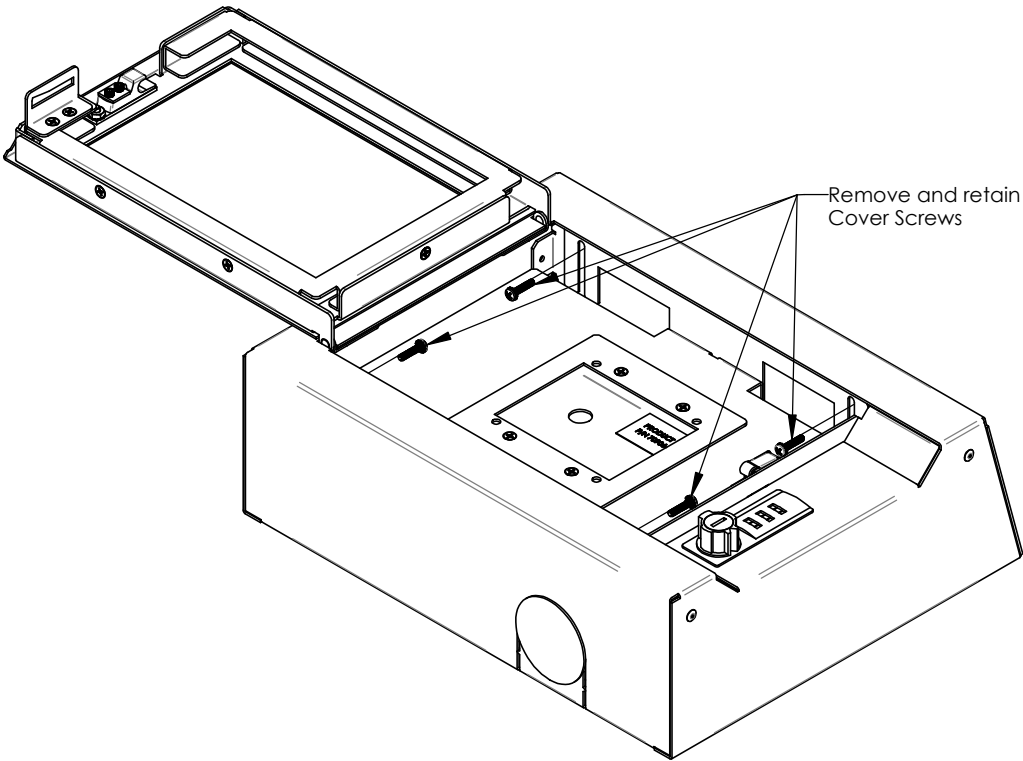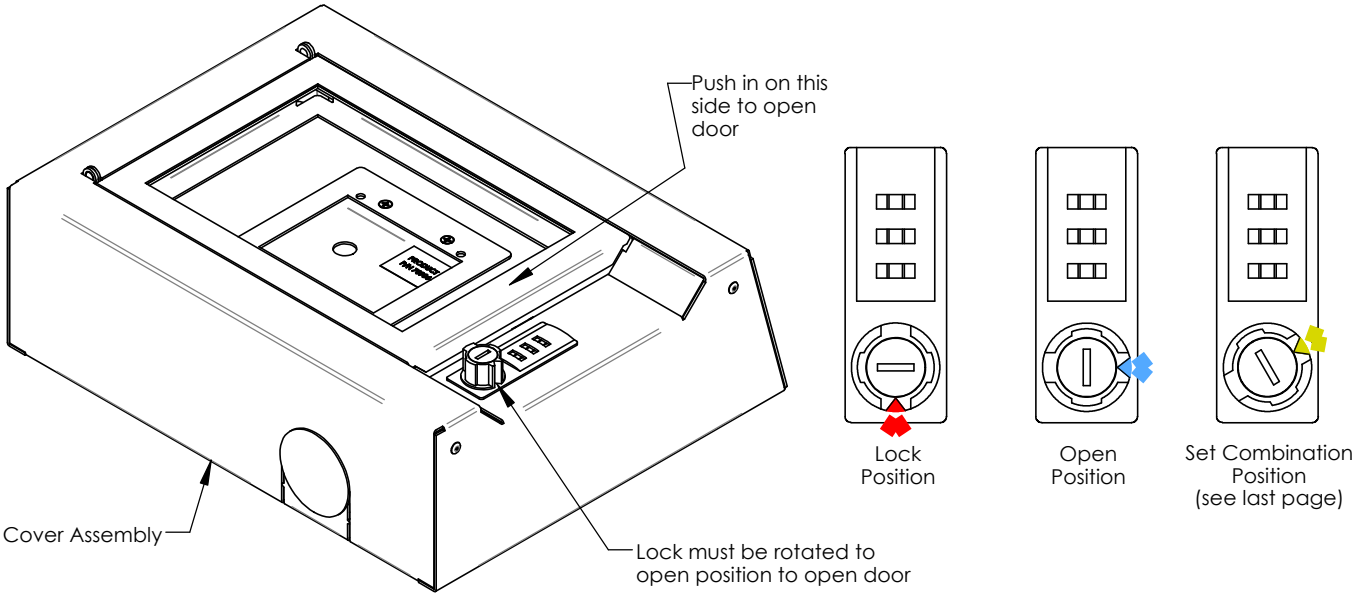


Box Installation:

Install Box to wall with supplied (or alternate) hardware.
Install Conduit and Conduit Fittings as required (by others).
Remove Cover Assembly knockouts as required.

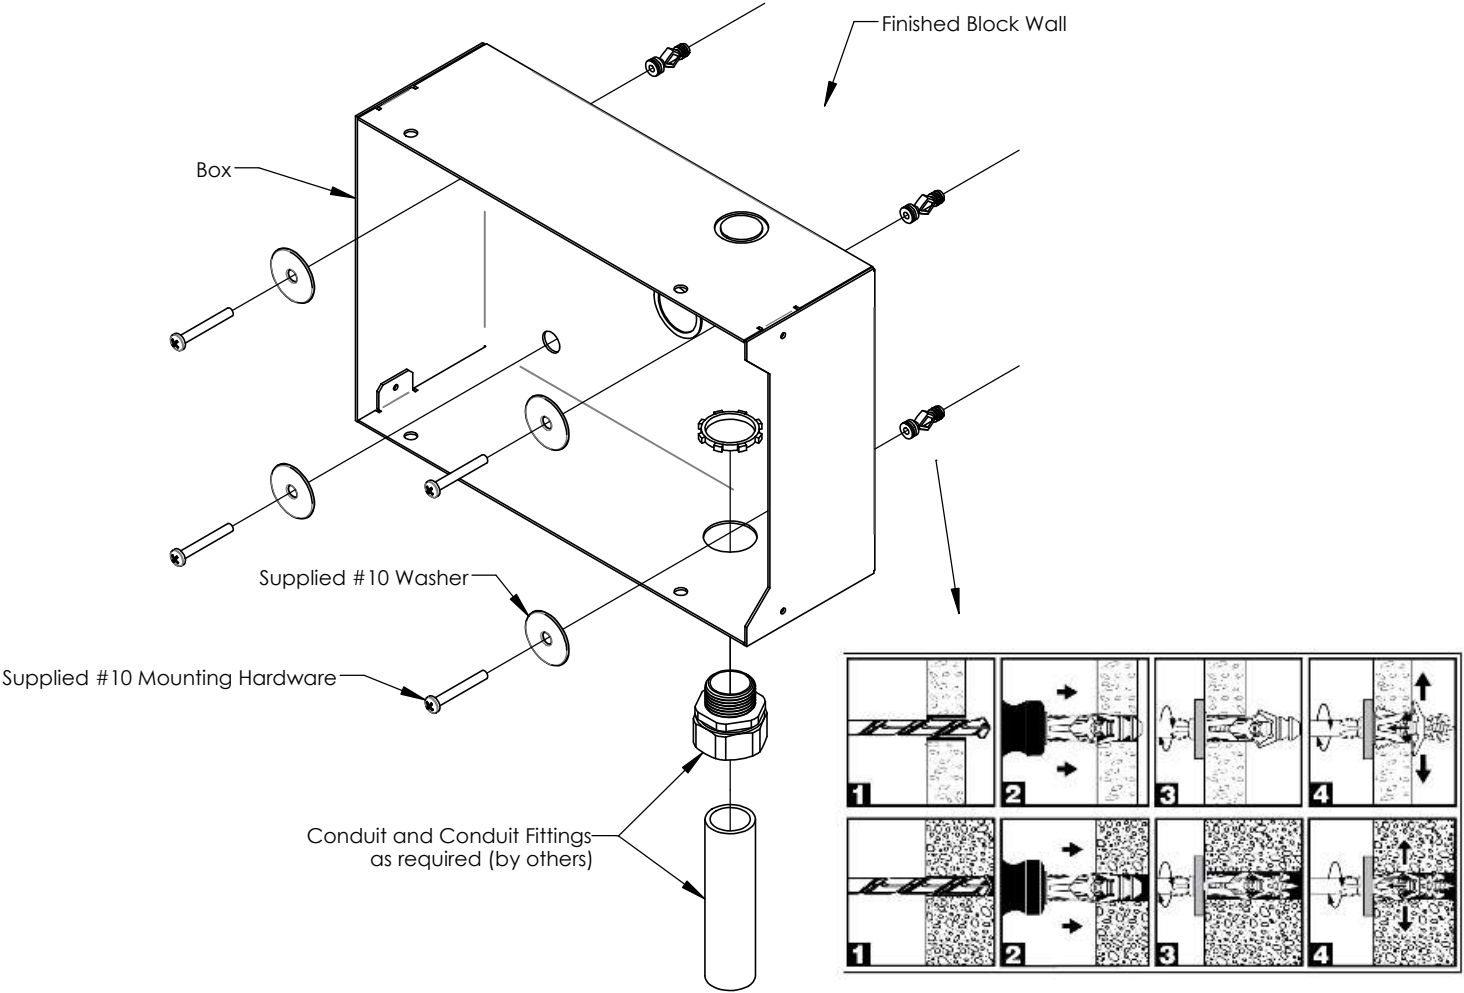

1. Drill 5/16" hole into drywall/wallboard, brick or concrete.
2. Insert anchor into hole. Tap in flush to wall.
3. Insert screw and washer through Box into anchor.
4. Continue to screw until there is strong resistance.

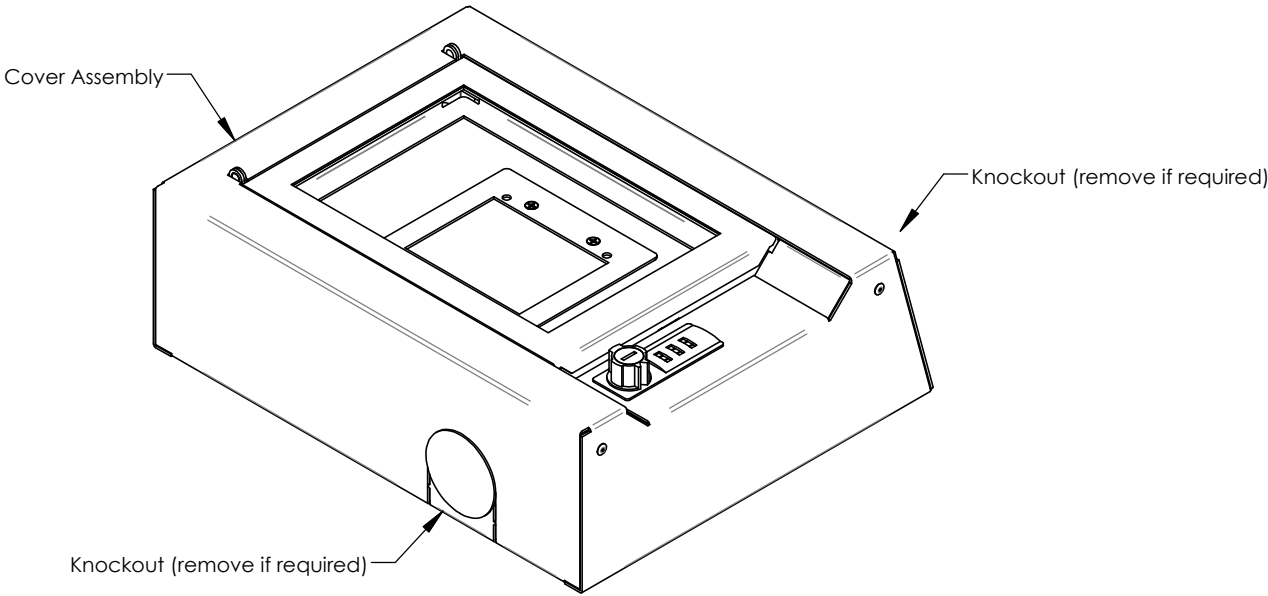

Touchscreen Installation and Mounting Options:

Touchscreen Maximum Size: See Standard and Extra Depth Touchscreen sizes below:

Refer and follow the touchscreen's installation instructions for mounting on a 2-gang or Vesa 75 box.


The drawing below depicts one possible touchscreen and is for reference only.

Your specific touchscreen may require special brackets that may or may not be supplied with your touchscreen. Contact the touchscreen manufacturer for mounting brackets and instruction.

NOTE: Ensure mounting plate is properly positioned so that door can fully close with touchscreen before installing Cover Assembly onto box.


- Note:
1. To prevent damage to touchscreen, a minimum clearance of .25" is required on all sides between touchscreen and metal cover.
 2. Touchscreen must be centered after any mounting bracket movement.
 3. Touchscreen locking feature may not be accessible after touchscreen is installed.

2-Gang Mounting Plate:

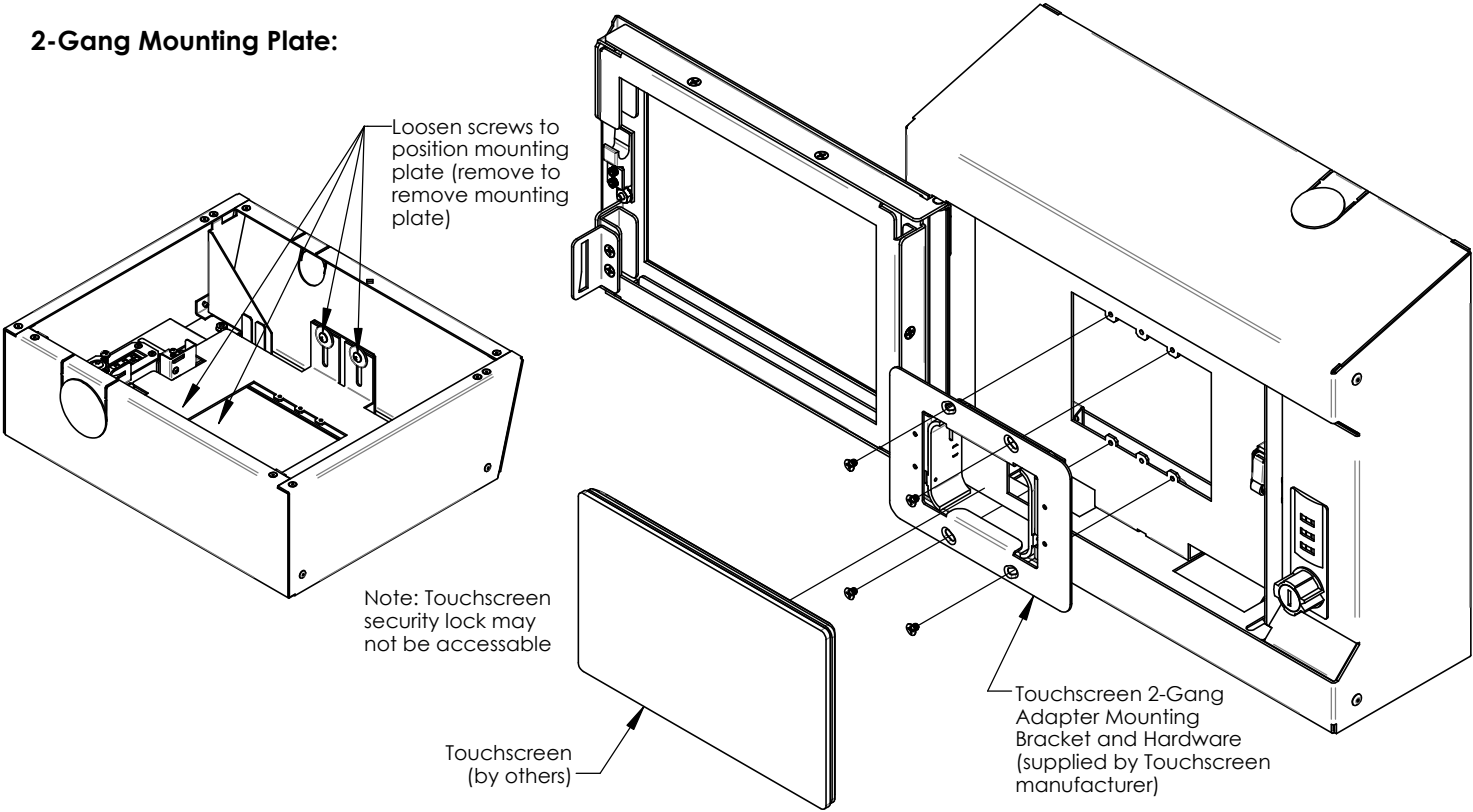


VESA 75mm x 75mm Mounting Plate:

Remove VESA plate if not required.

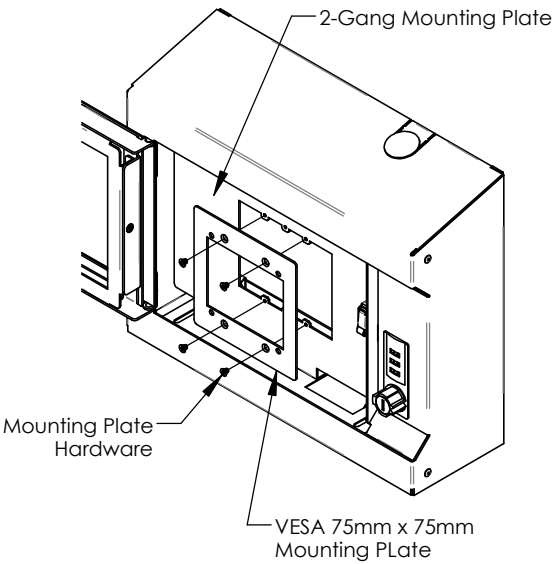

For Touchscreen larger than:
6.75"W x 4.75"H

Touchscreen Maximum Size
(mounting panel surface to cover)
7.60"W x 6.81"H x MAX "A" .93"
MAX "A" + "B" = 2.75"

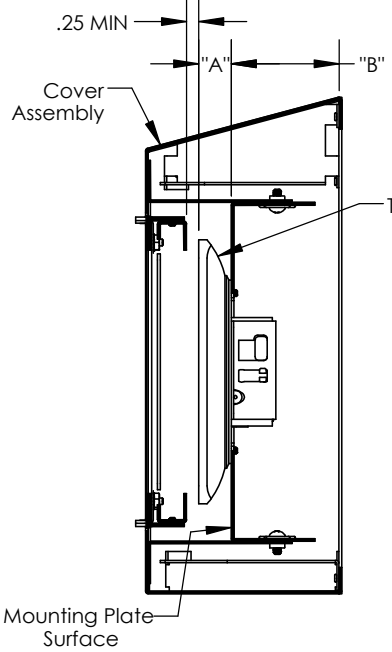

For Touchscreen smaller than:
6.75"W x 4.75"H

Touchscreen Maximum Size
(mounting panel surface to inside cover)
6.75"W x 4.75"H x MAX "A" 1.50"
MAX "A" + "B" = 3.25"

