



Retractor Blank Installation (SIDE Configuration)

- 1. Install CPRT Blank Plate to CPRT Mounting Bracket and Connector Plate.
- 2. Install CPRT's to CPRT Mounting Bracket.

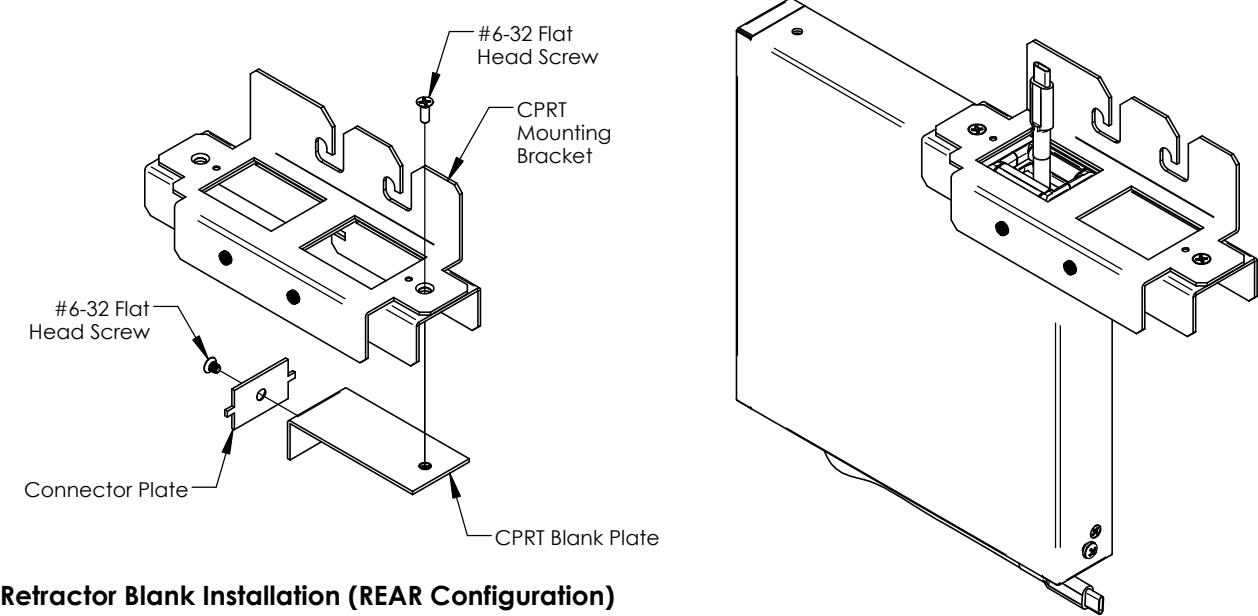


Retractor Blank Installation (REAR Configuration)

- 1. Install CPRT Blank Plate to CPRT Mounting Bracket and Connector Plate.
- 2. Install CPRT's to CPRT Mounting Bracket.

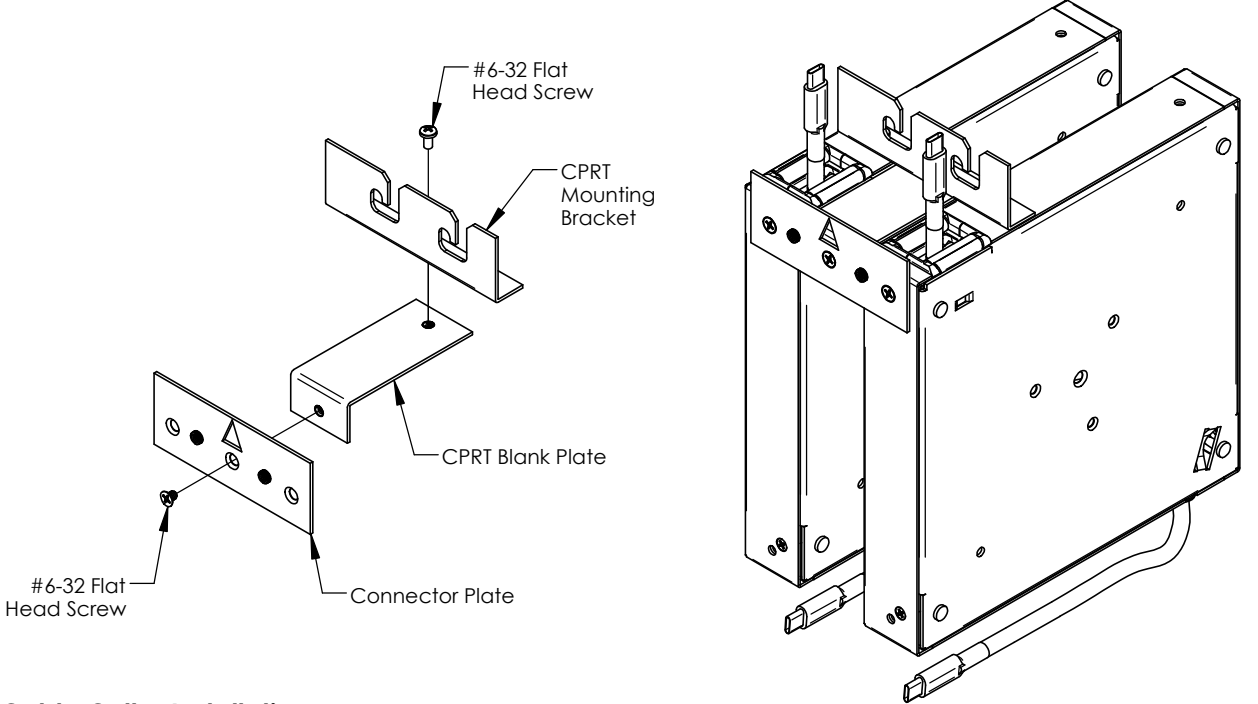

Cable Collar Installation

- 1. Install Cable Collar if required to raise Cable Head.

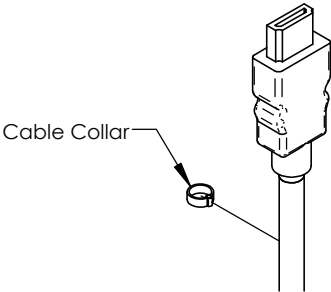


FSR CT6-CPRT-XXX Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207


NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.

CT6 Chassis Installation

- 1. Determine location for CT6 and drill $\varnothing 6.00$ " hole in table and install Snap-In Connectors (by others) and T6 Accessory Brackets (sold separately) as required.

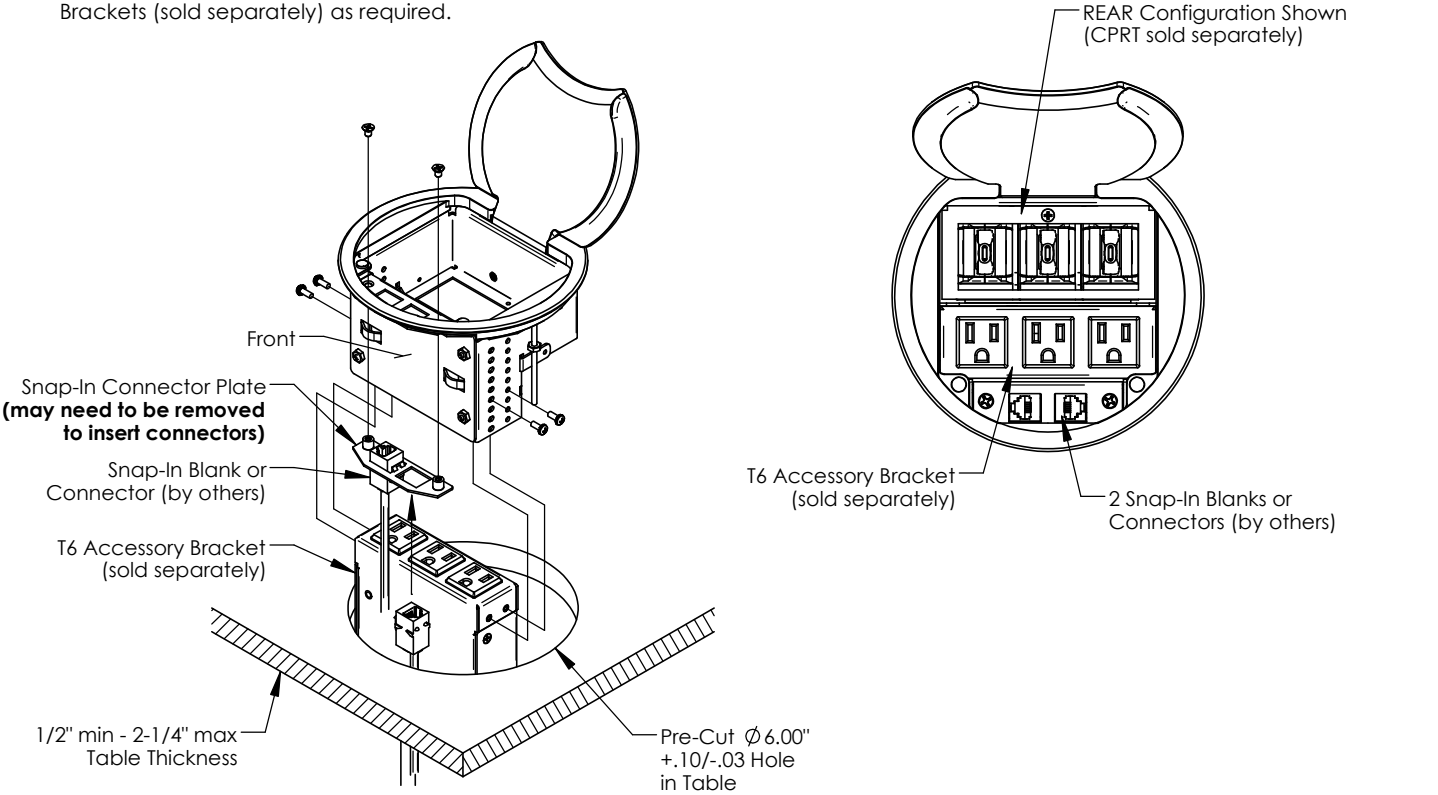


- 2. Install Clamp Shroud to CT6. Position Clamp Shroud up to table with Locking Nylon Nut but **DO NOT** tighten.
- 3. Orient CT6 as required. Install #6 Wood Screws to lock Clamp Shroud to table. Tighten Locking Nylon Nuts.

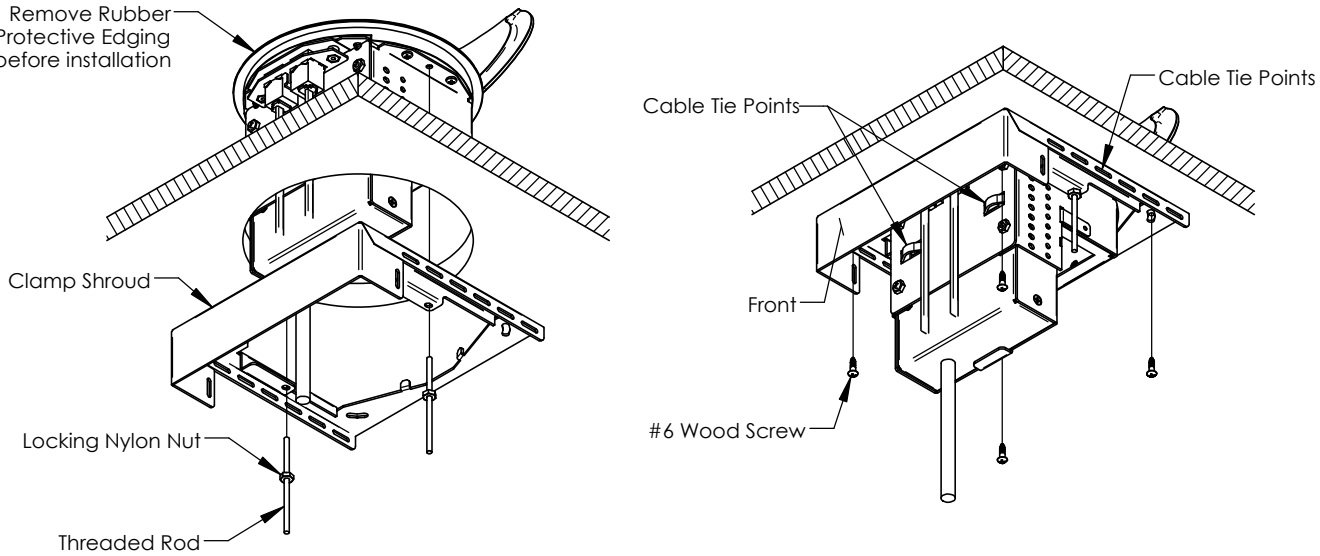


SIDE Mount CPRT Retractor Configuration

1. Install Connector Plate to CPRT.
2. Install CPRT's to CPRT Mounting Bracket.
3. Install CPRT assembly to CT6 Chassis and secure with #6-32 Pan Head Screw.
4. Cables may be deployed to help pass thru openings.
5. See last page for installing blanks to brackets.

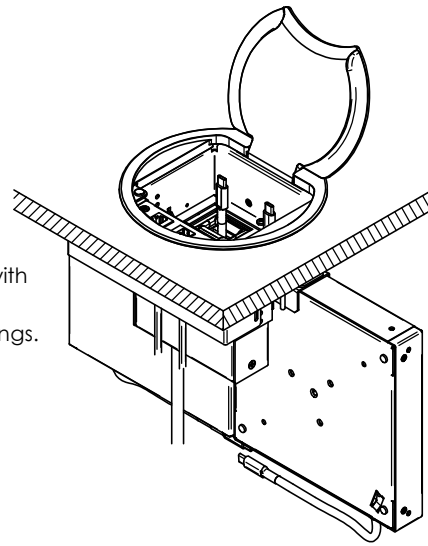


REAR Mount CPRT Retractor Configuration


1. Separate Connector Plate parts, remove and discard diamonds.
2. Install Connector Plate and CPRT Mounting Bracket to CPRT's.
3. Install CPRT assembly to CT6 Chassis and secure with #6-32 Pan Head Screw.
4. Cables may be deployed to help pass thru openings.
5. See last page for installing blanks to brackets.

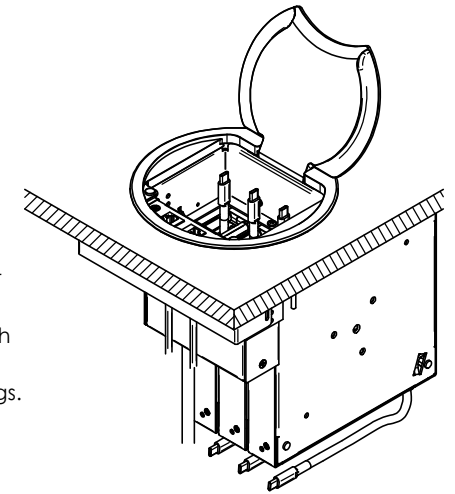


1. Install Connector Plate to CPRT.

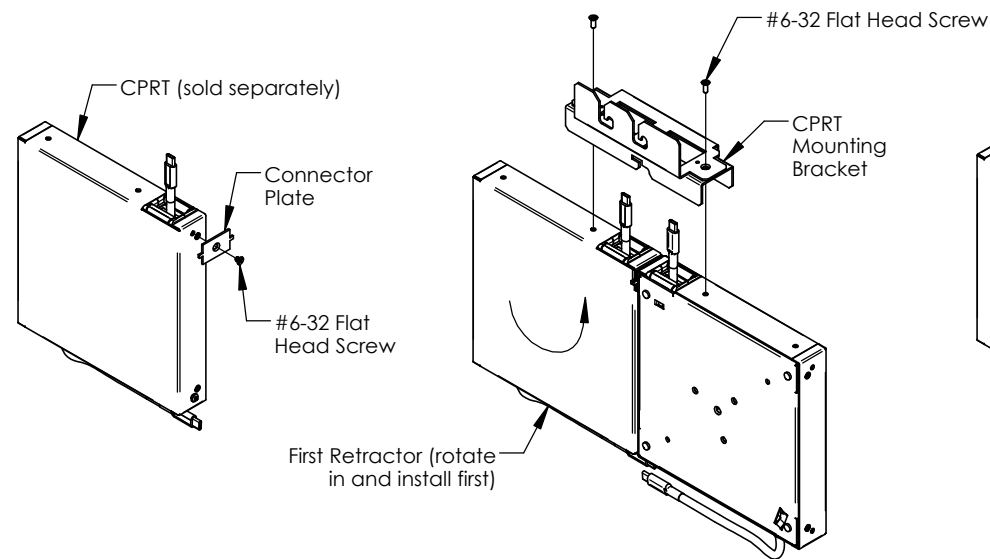


2. Install CPRT's to CPRT Mounting Bracket.

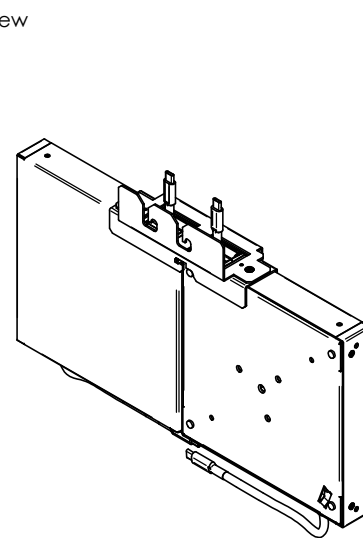

3. Install CPRT assembly to CT6 Chassis and secure with #6-32 Pan Head Screw.

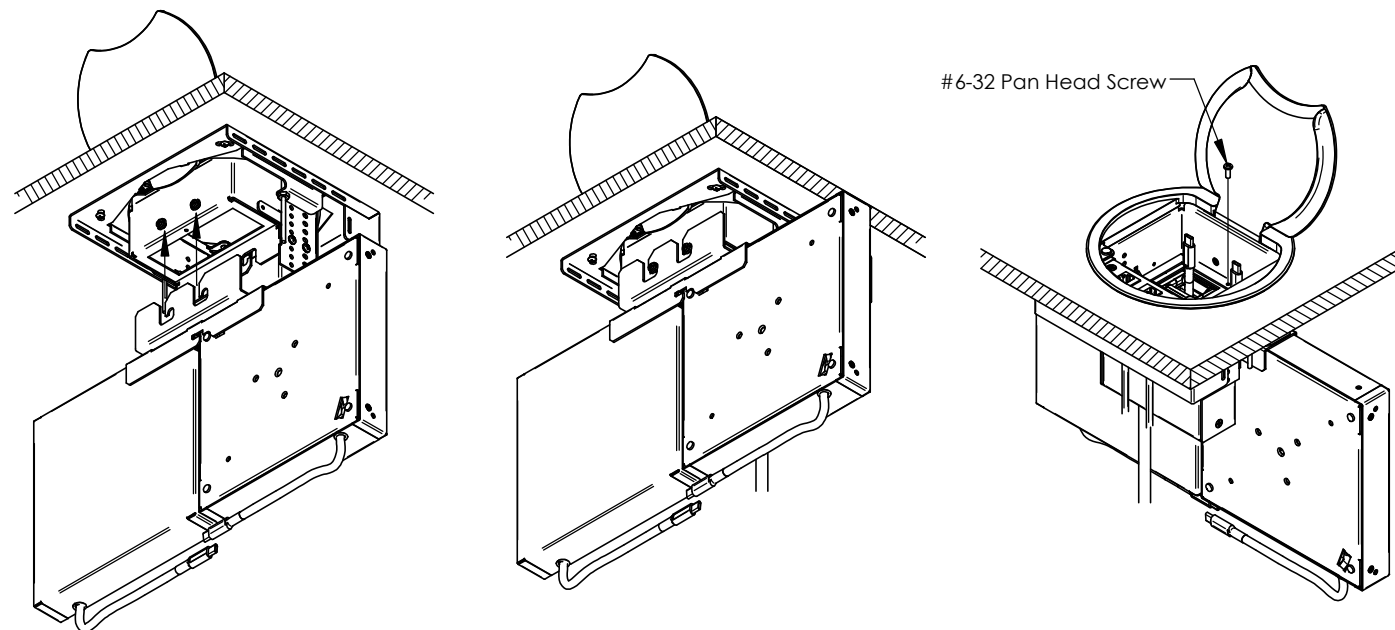

1. Install Connector Plate and CPRT Mounting Bracket to CPRT's.

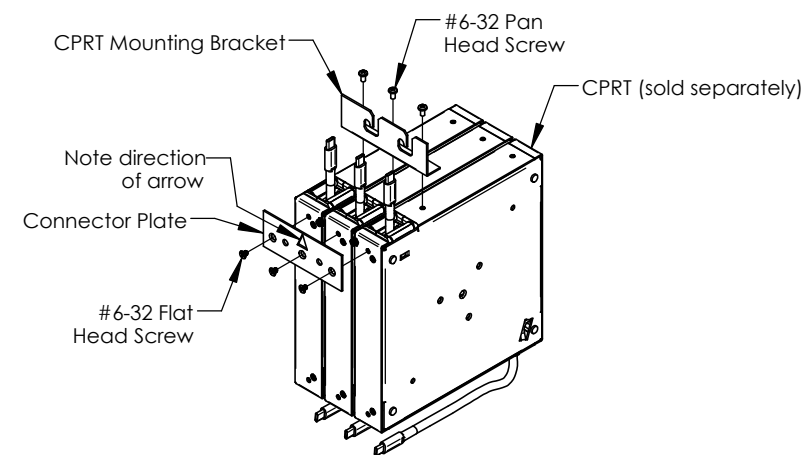

2. Install CPRT assembly to CT6 Chassis and secure with #6-32 Pan Head Screw.

