



Retractor Blank Installation

- 1. Install Blank Plate to Left/Right CPRT Mounting Bracket.
- 2. Install Left/Right CPRT Mounting Bracket assembly into RT6 Chassis.

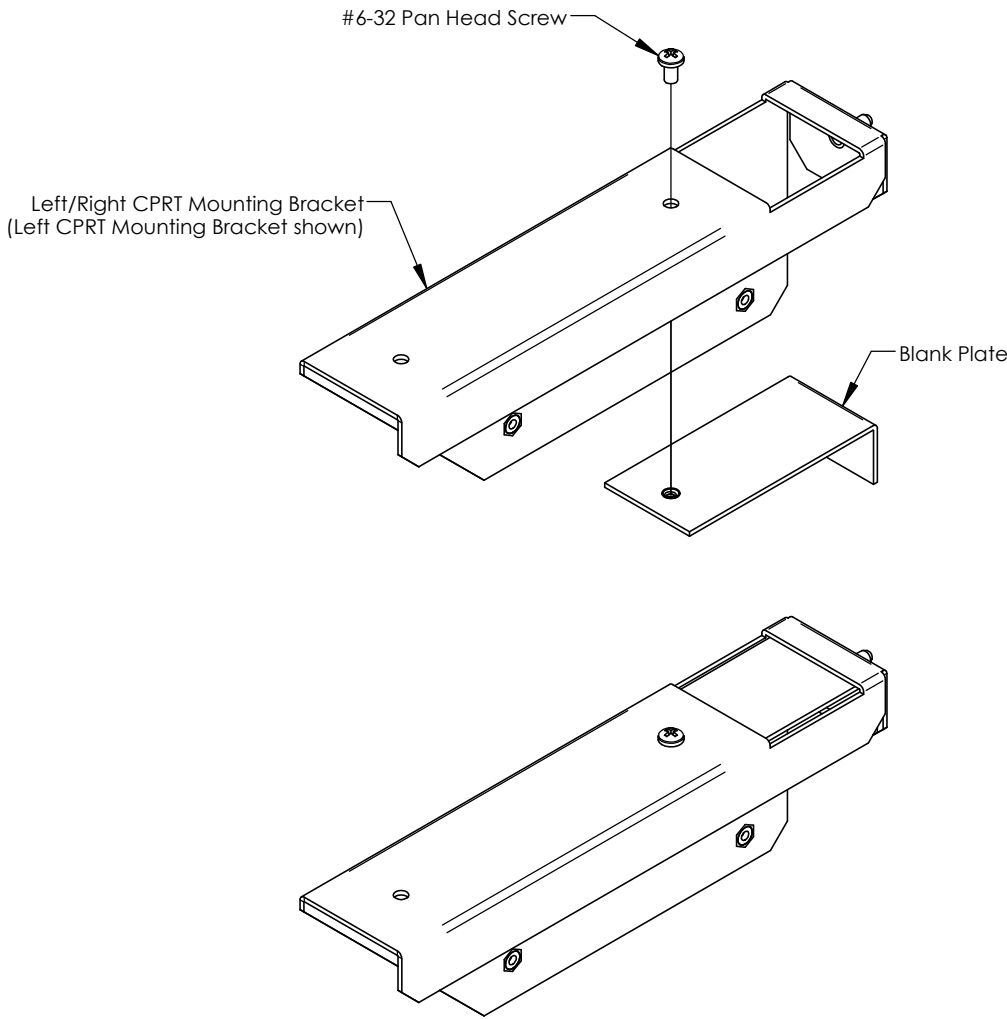

Cable Collar Installation

- 1. Install Cable Collar if required to raise Cable Head.

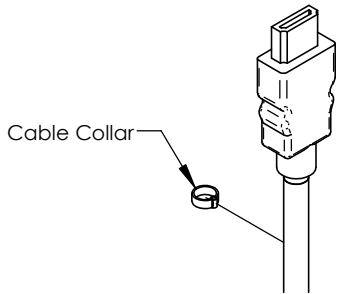





FSR RT6-CPRT-S4-XXX Installation Instructions

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.998.2300 - Fax: 973.785.4207

NOTICE: For installation by qualified personnel in accordance with all national and local electrical codes and communication standards. Adhere to the following instructions and any instructions included with the individual components.


RT6 Chassis Installation

- 1. Determine location for RT6 and cut 7.50" x 6.50" hole with .25" max radius corners in table top.
- 2. Install T6-LB Accessory Bracket (sold separately) into RT6 as required.
- 3. Rotate Locking Arms clear of table and install RT6 into table.
- 4. Rotate Locking Arms to secure assembly to table with Adjustment Screws and lock with Nut.

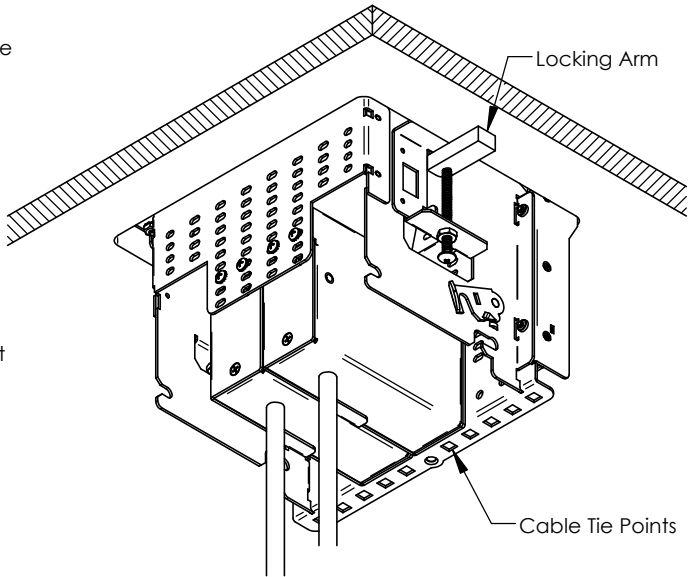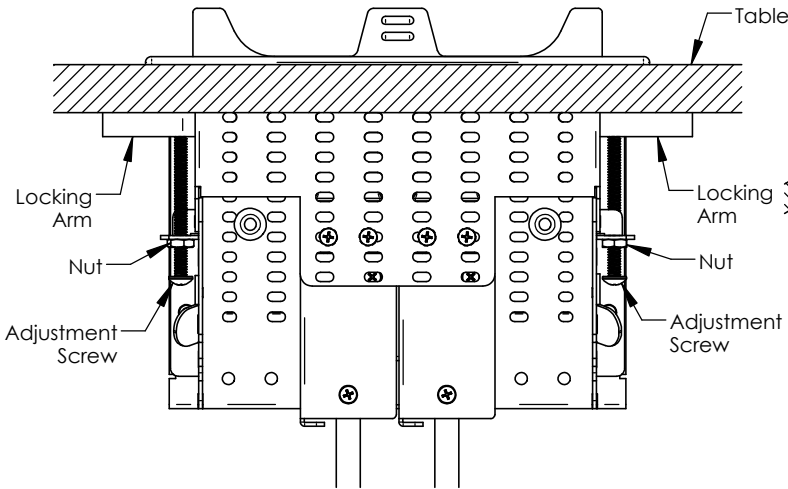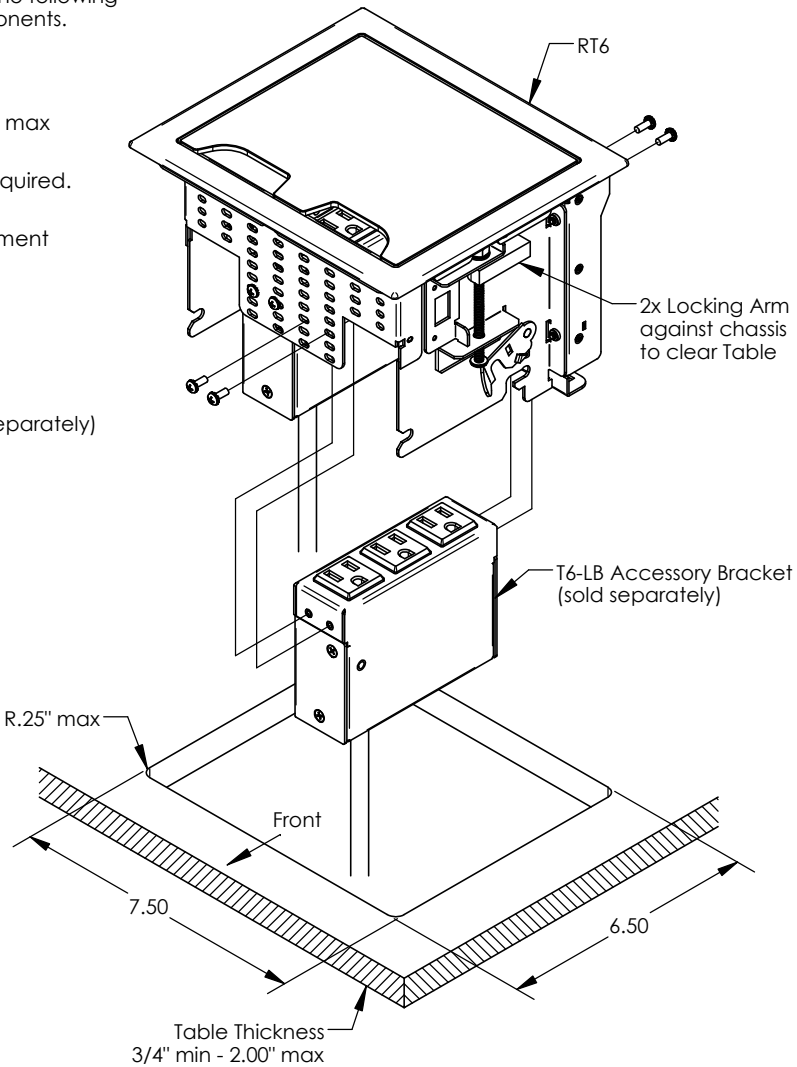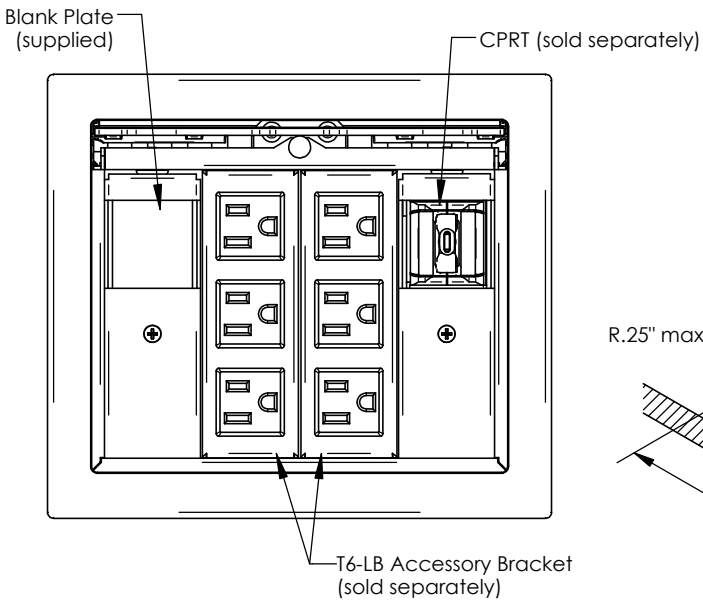

CPRT Retractor Installation

1. Install Left/Right CPRT Mounting Bracket to CPRT (cables may be deployed to help pass thru openings).

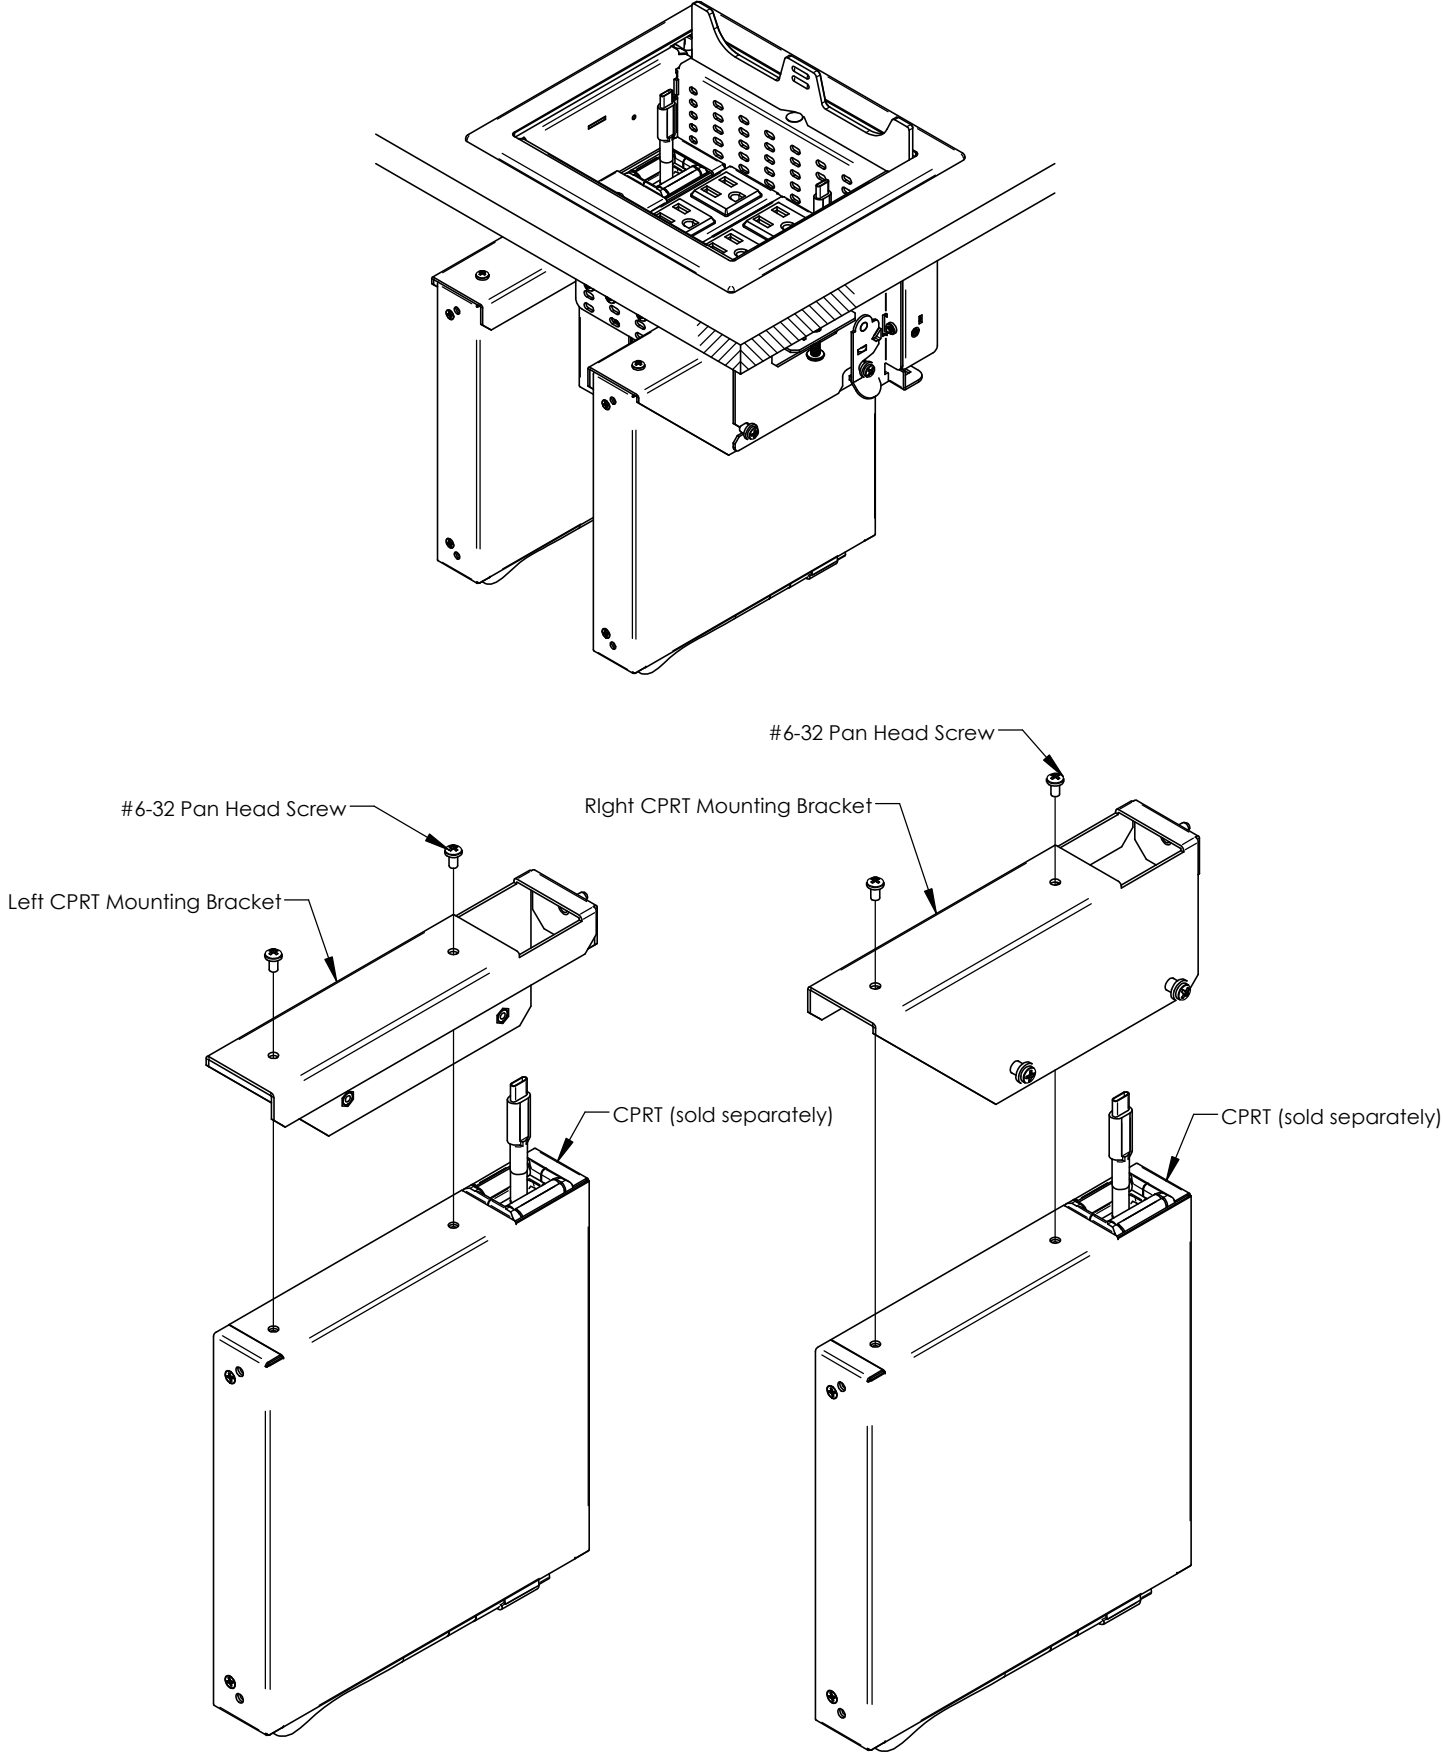

2. Install CPRT assembly to RT6 Chassis and secure with Locking Tab.

