


T6-LB-UN UNIVERSAL BRACKET INSTALLATION INSTRUCTIONS

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207

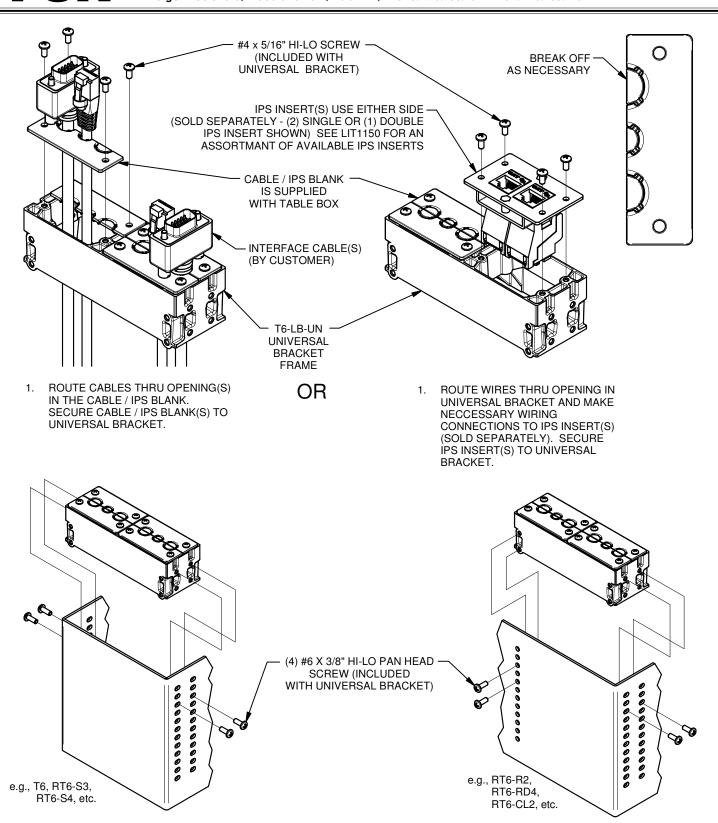

2. DETERMINE MOUNTING HEIGHT AND INSTALL UNIVERSAL BRACKET INTO CHASSIS. UNIVERSAL BRACKET MAY BE INSTALLED FROM TOP OR BOTTOM.

43306 LIT1614A