

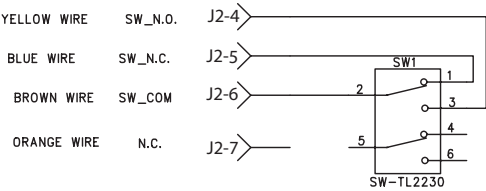
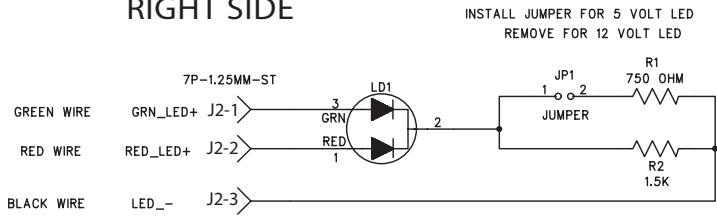
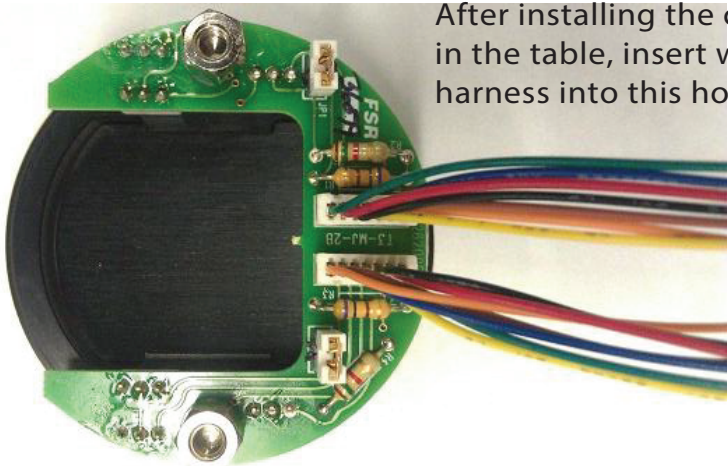


# Schematic

## RIGHT SIDE

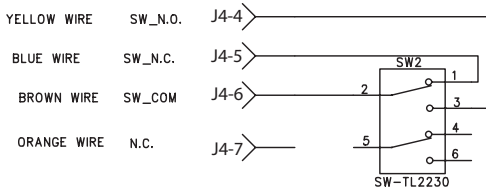


## LEFT SIDE

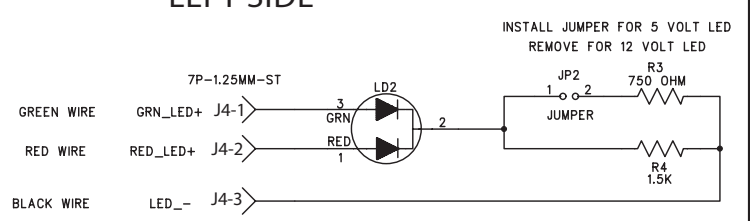

After installing the cover in the table, insert wire harness into this hole.



Plug the wire harnesses in to this board as shown.

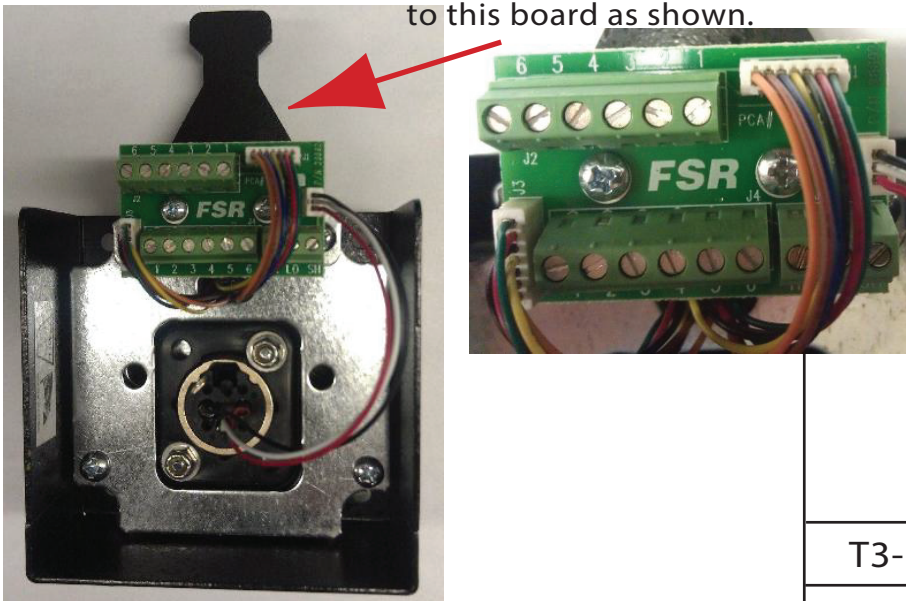

# FSR

244 BERGEN BLVD.  
W. PATERSON, NJ 07424  
TEL. (973) 785-4347

T3-MJ-2B NO MUTE 3 PIN XLR

PRODUCT:	T3-MJ-2B NO MUTE	PART#	43983
DRAWN BY:	AB	DATE:	12-30-2011
APPROVED BY:		DATE:	
DWG.#	C-1163	REV.	PAGE OF

REV . LEVEL	REF . ECO	REV . DATE	APPROVED	DESCRIPTION