



- 6a. ALIGN RING-PIN HOLES AND INSERT RING-PIN ON ASSEMBLY. FOR THE ADDITIONAL SECURITY OF A TAMPER-PROOF INSTALLATION, INSTALL #6-32 x 1/4 LONG FLAT HEAD SCREW, AS SHOWN.
- 6b. LOOSEN ADJUSTABLE HANGER WINGNUT. ALIGN ADJUSTABLE HANGER HOLES WITH RETRACTOR FLANGE HOLES, ENSURING THE HANGER IS VERTICAL AS POSSIBLE, AND INSERT CLEVIS PIN. SECURE CLEVIS PIN WITH HAIR-PIN COTTER.
- 6c. LIFT RETRACTOR ASSEMBLY TO TAKE UP ALL SLACK AND TIGHTEN ADJUSTABLE HANGER WINGNUT TO ENSURE ASSEMBLY WEIGHT IS CARRIED BY THE TABLE. HANGER NUT CAN BE TIGHTENED FOR ADDITIONAL INSTALLATION SECURITY.

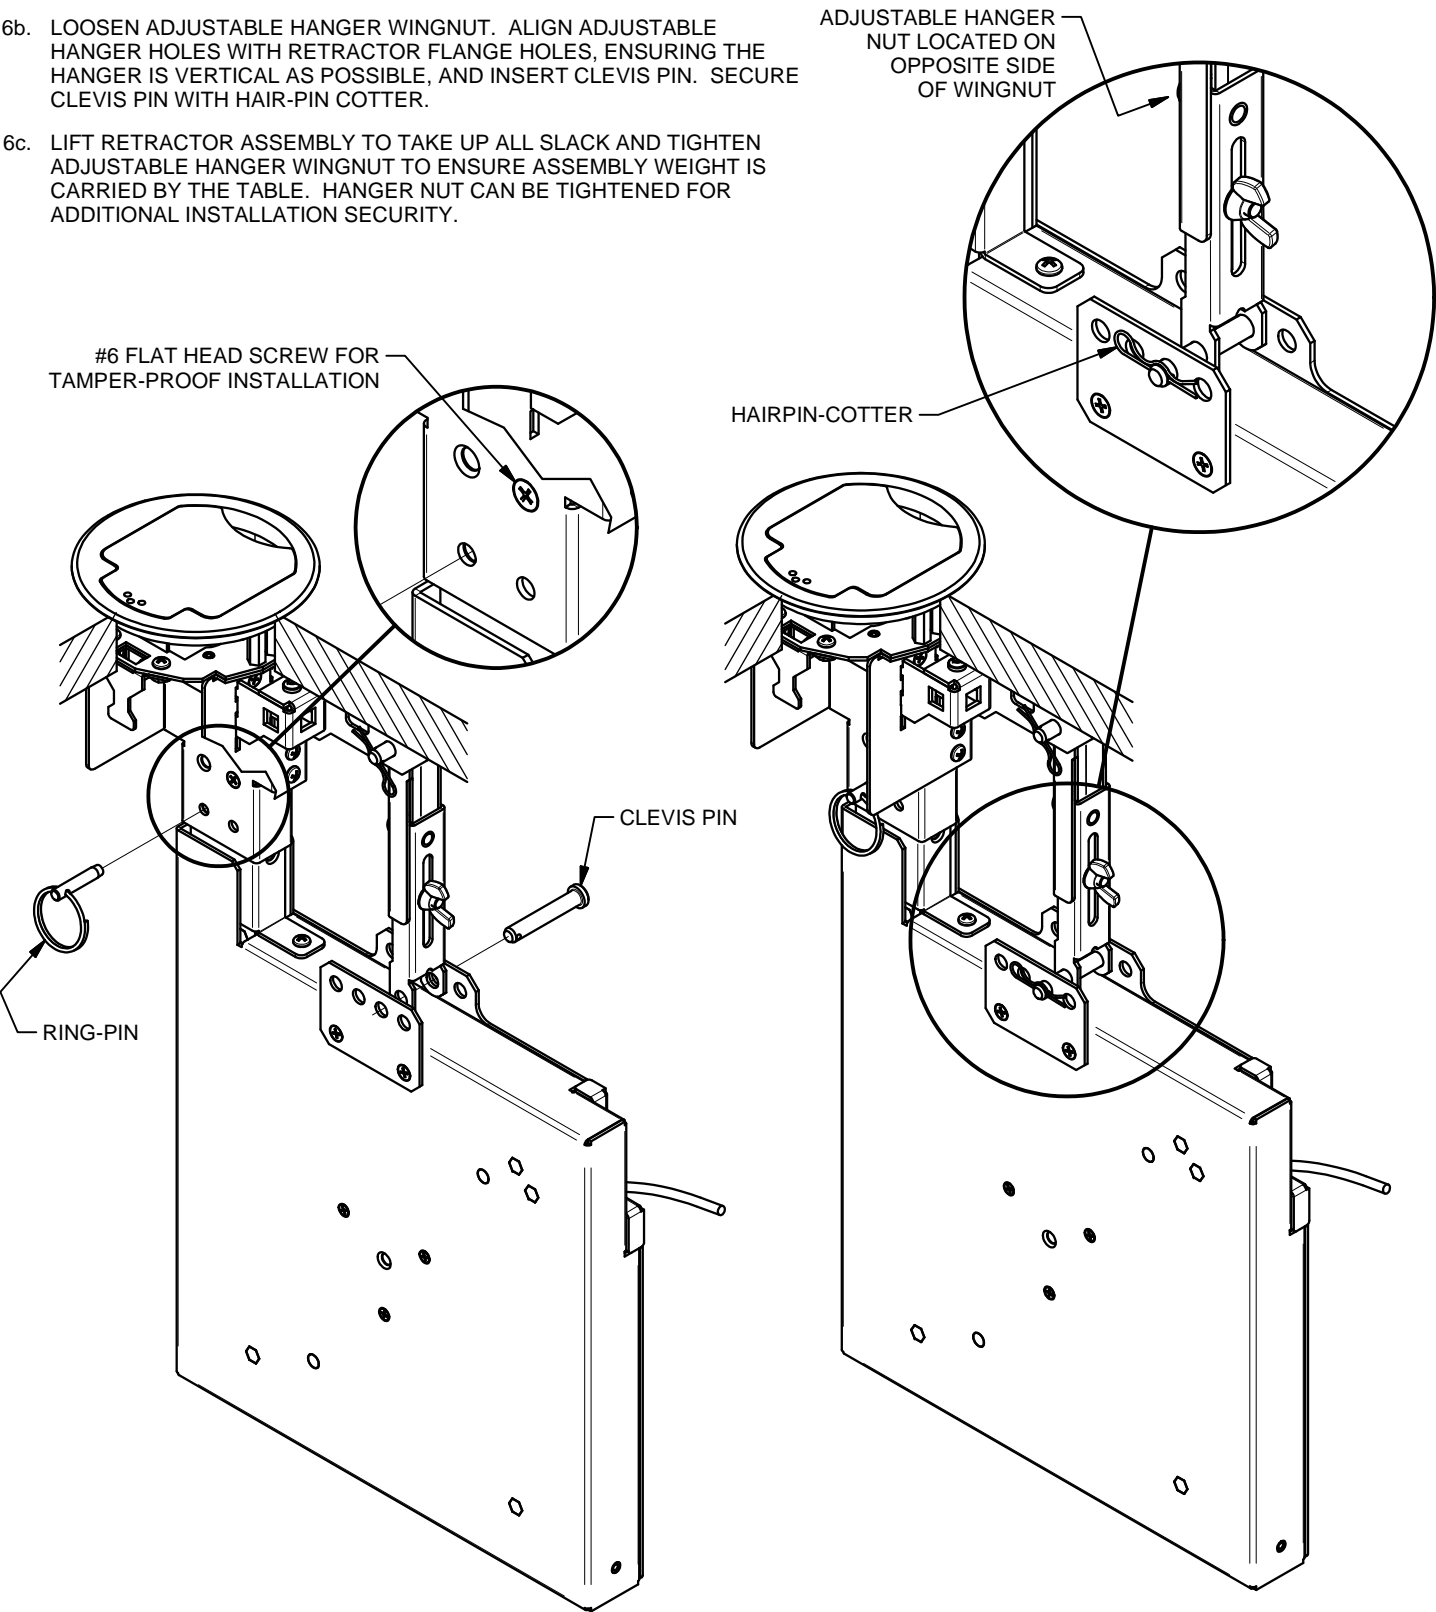


FSR T3-IPS / HV-T3 CABLE RETRACTOR INSTALLATION INSTRUCTIONS

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207


1. PRIOR TO INSTALLING T3-IPS ASSEMBLY (SOLD SEPERATELY) INTO TABLE (SEE T3-IPS INSTALLATION INSTRUCTIONS), INSERT GUIDE BRACKET INTO T3-IPS AND SECURE WITH #6 PAN HEAD SCREWS.

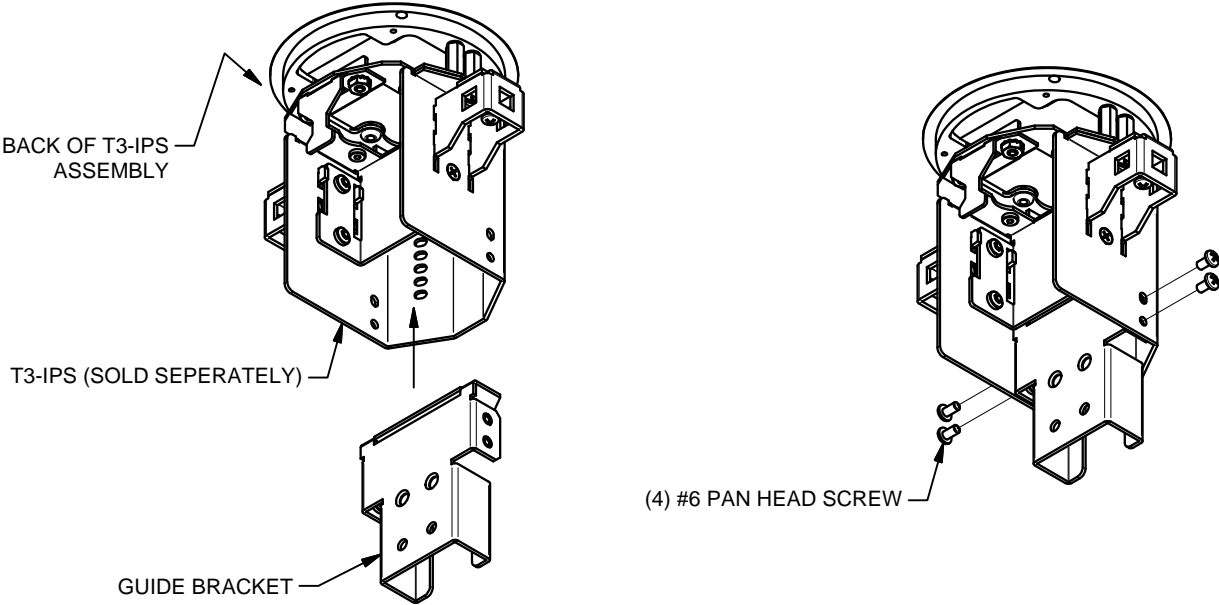


2. DETERMINE WHICH SIDE RETRACTOR WILL BE LOCATED (LEFT-SIDE MOUNTING SHOWN) AND MOUNT HANGER SUPPORT AGAINST FRONT SIDE OF T3 MOUNTING BRACKET AND CHASSIS SIDE WITH #6 HARDWARE.

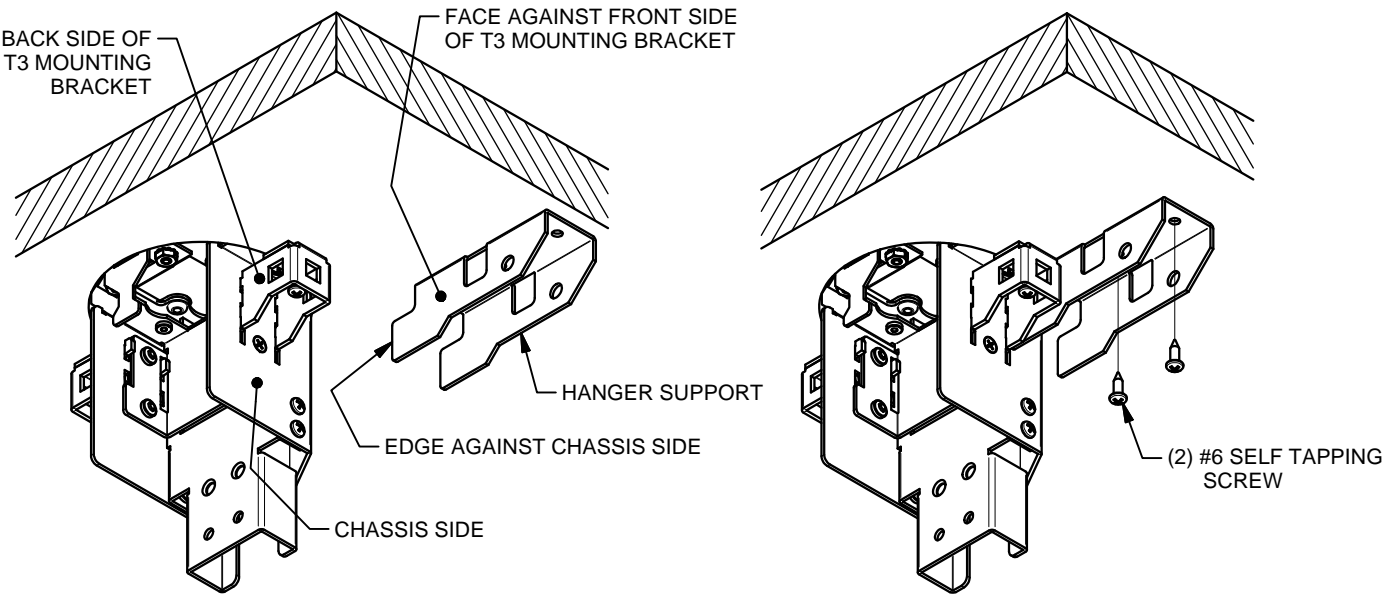

3. INSTALL ADJUSTABLE HANGER ONTO HANGER SUPPORT WITH CLEVIS PIN AND SECURE WITH HAIR-PIN COTTER.

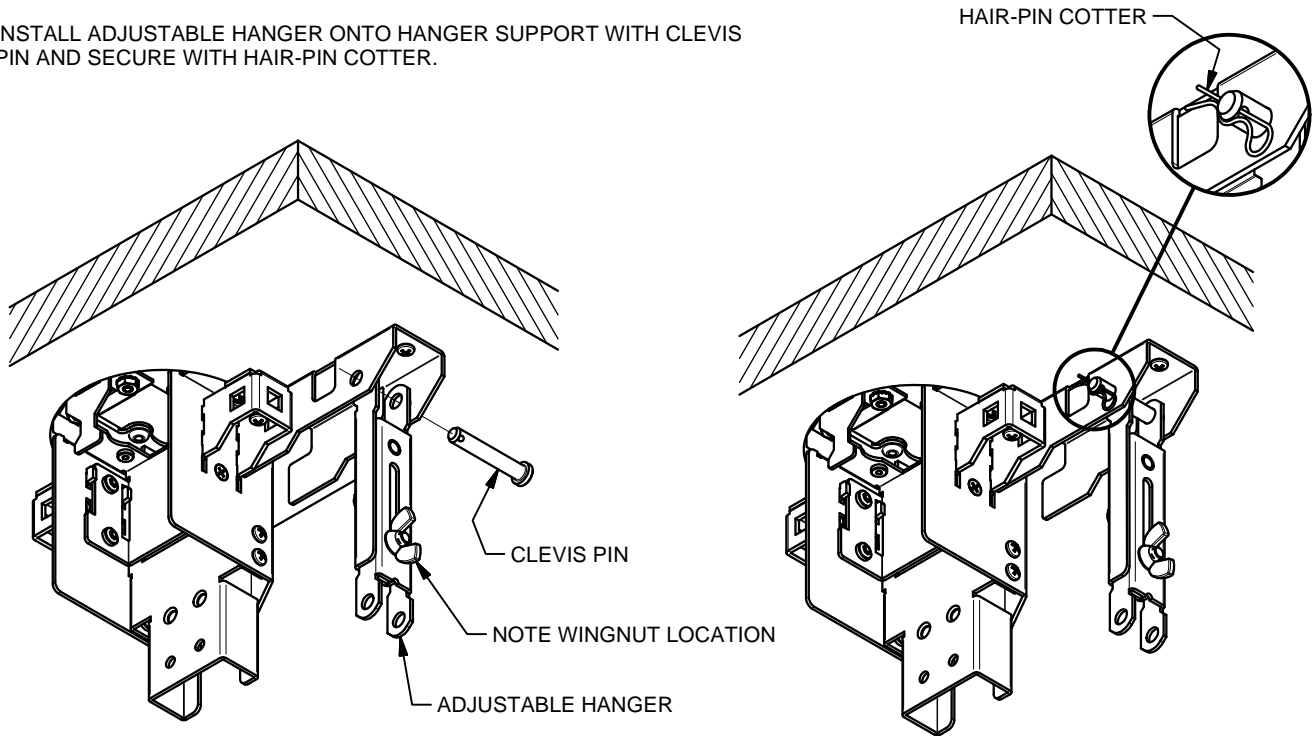

4. INSTALL NOZZLE CAPTURE AND SUPPORT BRACKETS ONTO RETRACTOR WITH #6 HARDWARE.

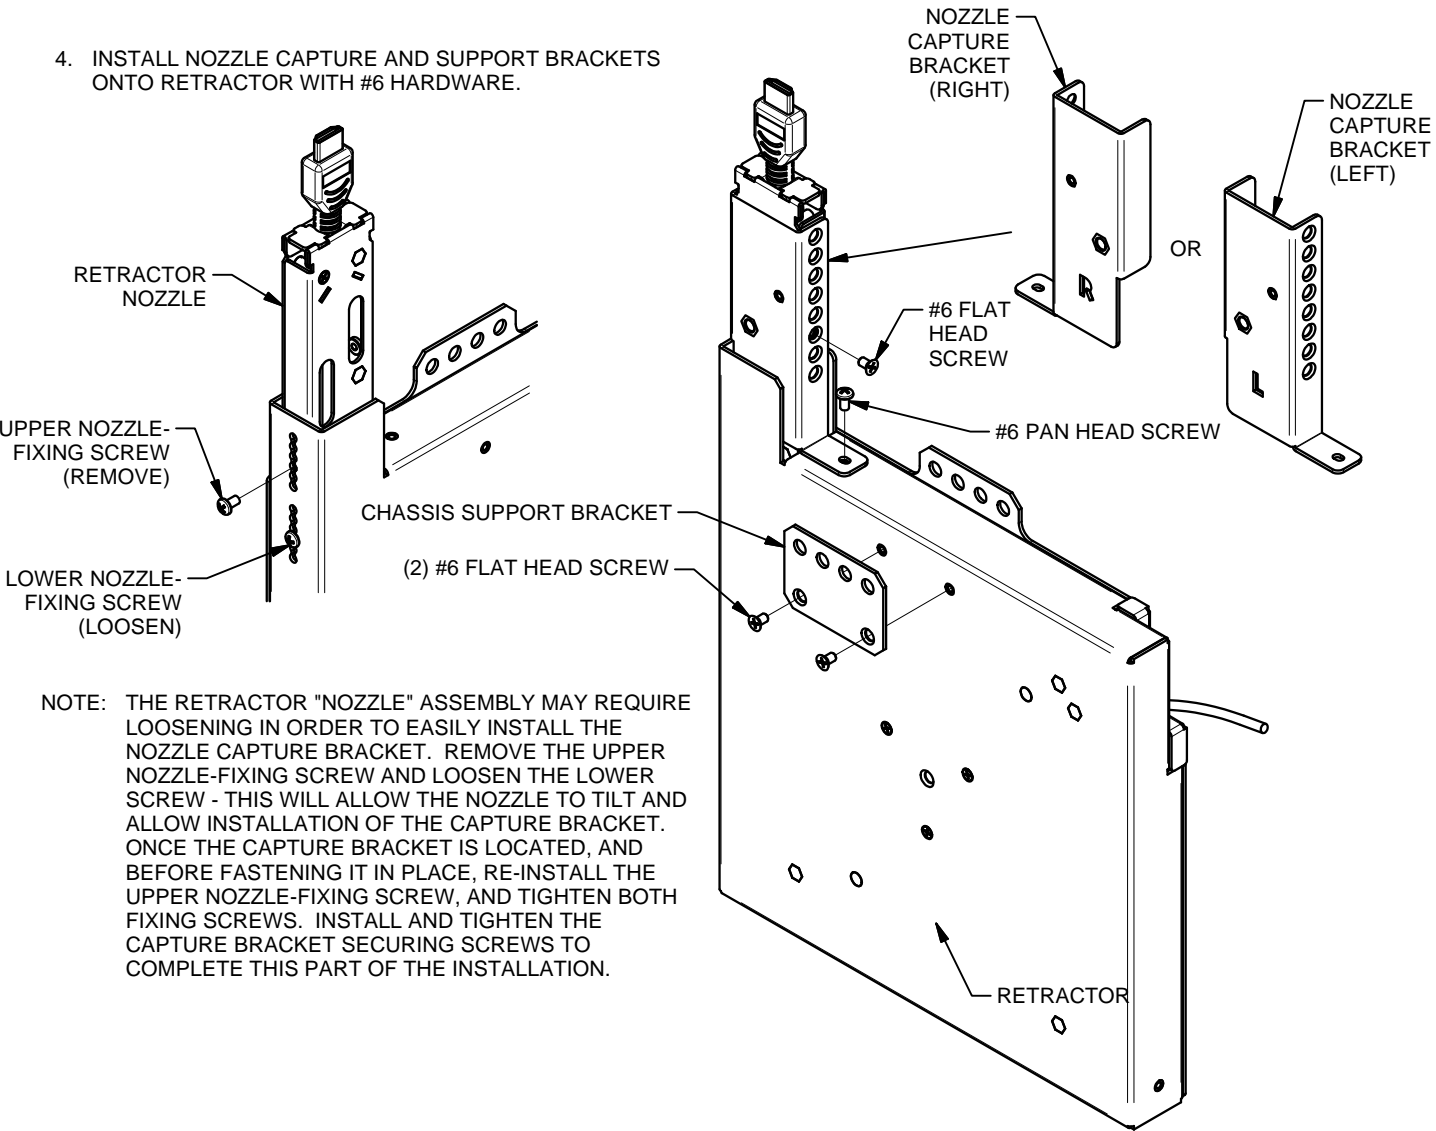

NOTE: THE RETRACTOR "NOZZLE" ASSEMBLY MAY REQUIRE LOOSENING IN ORDER TO EASILY INSTALL THE NOZZLE CAPTURE BRACKET. REMOVE THE UPPER NOZZLE-FIXING SCREW AND LOOSEN THE LOWER SCREW - THIS WILL ALLOW THE NOZZLE TO TILT AND ALLOW INSTALLATION OF THE CAPTURE BRACKET. ONCE THE CAPTURE BRACKET IS LOCATED, AND BEFORE FASTENING IT IN PLACE, RE-INSTALL THE UPPER NOZZLE-FIXING SCREW, AND TIGHTEN BOTH FIXING SCREWS. INSTALL AND TIGHTEN THE CAPTURE BRACKET SECURING SCREWS TO COMPLETE THIS PART OF THE INSTALLATION.

5. SLIDE RETRACTOR ASSEMBLY UP INTO T3-IPS ASSEMBLY.

