



INSTALL ALL RETRACTORS, PINS AND BOTTOM CHANNEL IN CHOSEN LOCATIONS BEFORE INSTALLING CLOSE-OFF.

2 RETRACTORS:

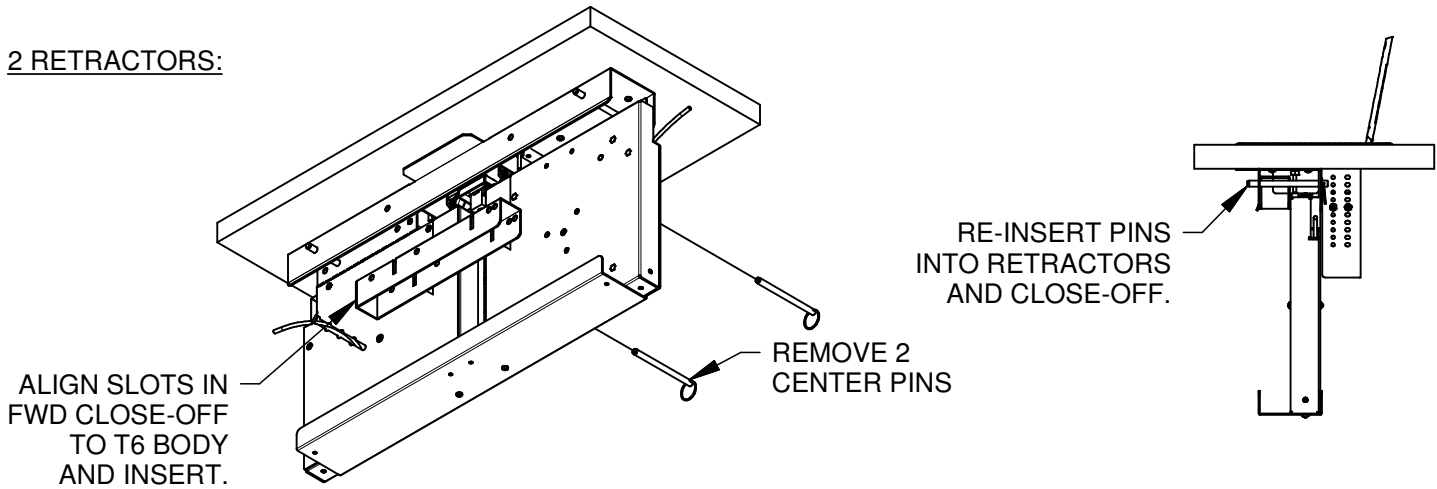

3 RETRACTORS - FWD CLOSE-OFF:

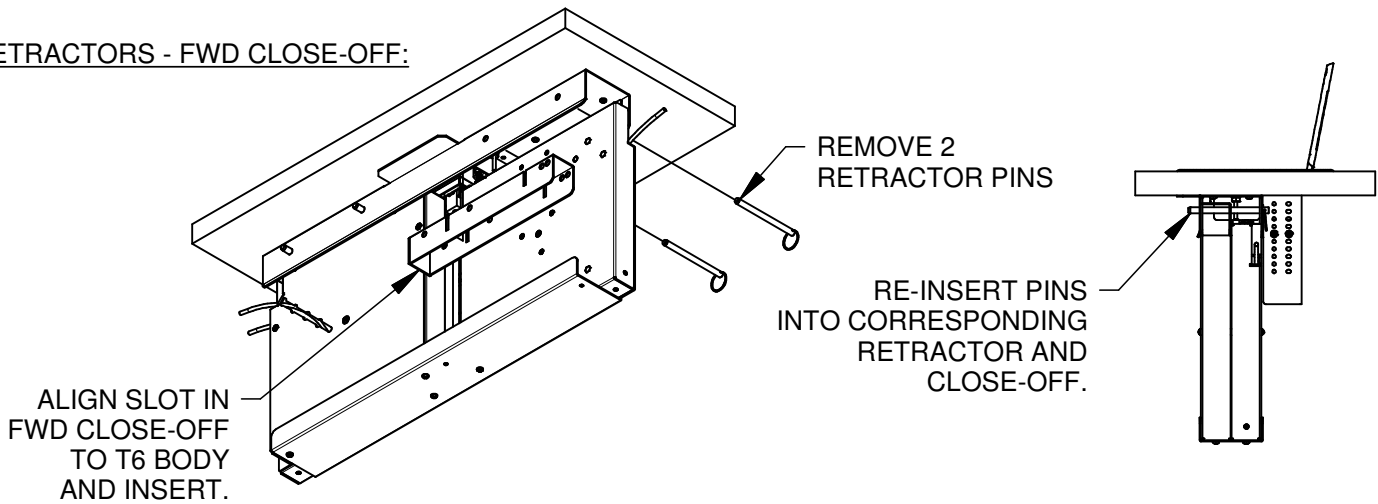

3 RETRACTORS - MID CLOSE-OFF:

