

FSR HV-T3 INSTALLATION INSTRUCTIONS 244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207

CUSTOMER TO PROVIDE

KO SLUG/PENNY/OTHER

- 1. DRILL 3.50" DIAMETER HOLE IN TABLE TOP.
- 2. INSERT HV-T3 ASSEMBLY AND ORIENT AS REQUIRED.
- 3. INSTALL MOUNTING CLAMPS TO ASSEMBLY AND SECURE TO TABLE BY SCREWING MOUNTING SCREWS TO UNDERSIDE OF TABLE.
- MAKE ELECTRICAL CONNECTIONS AS REQUIRED. ENSURE HDMI CONNECTOR CAN BE PULLED OUT 3'-0".

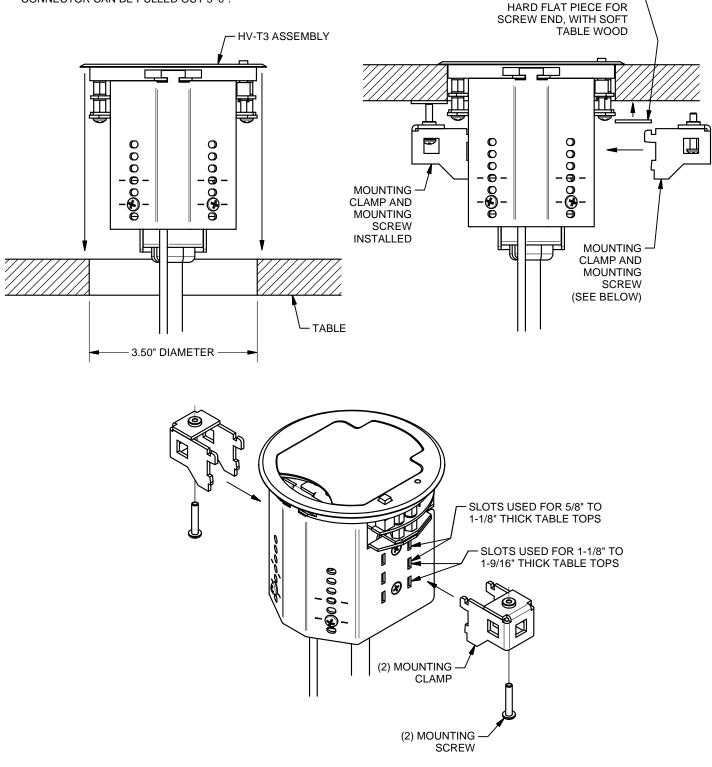

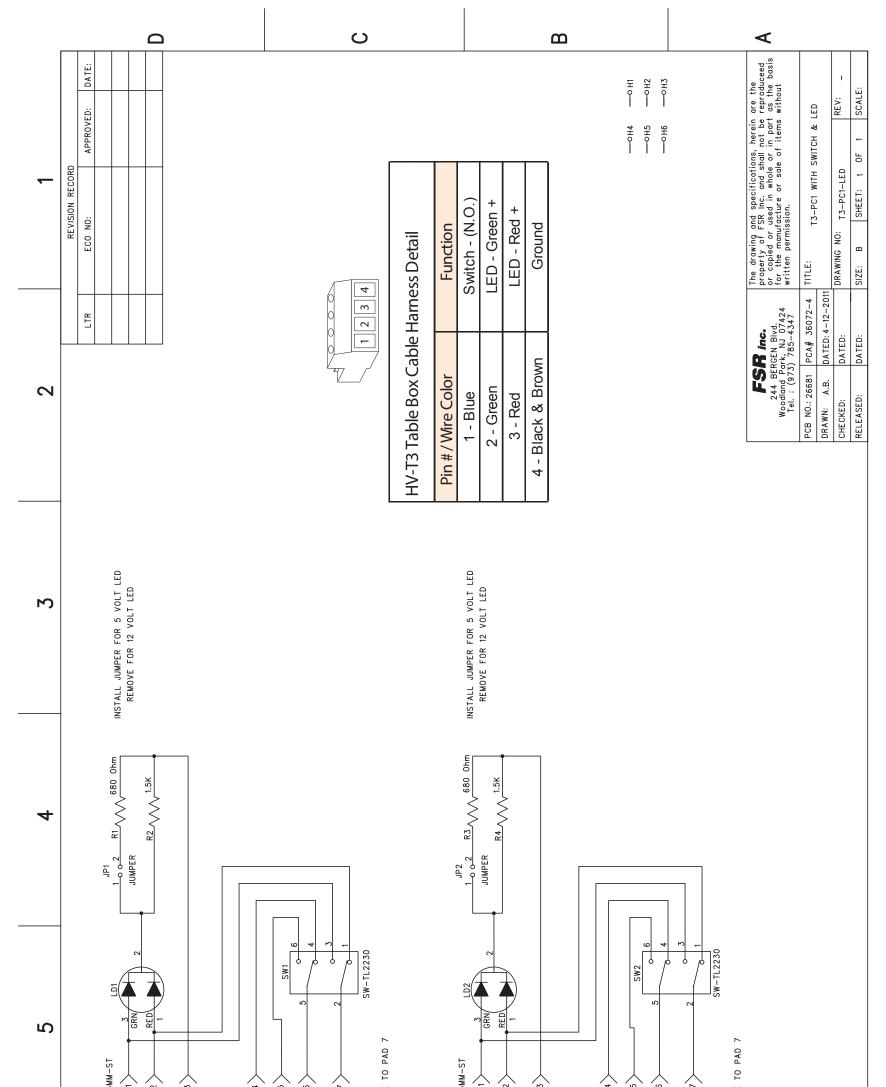

	9		
		ΤP	7P-1.25MM-
	GREEN WIRE	GRN_LED+	۲ru ۲
Ω	RED WIRE	RED_LED+	J1-2
	BLACK WIRE	LED	J1-3
	YELLOW WIRE	SW_N.C.	J1−4 ∕
	BLUE WIRE	SW_N.O.	J1-5
	BROWN WIRE	sw_com	J1-6
(ORANGE WIRE	V_LED+	-7-1L
<u>ر.</u>	FOR LED 2 AUTO OPERATION OMIT WIRES TO PADS 1+2, INS	TALL	WIRE TO
		7P	7P-1.25MM-
	GREEN WIRE	GRN_LED+	J2-1
	RED WIRE	RED_LED+	J2-2
В	BLACK WIRE	LED	J2-3
	YELLOW WIRE	SW_N.C.	J2-4
	BLUE WIRE	SW_N.O.	J2-5
	BROWN WIRE	sw_com	J2-6
	ORANGE WIRE	V_LED+	J2-7
	FOR LED 2 AUTO OPERATION OMIT WIRES TO PADS 1+2, IN	STALL	WIRE TO
A			