



DV-MFMV-74 7x1 MultiVU Seamless Windowing Switcher Manual

Based on firmware revision 1.12 and FSR1.0.0.Q



244 Bergen Blvd Woodland Park NJ 07424 • 973-785-4347 • www.fsrinc.com

PROPRIETARY INFORMATION

All information in this manual is proprietary to and the property of FSR Inc. This publication is protected by the Federal Copyright Law, with all rights reserved. No part of this document may be reproduced, transcribed, or transmitted, in any form or by any means, without prior explicit written permission from FSR Inc.

UNPACKING

The DV-MFMV-74 7x1 Switcher package includes the following items:

- DV-MFMV-74 7x1 Switcher
- IR remote control
- Rack ears
- User's manual
- AC line cord
- 8 Screws
- 11 3-Pin screw terminal



- HDMI is a trademark of HDMI licensing, LLC.
- DisplayPort
- Specifications may be changed without any notice in order to improve the function of the product.

LIMITED WARRANTY

The DV-MFSW-74 is warranted against failures due to defective parts or faulty workmanship for a period of three years after delivery to the original owner. During this period, FSR will make any necessary repairs or replace the unit without charge for parts or labor. Shipping charges to the factory or repair station must be prepaid by the owner, return-shipping charges (via UPS Ground) will be paid by FSR.

This warranty applies only to the original owner and is not transferable. In addition, it does not apply to repairs done by other than the FSR factory or Authorized Repair Stations.

This warranty shall be cancelable by FSR at its sole discretion if the unit has been subjected to physical abuse or has been modified in any way without written authorization from FSR. FSR's liability under this warranty is limited to repair or replacement of the defective unit.

FSR will not be responsible for incidental or consequential damages resulting from the use or misuse of its products. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Warranty claims should be accompanied by a copy of the original purchase invoice showing the purchase date (if a Warranty Registration Card was mailed in at the time of purchase, this is not necessary). Before returning any equipment for repair, please read the important information on service below.

SERVICE

Before returning any equipment for repair, please be sure that it is adequately packed and cushioned against damage in shipment, and that it is insured. We suggest that you save the original packaging and use it to ship the product for servicing. Also, please enclose a note giving your name, address, phone number and a description of the problem.

NOTE: all equipment being returned for repair must have a Return authorization (RMA) Number. To get a RMA Number, please call the FSR Service Department (1-800-332-FSR1). Please display your RMA Number prominently on the front of all packages.

CONTACT INFORMATION

FSR INC.

244 Bergen Blvd.

Woodland Park, NJ 07424

Phone: (973) 785-4347

Order Desk Fax: (973) 785-4207

E-mail: sales@fsrinc.com

Web Site: www.fsrinc.com

SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

SAFETY

- All the safety and user manual should be read before the appliance is operated.
- The safety and operating instructions should be retained for future reference.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this equipment near wet place.
- This product should be operated only from the type of power sources indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
- This equipment may be equipped with a 3 wire grounding-type plug, a plug having a third (grounding) pin. This pin will only fit in to a grounding type power outlet. This is a safety feature. If you are unable to insert the plug in to the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- Openings on the case are provided for ventilation and to ensure reliable operation of the equipment and to protect it from overheating. The openings should never be blocked.
- Do not use any damaged power cords or plugs, or loosed outlets, this may cause electrical shock or fire.
- Do not put heavy articles such as other equipment on this product. Keep it away from liquid, magnetic and flammable substances.

TABLE OF CONTENTS

PROPRIETARY INFORMATION	2
UNPACKING.....	2
LIMITED WARRANTY	3
SAFETY	4
DESCRIPTION	6
FEATURES.....	6
APPLICATION DIAGRAM	7
AUDIO BLOCK DIAGRAM.....	7
DIMENSIONS	8
PANEL LAYOUT AND OPERATION	9
FRONT PANEL.....	9
VGA INPUT AUTO ADJUST BEHAVIOR:.....	10
REAR PANEL	11
IR REMOTE CONTROL AND OPERATION.....	12
BUTTON LAYOUT.....	12
ON SCREEN DISPLAY (OSD)	13
IP SETTINGS.....	14
OSD	14
IP CONFIGURATION TOOL APPLICATION	15
FIRMWARE UPDATE (EXTERNAL CONTROL BOARD)	18
EMBEDDED WEB SERVER.....	19
CONTROL PORTS.....	21
RS-232 SETTINGS.....	21
ETHERNET SETTINGS	21
RS-232 SERIAL AND ETHERNET CONTROL PROTOCOL.....	22
FIRMWARE UPDATE (AUDIO AND VIDEO BOARD).....	26
SPECIFICATIONS	27

DESCRIPTION

The DV-MFMV-74 7x1 Seamless Windowing Switcher is designed to address many of the needs for the AV/IT Industry and is a great solution for the corporate, medical, education, and church/worship markets. It easily integrates with the HuddleVU FLEX collaboration system to create a powerful and cost effective solution.


The DV-MFMV-74 features 4 HDMI, 2 DisplayPort, and 1 VGA (RGB/ YPbPr) input. It is HDCP compliant with the HDMI and DisplayPort inputs supporting resolutions up to 4Kx2K 30Hz and 4Kx2K 60Hz respectively. The DV-MFMV-74's HDMI output supports resolutions up to 4Kx2K 30Hz. Each source is automatically scaled to match the optimal output resolution required to provide one large 4Kx2K 30Hz image.

The HDMI input has embedded audio along with analog stereo inputs. The DisplayPort and VGA have an analog stereo input. The HDMI inputs support up to 7.1 multichannel embedded audio. The audio can follow the video during switching or can be switched separately in breakaway mode. Audio outputs are available either embedded on the HDMI port, via the multi-channel digital coaxial, or via the analog out connectors. The 1 rack unit high windowing switcher can be controlled from the front panel, via RS-232, IR, Telnet or with the integrated Web Server.


FEATURES

- Upscaler and downscaler 7x1 seamless windowing switcher
- 4 x HDMI, 2 x DisplayPort, 1 x RGB/YPbPr (HD-15)
- HDMI up to 4Kx2K 30Hz and DisplayPort up to 4Kx2K 60Hz
- HDMI output supports resolutions up to 4Kx2K 30Hz
- Each source input is automatically scaled to match the optimal output resolution
- Any of the 7 sources can be viewed in a single, dual, triple, or quad window layout
- Seamless rapid switching between any of the 7 inputs
- Each input also has an unbalanced stereo audio input via captive screw terminals
- Supports multiple-channel HDMI and eight-channel analog outputs
- Easy-to-use front panel control, Web Server, IR, RS-232 and Telnet
- Can be controlled via FSR's FLEX Touch Panel Control System with pre-made templates available
- Can be easily integrated into FSR's HuddleVU FLEX Collaboration Systems
- 1 U Height, 19" width standard enclosure rack mountable design
- VGA input Auto Adjust


APPLICATION DIAGRAM

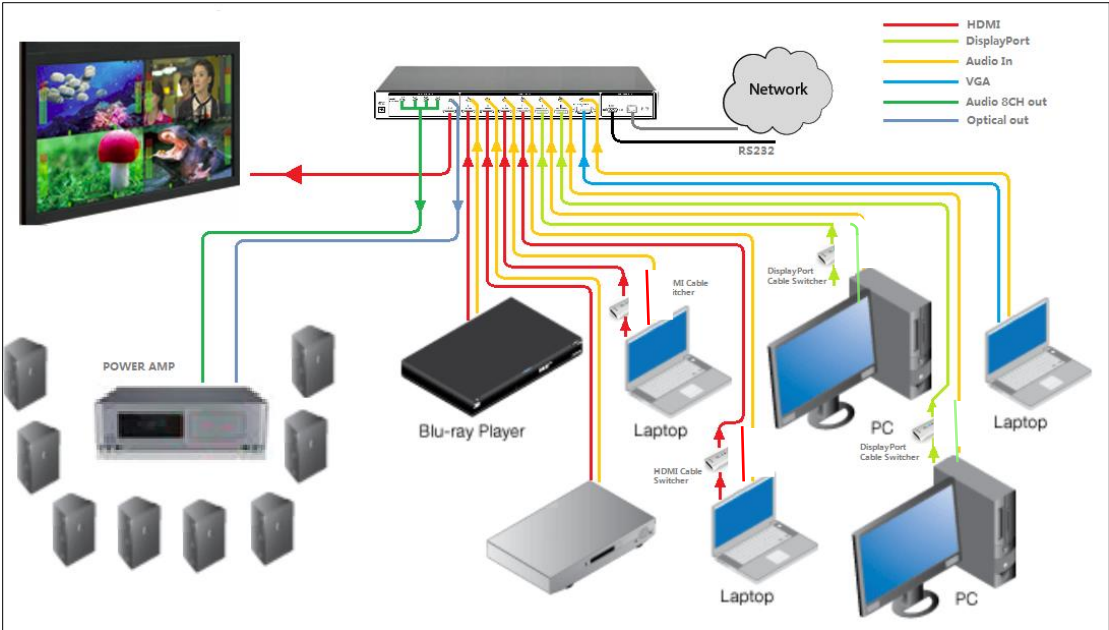

AUDIO BLOCK DIAGRAM

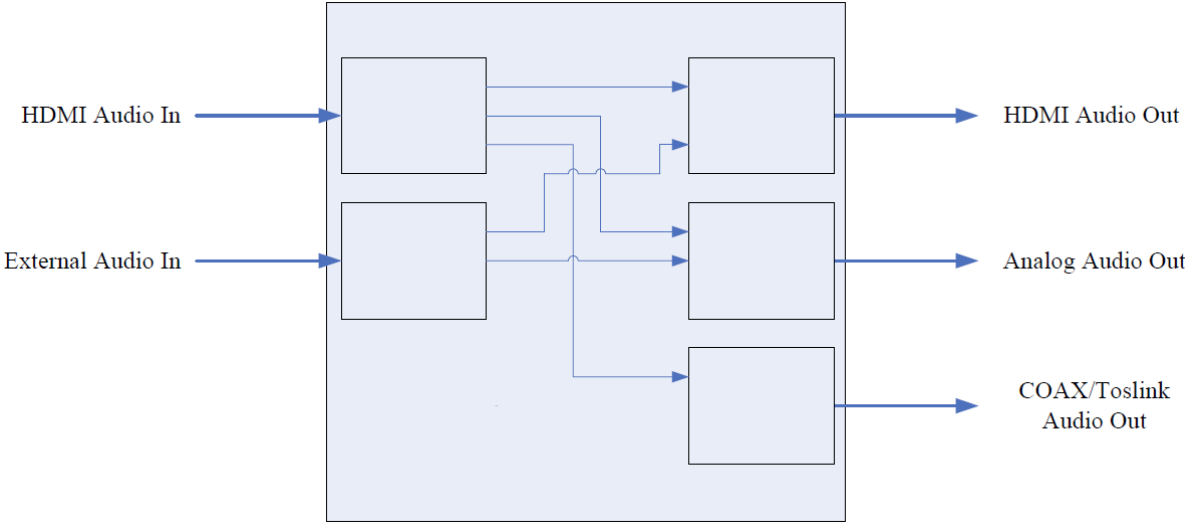


DIMENSIONS

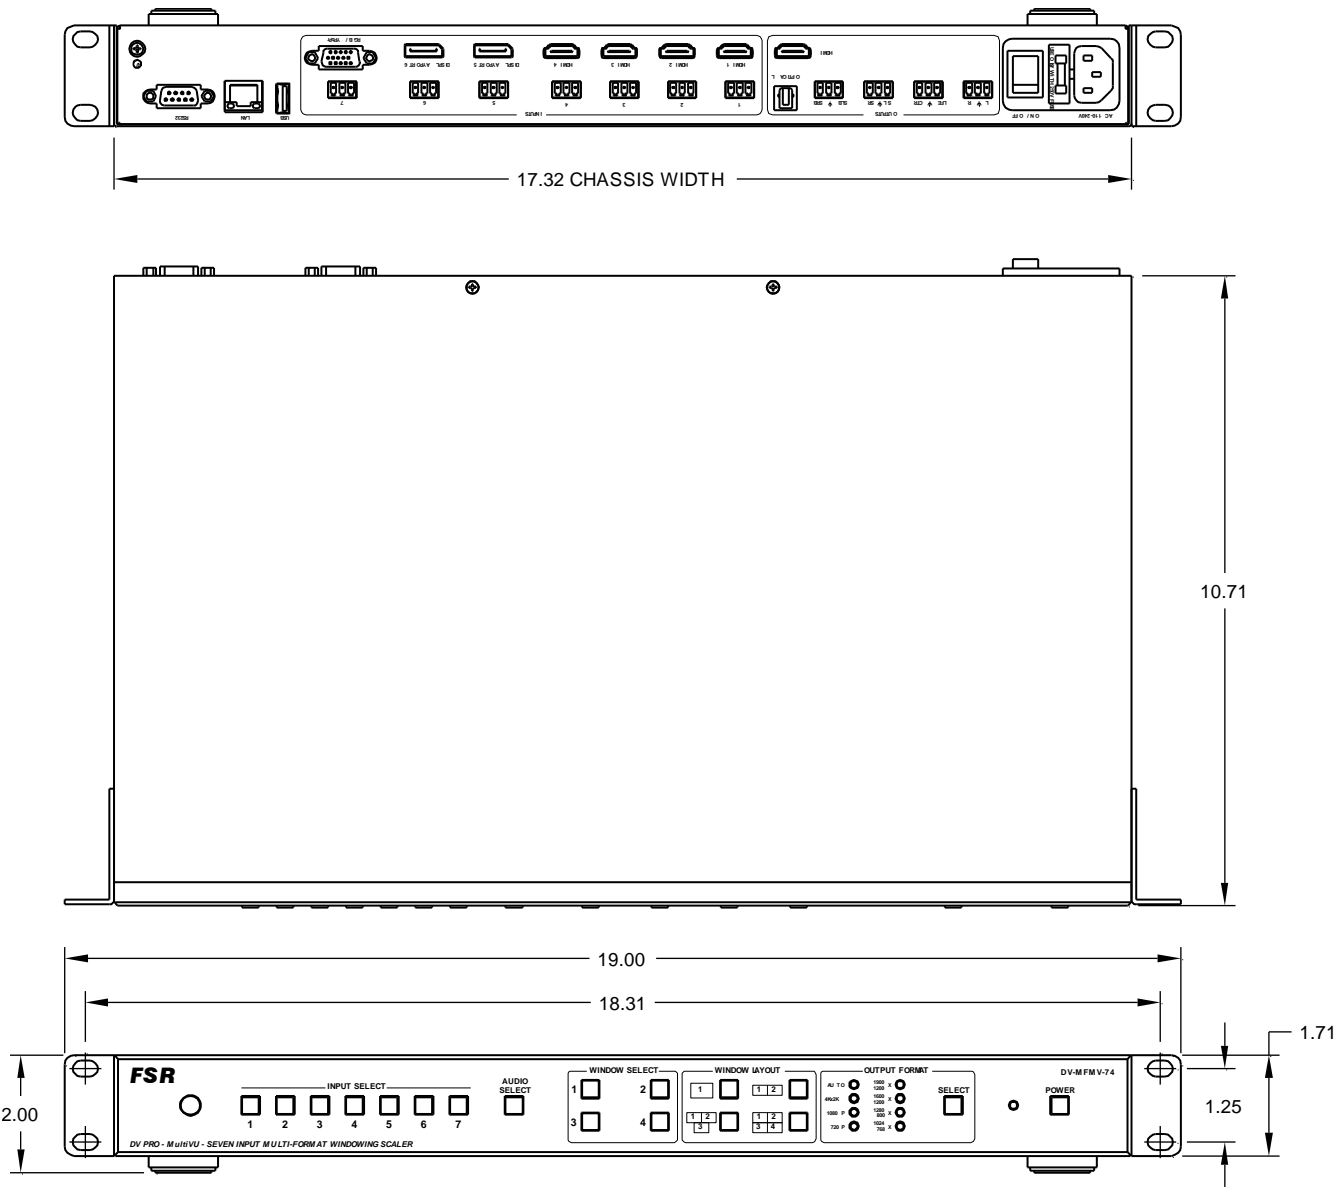

PANEL LAYOUT AND OPERATION

Front Panel

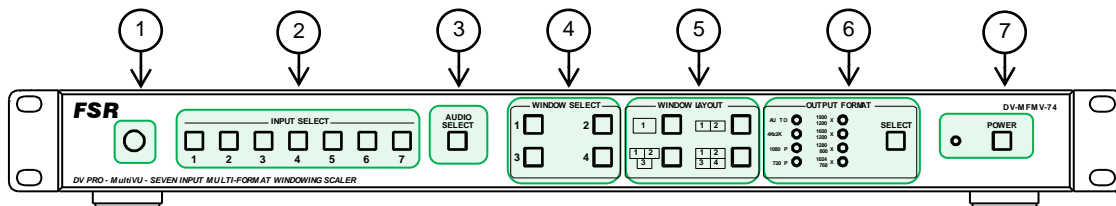


1	IR sensor
2	Input selection NOTE: The VGA auto adjust command can be executed by pressing and holding the input 7 switch for 3 seconds. Also see "VGA input Auto Adjust behavior" section.
3	Audio selection Press <i>Audio select</i> → <i>Input Select</i>
4	Window selection <div data-bbox="669 892 1055 1115" data-label="Diagram"> </div> Press the desired <i>Window Select group</i> → <i>Input Select button</i> Press <i>Window Select 1</i> → <i>Input Select 4</i> Press <i>Window Select 2</i> → <i>Input Select 3</i>
5	Window layout <div data-bbox="651 1341 1075 1547" data-label="Diagram"> </div> Press to select a window type
6	Output format Select and Indicator Auto (Display's native resolution) → 4Kx2K 30Hz → 1920x1080 60Hz → 1280x720 60Hz → 1920x1200 60Hz → 1600x1200 60Hz → 1280x800 60Hz → 1024x768 60Hz

7	Power ON and OFF (Standby) NOTE: To reset to factory default, press and hold Input Select 5 during the power up cycle until the front panel LEDs blink.
---	--

VGA input Auto Adjust behavior:

The DV-MFMV-74 switcher will automatically adjust to new VGA sources when they are first connected. The process will take several seconds during which time the image will move around the screen until the optimal scaler settings are determined. Once a particular source is learned, the switcher will recognize it and readjustment will not be necessary. Up to 10 unique sources can be stored in the unit's memory, after which additional sources will result in one of the others being overwritten. If for any reason the image does not display correctly, the auto-adjust process can be triggered manually by pressing and holding the input 7 switch for 3 seconds.

Rear Panel

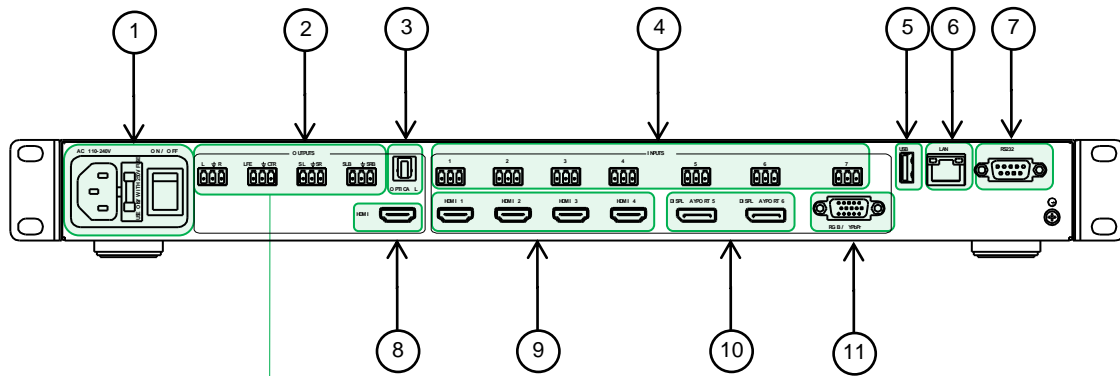




Audio channel	Analog audio channel							
	1	2	3	4	5	6	7	8
2.0	L	R	—	—	—	—	—	—
2.1	L	R	LFE	—	—	—	—	—
5.1	FL	FR	LFE	FC	RL	RR	—	—
7.1	FL	FR	LFE	FC	RL	RR	RLC	RRC

1	Power cord receptacle and power switch
2	Analog audio outputs
3	Optical audio output
4	Analog audio inputs
5	USB service port
6	LAN
7	RS-232
8	HDMI output
9	HDMI inputs
10	DisplayPort inputs
11	VGA (RGB/YPbPr) input





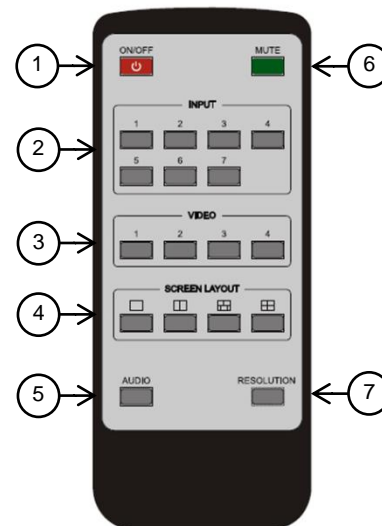



IR REMOTE CONTROL AND OPERATION

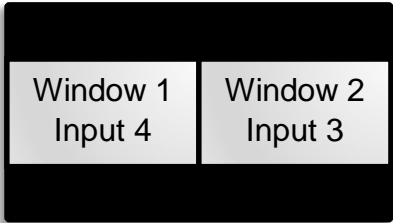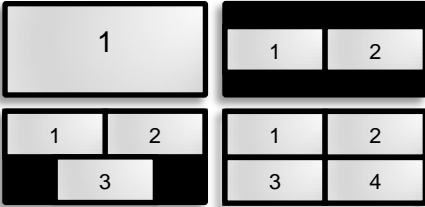Button layout



1	Power ON and OFF (Standby)
2	Input selection
3	<p>Window selection</p>  <p>To assign an input to a window press <i>Video (Window number) → Input</i> Press <i>Video 1 → Input 4</i> Press <i>Video 2 → Input 3</i></p>
4	<p>Window layout</p> 
5	<p>Audio selection</p> <p>Press <i>Audio → Input</i></p>
6	Mute and unmute
7	<p>Output timing</p> <p>Auto (Display's native resolution) → 4Kx2K 30Hz → 1920x1080 60Hz → 1280x720 60Hz → 1920x1200 60Hz → 1600x1200 60Hz → 1280x800 60Hz → 1024x768 60Hz</p>

ON SCREEN DISPLAY (OSD)

	Selected input and its input resolution
	Selected input state and DV-MFMV-74's IP address
	VGA auto adjust
	5 Volume
	DV-MFMV-74's IP address and port number
	Mute
	Unmute
	IMPORTANT: Do not power OFF or remove the USB drive during the firmware upgrade.

IP SETTINGS

There are two methods to obtain the IP address:


1. Obtain the IP address and port number via the information from the on-screen display (OSD).
2. Obtain the IP address and port number via the IP CONFIGURATION TOOL APPLICATION.

The following presents the two methods:

OSD


To Obtain the IP address and port number via the information from the OSD:

Whether DV-MFSW-74 is in single-window mode or in multiple window mode, the IP address and port number can always be obtained from Window 1. When there is no signal, the following OSD in the window will be displayed:



HDMI2 not connected
IP: 192.168.0.10

Or when an image is displayed, the IP information is displayed in the area above the middle of the window.



IP: 192.168.0.10
Port: 23

The IP address in this example, is 192.168.0.1 and the port number is 23.

IP CONFIGURATION TOOL APPLICATION


To obtain the IP address and port number via the IP CONFIGURATION TOOL APPLICATION:

Download the application "FSR_DV_71_74_Switcher.exe" file from the FSR Document Library at www.fsrinc.com.




NOTE: Make sure the PC and DV-MFMV-74 are on the same network.

Run the application on the PC to show the main screen:

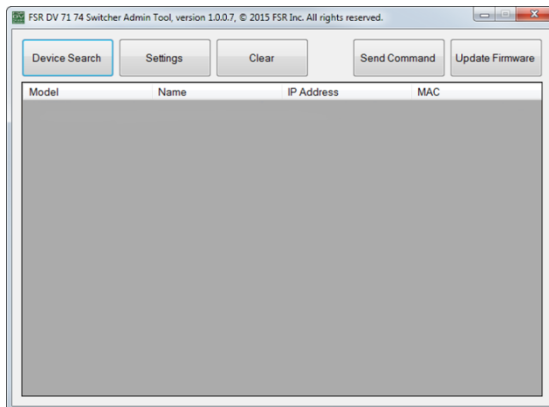


Click *Device Search*, the following device list is shown. Select the device, and click *Settings*

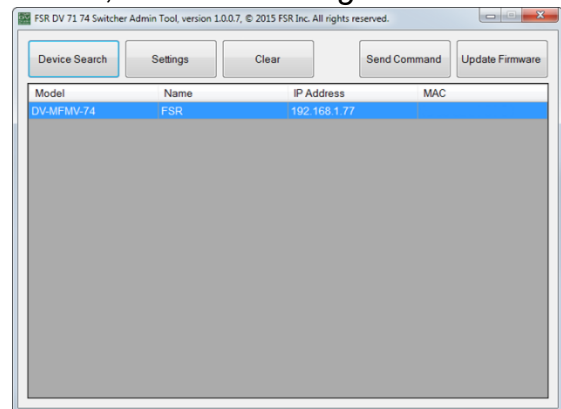

The screen defaults to the *Status* tab where the DV-MFMV-74's information is shown.

The DV-MFMV-74 settings can be returned to factory default by clicking *Factory Default*.

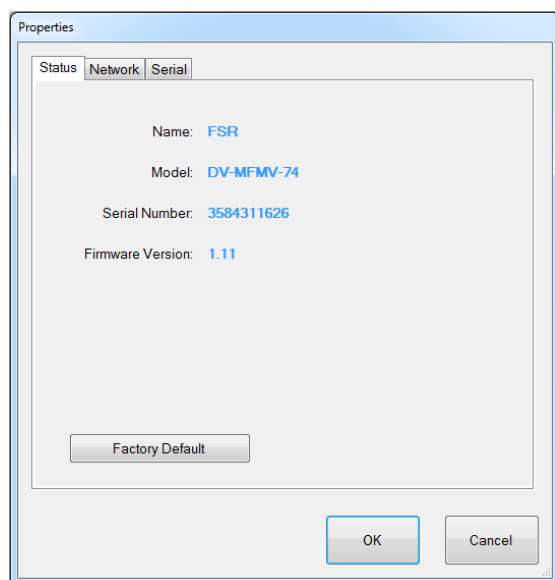


The 'Properties' dialog box has three tabs: 'Status', 'Network', and 'Serial'. The 'Status' tab is selected. It displays the following information:

- Name: FSR
- Model: DV-MFMV-74
- Serial Number: 3584311626
- Firmware Version: 1.11

At the bottom left of the main content area is a button labeled 'Factory Default'. At the bottom right are 'OK' and 'Cancel' buttons.

Click the *Network* tab to view the DV-MFMV-74's IP information. DHCP is enabled by default. The static IP address can be entered manually by disabling the DHCP via the pulldown menu.

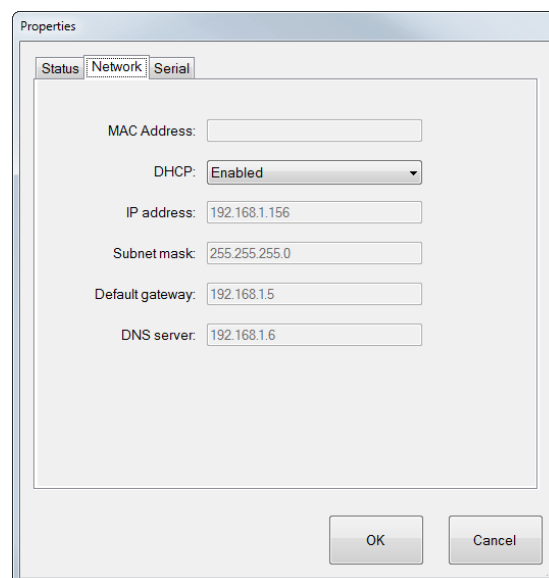


The 'Properties' dialog box has three tabs: 'Status', 'Network', and 'Serial'. The 'Network' tab is selected. It displays the following network configuration fields:

- MAC Address: [text box]
- DHCP: Enabled (pulldown menu)
- IP address: 192.168.1.156
- Subnet mask: 255.255.255.0
- Default gateway: 192.168.1.5
- DNS server: 192.168.1.6

At the bottom right are 'OK' and 'Cancel' buttons.

The *Serial* tab is an informational screen that will display the DV-MFMV-74 serial port settings. The settings are fixed at 9600, 8, 1, None and None.

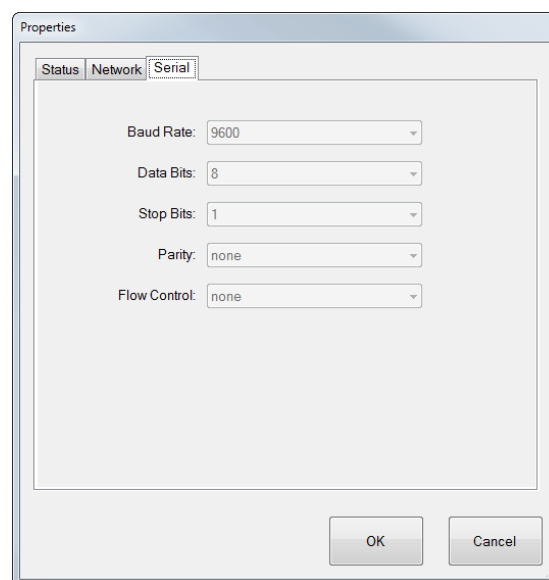


The 'Properties' dialog box has three tabs: 'Status', 'Network', and 'Serial'. The 'Serial' tab is selected. It displays the following serial port configuration fields:

- Baud Rate: 9600
- Data Bits: 8
- Stop Bits: 1
- Parity: none
- Flow Control: none

At the bottom right are 'OK' and 'Cancel' buttons.

Single commands may be sent to change the display capabilities of the unit by clicking on *SEND COMMAND*.

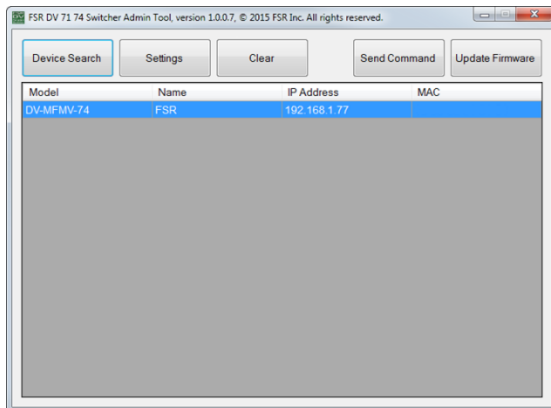


Select either *Ethernet* or *Serial* radio button


Select the appropriate COM port or Ethernet address.

Then either select a predefined command or enter a user defined command.

Click the *SEND* button to send the command:

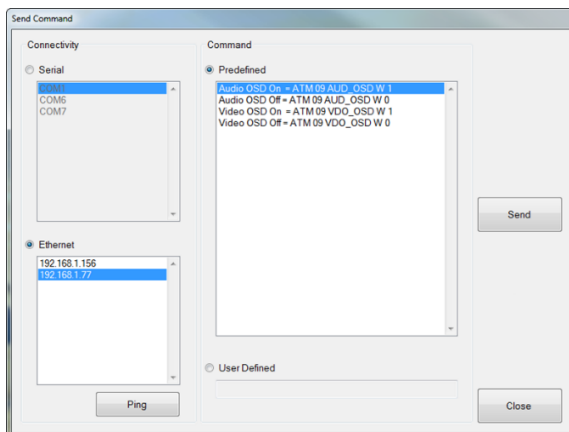

FIRMWARE UPDATE (EXTERNAL CONTROL BOARD)

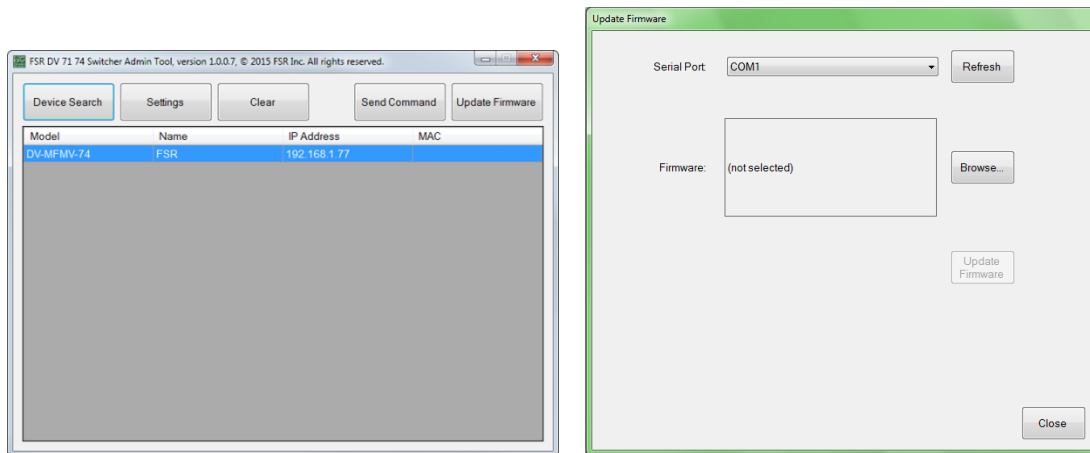

Download the update file from the FSR website doc library.

(Example: FSR_741_20xx_xxxx_xxx.frm).

1. Connect a Serial straight-through cable to the DV-MFMV-74's RS-232 port. If present, disconnect the Ethernet cable from the LAN port.
2. Turn on the DV-MFMV-74 and wait for it to finish booting up before proceeding to the next step.
3. Click on "Update Firmware".
4. Select a Serial Port.
5. Browse for the location of the firmware file.
6. Click on "Update Firmware" and wait for its completion.
7. Power cycle the DV-MFMV-74 by the rear panel switch.

The current firmware version can be obtained from the "Status" tab.


IMPORTANT: Do not power OFF or remove the Serial cable during the firmware upgrade.

EMBEDDED WEB SERVER

DV-MFSW-74 can be controlled via a Web browser, which contains General, Advanced and Network settings. For more information about how to obtain the IP address, see the section on “IP SETTINGS”.

For example, the obtained IP address is 192.168.0.145

Type 192.168.0.145 in the address bar of the web browser.



DV-MFMV-74

DV PRO - MultiVU - Seven Input Multi-Format Windowing Scaler

General

Advanced

Network

General

Screen Layout Single Submit

Video Input: W1 1 W2 2 W3 3 W4 4 Submit

Ratio: W1 Normal W2 Normal W3 Normal W4 Normal Submit

Audio Input 1 Audio Volume (0~10) 8 Submit

Audio Input Config:

1 Auto 2 Auto 3 Auto

4 Auto 5 Auto 6 Auto Submit

Output Timing AUTO Submit

FSR Inc. 244 Bergen Boulevard, Woodland Park, NJ 07424 • Tel 973-785-4347 • Fax 973-785-4207 • E-Mail: sales@fsrinc.com

©2015 FSR Inc. All Rights Reserved



DV-MFMV-74

DV PRO - MultiVU - Seven Input Multi-Format Windowing Scaler

General

Advanced

Network

Advanced

Power Switch Power Saving (0~60min)

Audio Mute Audio Delay (0~10)

☐ Auto position ☐ Restore to default

FSR Inc. 244 Bergen Boulevard, Woodland Park, NJ 07424 • Tel 973-785-4347 • Fax 973-785-4207 • E-Mail: sales@fsrinc.com

©2015 FSR Inc. All Rights Reserved



DV-MFMV-74

DV PRO - MultiVU - Seven Input Multi-Format Windowing Scaler

General

Advanced

Network

Advanced

Power Switch Power Saving (0~60min)

Audio Mute Audio Delay (0~10)

☐ Auto position ☐ Restore to default

Unit Firmware Version: FSR1.0.0.L_CL732

GUI Version: 1.11_CL633

FSR Inc. 244 Bergen Boulevard, Woodland Park, NJ 07424 • Tel 973-785-4347 • Fax 973-785-4207 • E-Mail: sales@fsrinc.com

©2015 FSR Inc. All Rights Reserved

CONTROL PORTS

To control the DV-MFMV-74 use the RS-232 or LAN port but not both at the same time.


RS-232 SETTINGS

RS-232 Settings	
Baud rate	9600
Data bits	8
Parity	None
Stop bits	1
Flow control	None

DTE	DB-9	DCE
Computer	Pin	DV-MFMV-74
Rx	2	Tx
Tx	3	Rx
Ground	5	Ground

NOTE: For serial control, use a straight-through cable.

ETHERNET SETTINGS

DHCP	ON (Default)
Telnet port	23 (Default)
Speed	10/100Mbps
	Yellow = Link Green = Speed/Activity at 100Mbps

RS-232 Serial and Ethernet Control Protocol

Settings				Command				Reply			
Audio delay				ATM 09 AUD_DLY W X				09 AUD_DLY W X			
Ex: Audio delay OFF				ATM 09 AUD_DLY W 0				09 AUD_DLY W 0			
Audio delay request				ATM 08 AUD_DLY R				08 AUD_DLY R AUD_DLY X			
Audio delay											
X	0	1	2	3	4	5	6	7	8	9	A
	OFF	40ms	80ms	120ms	160ms	200ms	240ms	280ms	320ms	360ms	400ms
Audio input configuration				ATM 0A AUD_MOD W X Y				0A AUD_MOD W X Y			
Ex: Input 2 set to external				ATM 0A AUD_MOD W 2 1				0A AUD_MOD W 2 1			
Audio input configuration request				ATM 09 AUD_MOD R X				09 AUD_MOD R X Port X Audio: Y			
X = Input (1-6) Y = (0 = Auto or 1 = External) Auto: Analog or HDMI audio (priority) External: Only analog audio											
Audio OSD				ATM 09 AUD_OSD W X				09 AUD_OSD W X			
Ex. Audio OSD OFF				ATM 09 AUD_OSD W 0				09 AUD_OSD W 0			
Audio OSD request				ATM 08 AUD_OSD R				08 AUD_OSD R AUD_OSD X			
X = (0 = OFF and 1 = ON)											
Audio select				ATM 09 ADO_IPT W X				09 ADO_IPT W X			
Ex: Audio input 2				ATM 09 ADO_IPT W 2				09 ADO_IPT W 2			
Audio input request				ATM 08 ADO_IPT R				08 ADO_IPT R ADO_IPT X			
X = Input (1-7)											
Copy display's EDID				ATM 09 EDI_CPY X Y				09 EDI_CPY X Y			
Ex: Copy display's EDID to input 4				ATM 09 EDI_CPY 1 4				09 EDI_CPY 1 4			
X = Output (1 = Main output or 2 = Second output if applicable) Y = Input (1-7)											
EDID presets				ATM 0B EDI_POR W X C Y				0B EDI_POR W X C Y			
Ex: Assign EDID preset 3 to input 1				ATM 0B EDI_POR W 1 C 3				0B EDI_POR W 1 C 3			
X = input (1-7)											
EDID presets											
Y	1			2			3				
	4kx2K 30Hz 7.1Ch			4kx2K 30Hz 2Ch			1920x1080 60Hz 7.1Ch				
	4			5			6				
	1920x1080 60Hz 2Ch			1920x1080 60Hz (VGA)			4Kx2K 60Hz (DisplayPort)				

Settings	Command	Reply		
Firmware version request	ATM 08 CSW_VER W	08 CSW_VER W X		
Ex: X = FSR1.0.0.H Data:2015.07.15				
HDCP input	ATM 09 IPT_DCP W X	09 IPT_DCP W X		
Ex: HDCP input ON	ATM 09 IPT_DCP W 1	09 IPT_DCP W 1		
X = (0 = OFF and 1 = ON)				
HDCP output	ATM 0A HDO_HDP W X Y	0A HDO_HDP W X Y		
Ex: HDMI 1 HDCP output ON	ATM 0A HDO_HDP W 1 0	0A HDO_HDP W 1 0		
HDCP output request	ATM 08 HDO_HDP R	08 HDO_HDP R HDMI_1_HDCP: Z HDMI_2_HDCP: Z		
X = Output (1 = Main output or 2 = Second output if applicable) Y = (0 = ON or F = OFF) Z = ON or OFF HDMI_1_HDCP = Main output HDMI_2_HDCP = Second output if applicable				
HDMI output audio mute	ATM 09 AUD_OPT W X	09 AUD_OPT W X		
Ex: HDMI audio output mute ON	ATM 09 AUD_OPT W 1	09 AUD_OPT W 1		
HDMI output audio mute request	ATM 08 AUD_OPT R	08 AUD_OPT R AUD_OPT X		
X = (0 = Mute OFF or 1 = Mute ON)				
Master audio mute	ATM 09 AUD_MUT W X	09 AUD_MUT W X		
Ex: Master audio mute OFF	ATM 09 AUD_MUT W 0	09 AUD_MUT W 0		
Master audio mute request	ATM 08 AUD_MUT R	08 AUD_MUT R AUD_MUT X		
X = (0 = Mute OFF or 1 = Mute ON)				
Output timing	ATM 09 OPT_TIM W X	09 OPT_TIM W X		
Ex: 1920x1080 60Hz	ATM 09 OPT_TIM W 3	09 OPT_TIM W 3		
Output timing request	ATM 08 OPT_TIM R	08 OPT_TIM R OPT_TIM X		
Output timing				
X	1	2	3	4
	Auto (Display's native resolution)	4kx2k 30Hz	1920x1080 60Hz	1280x720 60Hz
	5	6	7	8
	1920x1200 60Hz	1600x1200 60Hz	1280x800 60Hz	1024x768 60Hz
Power	ATM 09 POW_CRL W X	09 POW_CRL W X		
Ex: power ON	ATM 09 POW_CRL W 1	09 POW_CRL W 1		
Power state request	ATM 08 POW_CRL R	08 POW_CRL R POW_CRL X		
X = (0 = OFF (Standby) or 1 = ON)				
• The Power ON command is the only command honored if the scaler switcher is OFF (Standby).				
• The entire Power ON command via Ethernet must be contained within a single TCP/IP packet.				

Settings	Command	Reply																		
Power save	ATM 0A POW_SAV W XX	0A POW_SAV W XX																		
Ex: Power save set to 30 minutes	ATM 0A POW_SAV W 1E	0A POW_SAV W 1E																		
Power save request	ATM 08 POW_SAV R	08 POW_SAV R POW_SAV R XX																		
XX = (00 – 3C), 00 = OFF and 3C = 60 minutes • Convert the decimal value to Hex and use the result as ASCII characters. Ex. 30 minutes = 1E (ASCII) • The scaler switcher will turn OFF (Standby) at the specified time if there is no video present on all the windows and it will turn ON automatically if there is video present on any window.																				
Restore to factory default	ATM 08 RST_SET W	08 RST_SET W																		
Factory default <table> <tr> <td>Audio delay OFF</td><td>Audio input configuration Auto</td><td>Audio OSD ON</td></tr> <tr> <td>Audio selected 1</td><td>DHCP ON</td><td>Input EDID HDMI 1-4: 4Kx2K 30Hz 7.1Ch DisplayPort 5-6: 4Kx2K 60Hz VGA 7: 1920x1080 60Hz</td></tr> <tr> <td>HDCP input ON</td><td>HDCP output ON</td><td>HDMI audio mute OFF</td></tr> <tr> <td>Master audio mute OFF</td><td>Output timing Auto (Display's native resolution)</td><td>Power save OFF</td></tr> <tr> <td>Video OSD ON</td><td>Video selected Window 1 – Input 1 Window 2 – Input 2 Window 3 – Input 3 Window 4 – Input 4</td><td>Volume 8</td></tr> <tr> <td>Window aspect ratio Window 1-4: Normal</td><td>Window layout Quad</td><td></td></tr> </table>			Audio delay OFF	Audio input configuration Auto	Audio OSD ON	Audio selected 1	DHCP ON	Input EDID HDMI 1-4: 4Kx2K 30Hz 7.1Ch DisplayPort 5-6: 4Kx2K 60Hz VGA 7: 1920x1080 60Hz	HDCP input ON	HDCP output ON	HDMI audio mute OFF	Master audio mute OFF	Output timing Auto (Display's native resolution)	Power save OFF	Video OSD ON	Video selected Window 1 – Input 1 Window 2 – Input 2 Window 3 – Input 3 Window 4 – Input 4	Volume 8	Window aspect ratio Window 1-4: Normal	Window layout Quad	
Audio delay OFF	Audio input configuration Auto	Audio OSD ON																		
Audio selected 1	DHCP ON	Input EDID HDMI 1-4: 4Kx2K 30Hz 7.1Ch DisplayPort 5-6: 4Kx2K 60Hz VGA 7: 1920x1080 60Hz																		
HDCP input ON	HDCP output ON	HDMI audio mute OFF																		
Master audio mute OFF	Output timing Auto (Display's native resolution)	Power save OFF																		
Video OSD ON	Video selected Window 1 – Input 1 Window 2 – Input 2 Window 3 – Input 3 Window 4 – Input 4	Volume 8																		
Window aspect ratio Window 1-4: Normal	Window layout Quad																			
VGA auto adjust* *The VGA auto adjust command can also be executed by pressing and holding the input 7 switch for 3 seconds	ATM 08 VGA_AUT W	08 VGA_AUT W																		
Video OSD	ATM 09 VDO_OSD W X	09 VDO_OSD W X																		
Ex: Video OSD ON	ATM 09 VDO_OSD W 1	09 VDO_OSD W 1																		
Video OSD request	ATM 08 VDO_OSD R	08 VDO_OSD R VDO_OSD X																		
X = (0 = OFF and 1 = ON)																				
Video select	ATM 0A VDO_IPT W X Y	0A VDO_IPT W X Y																		
Ex: Window 1, input 4	ATM 0A VDO_IPT W 1 4	0A VDO_IPT W 1 4																		
X = Window (1-4) Y = Input (1-7)																				

Settings	Command	Reply
Volume	ATM 09 VOL_CRL W X	09 VOL_CRL W X
Ex: Volume set to 5	ATM 09 VOL_CRL W 5	09 VOL_CRL W 5
Ex: Volume Up	ATM 09 VOL_CRL W +	09 VOL_CRL W +
Volume request	ATM 08 VOL_CRL R	08 VOL_CRL R VOL_CRL Y
X = (0-A, + = Up or - = Down), 10 = A Y = (0-A), 10 = A Volume control for HDMI and analog audio out.		
Window aspect ratio	ATM 0A WIN_RAT W X Y	0A WIN_RAT W X Y
Ex: Window 1 set to 16:9	ATM 0A WIN_RAT W 1 3	0A WIN_RAT W 1 3
Window aspect ratio request	ATM 09 WIN_RAT R X	09 WIN_RAT R X WIN_RAT X Y
X = Window (1-4) Y = (1 = Normal, 2 = Full, 3 = 16:9 or 4 = 4:3)		
Window layout	ATM 09 SCR_LYT W X	09 SCR_LYT W X
Ex: Dual window layout	ATM 09 SCR_LYT W 2	09 SCR_LYT W 2
Window layout request	ATM 08 SCR_LYT R	08 SCR_LYT R SCR_LYT X
Window to video route request	ATM 09 VDO_IPT R Y	09 VDO_IPT R Y VDO_IPT Y Z
X = (1 = Single, 2 = Dual, 3 = Triple or 4 = Quad) Y = Window (1-4) Z = Input (1-7)		

FIRMWARE UPDATE (AUDIO AND VIDEO BOARD)

Download the MERGE.BIN file from the FSR website doc library

The DV-MFSW-74 can be updated through a USB drive as follows.

1. Copy the MERGE.BIN update file to the root directory of a blank USB drive.
2. Connect the USB drive to the USB service port on the rear of the DV-MFSW-74. If present, disconnect the Serial and Ethernet cable from its respective port.
3. Connect the HDMI output of the DV-MFSW-74 to a display.
4. Turn on the DV-MFSW-74 and wait for it to finish booting up before proceeding to the next step.
5. Press and hold Input Select 1 until, "System upgrading..." appears on the display. During this process the button indicators will blink at a steady rate.
6. The DV-MFSW-74 will reboot automatically after loading the firmware.
7. Power cycle the DV-MFSW-74 by the rear panel power switch.

The firmware version can be obtained using the "firmware version request" command.

IMPORTANT: Do not power OFF or remove the USB drive during the firmware upgrade.

SPECIFICATIONS

Supported Formats	
Input	HDMI video up to 3840x2160 30Hz and audio up to 7.1Ch DisplayPort up to 3840x2160 60Hz VGA (RGB/YPbPr) up to 1920x1200 60Hz
Output	HDMI video up to 3840x2160 30Hz and audio up to 7.1Ch Stereo analog audio Digital optical audio up to 7.1Ch
Connectors	
Input	4 x HDMI Type A 19-pin, female 2 x DisplayPort (Full Size) 20-pin, female 1 x VGA HD-15 15-pin, female 7 x Program audio inputs via captive screw terminals
Output	1 x HDMI Type A 19-pin, female 8 x Analog audio channel via captive screw terminals 1 x Digital optical
RS-232	1 x DB-9, female
LAN	1 x RJ-45
USB	1 x Type A 4-pin, female
Power	100-240ac 50/60Hz, 15W max
Physical	
Dimensions (W x H x D)	17.32" x 1.71" x 10.71" (439.7mm x 43.5mm x 272mm)
Shipping weight	8.85lbs (4.01kg)