



WB-X3-GNG

STEPS:

- 1. REMOVE ASSEMBLED MOUNTING PLATES FROM CHASSIS AS SHOWN IN FIGURE 1, SETTING PLATE AND SCREWS ASIDE.
- 2. REMOVE UPPER/LOWER GANG-UNIT END FROM CHASSIS AS SHOWN IN FIGURE 2, SETTING GANG-UNIT ENDS AND SCREWS ASIDE.
- 3. INSTALL CHASSIS INTO WALL PER INSTRUCTIONS AT THE END OF THIS DOCUMENT.
- 4. ROUTE CONDUITS TO CHASSIS, AND PULL WIRES AS REQUIRED.
- 5. GANG-UNIT END SEPARATOR IS MOVEABLE SIDE-TO-SIDE OF CENTER OF END, OR CAN BE REMOVED ALTOGETHER. AFTER DETERMINATION OF SEPARATOR, REINSTALL GANG-UNIT ENDS AS SHOWN IN FIGURE 2.
- 6. REINSTALL MOUNTING PLATES AS SHOWN IN FIGURE 1. USE SEPARATOR AS REQUIRED.
- 7. MAKE ELECTRICAL CONNECTIONS AS REQUIRED.

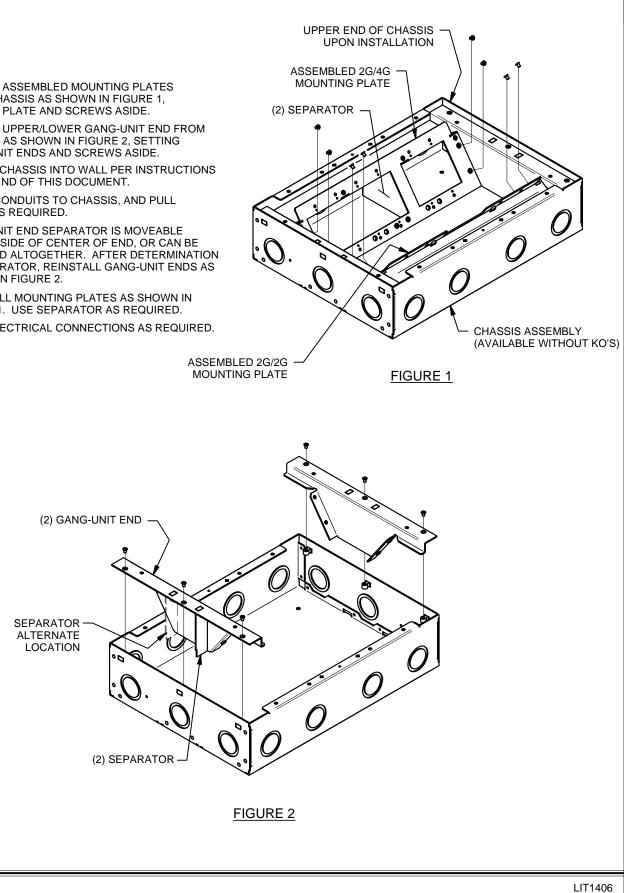


WB-X3-IPS

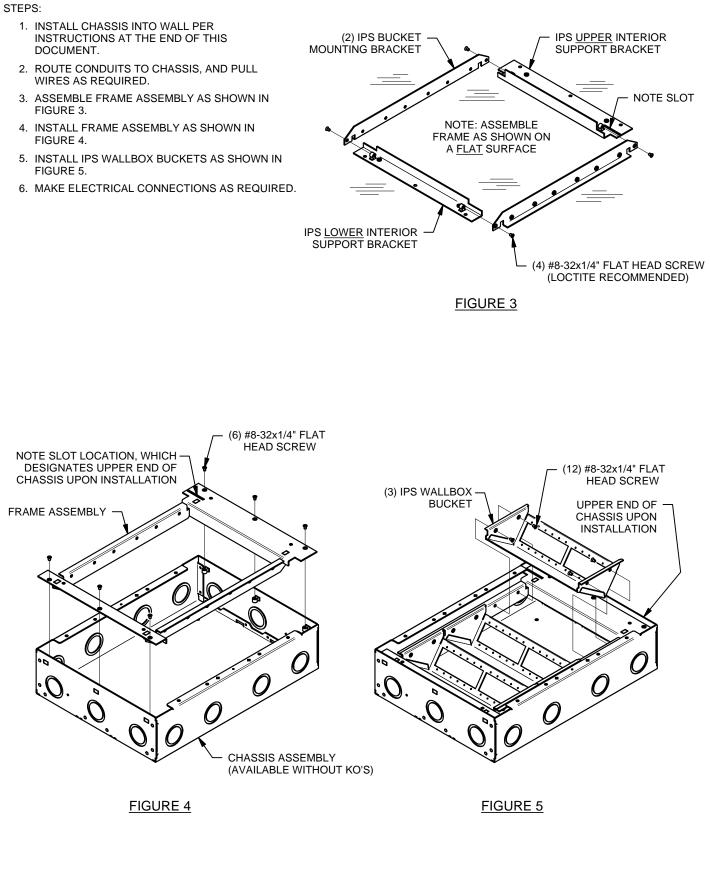

WB-X3-PLT

STEPS:

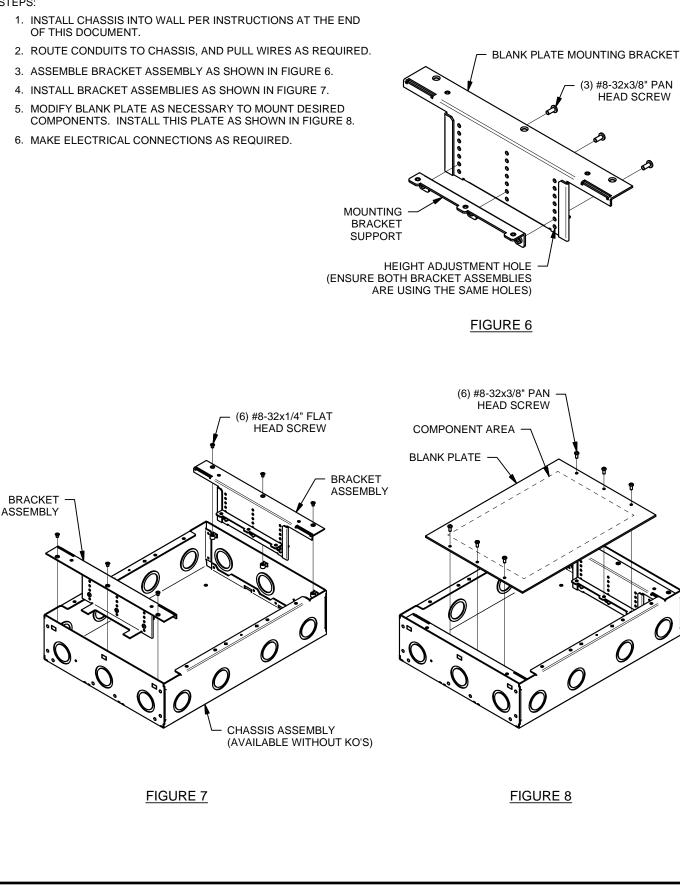

WB-X3-XLR

