


RT6-S4 INSTALLATION INSTRUCTIONS

244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207


1. DETERMINE LOCATION AND CUT 7.50 x 6.50 HOLE WITH 1/4 MAX RADIUS CORNERS IN TABLE TOP.

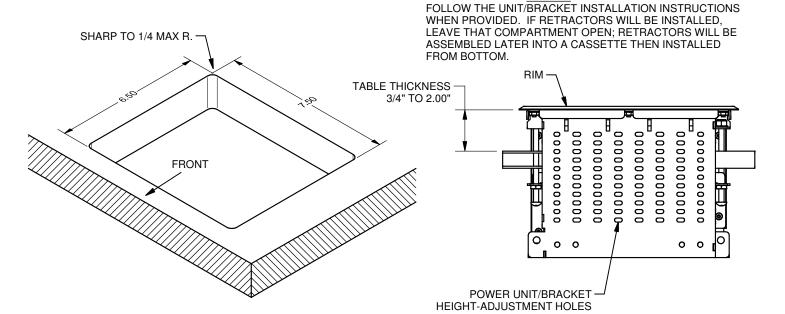

- 3. ROTATE LOCKING ARMS CLEAR OF TABLE AND INSERT RT6-S4 ASSEMBLY INTO HOLE OF TABLE.
- 4. ROTATE LOCKING ARMS TO SECURE ASSEMBLY TO TABLE WITH ADJUSTMENT SCREW. LOCK ADJUSTMENT SCREW WITH INTERGRAL NUT WHERE NEEDED. MAKE ELECTRICAL CONNECTIONS AS REQUIRED.

2. INSTALL DESIRED POWER UNITS/INTERNAL BRACKETS INTO

RT6-S4 ASSEMBLY. ADJUST HEIGHT OF UNITS/BRACKETS IN RT6-S4 ASSEMBLY BEFORE INSTALLING IN THE TABLE.

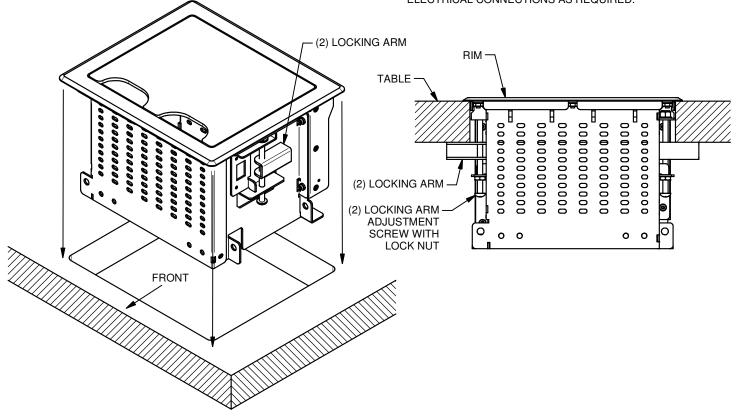

43310 LIT1618